

# POWERSHRED® 325Ci/325i THE WORLD'S **TOUGHEST** SHREDDERS™



Please read these instructions before use. Do not discard: keep for future reference.

**Fellowes** 





#### KEY

- A. SafeSense® Technology E. Casters
- B. Paper entry
- C. CD entry
- D. Door
- F. Disconnect power switch
- O 1. 0FF
- 2. ON
- G. See safety instructions
- H. Control Panel and LEDs
  - I⊲⊲ 1. Reverse **1** 6. Remove paper
  - 2. ON/OFF
- 7. SafeSense® indicator (yellow)
- ▶ 3. Forward
  - 8. Auto button
- Ô 4. Bin full 5. Door open
- 5 9. Straight feed

# **CAPABILITIES**

Will shred: Paper, credit cards, CD/DVD, staples, small paper clips and junk mail

Will not shred: Adhesive labels, continuous form paper, transparencies, newspaper, cardboard, large paper clips, folders, X-rays or plastic other than noted above

#### Paper shred size:

Cross-Cut (325Ci)	4mm x 38mm
Strip Cut (325i)	5.8mm

#### Maximum:

 
heets per pass, 80g paper (Cross-cut)	22°
heets per pass, 70g paper (Cross-cut)	
heets per pass, 80g paper (Strip-cut)	
heets per pass, 70g paper (Strip-cut)	
Ds/Cards per pass	
Paper entry width	
upor onn y want	IVIIIII

\*A4 (70g), paper at 220-240V, 50/60 Hz, 4Amps; heavier paper, humidity or other than rated voltage may reduce capacity. Maximum recommended daily usage rates: 8,000 sheets; 300 cards; 30 CDs.

Fellowes SafeSense® shredders are designed to be operated in office environments ranging between 50 - 80 degrees Fahrenheit (10 - 26 degrees Celsius) and 40 - 80% relative humidity.

 
# ▲WARNING: IMPORTANT SAFETY INSTRUCTIONS — Read Before Usina!







 




Keep foreign objects — gloves, jewelry, clothing, hair, etc. — away from









- Never use aerosol products, petroleum based lubricants or other flammable products on or near shredder. Do not use canned air on shredder.
- Do not use if damaged or defective. Do not disassemble shredder. Do not place near or over heat source or water.

- This shredder has a Disconnect Power Switch (F) that must be in the ON (I) position to operate shredder. In case of emergency, move switch to OFF (0) position. This action will stop shredder immediately.
- Avoid touching exposed cutting blades under shredder head.
- Use only designated entry for CDs/cards. Keep fingers away from CD entry.
- Do not put foreign objects in paper entry.
- Shredder must be plugged into a properly grounded wall outlet or socket of the voltage and amperage designated on the label. The grounded outlet or socket must be installed near the equipment and easily accessible. Energy converters, transformers, or extension cords should not be used with this product.
- FIRE HAZARD Do NOT shred greeting cards with sound chips or batteries.
- For indoor use only.
- Unplug shredder before cleaning or servicing.

# **BASIC SHREDDING OPERATION**



Plug in and put disconnect Press (C) ON to activate power switch in ON (I) position





Feed paper/card straight into paper entry and release



Hold CD/card at edge, and feed into center of entry and release



When finished shredding set to OFF (스)



Do nothing and shredder will go automatically to sleep mode after 2 minutes of inactivity

# ADVANCED PRODUCT FEATURES



Jam Proof System Eliminates paper jams and powers through tough jobs



Patented SafeSense® Technology Stops shredding immediately when hands touch the paper entry




**Energy Savings System** ENERGY Optimal energy efficiency 100% of the savings system time – in use and out of use.



# JAM PROOF SYSTEM OPERATION\*

Eliminates paper jams and powers through tough jobs.

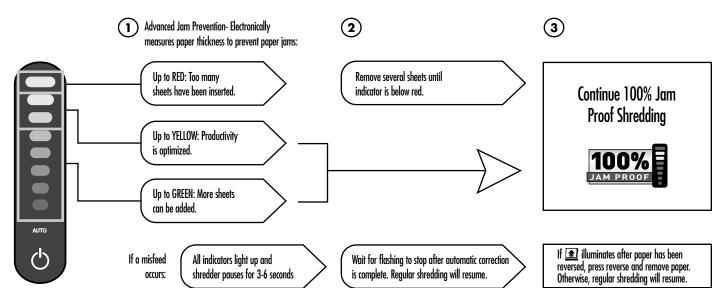

\*100% Jam Proof when used in accordance with user manual



## **SAFESENSE® TECHNOLOGY OPERATION**

Stops shredding immediately when hands touch the paper opening.

#### SET-UP AND TESTING



Turn the shredder ON ( $\circlearrowleft$ ) to activate SafeSense®



Touch test area and look for the SafeSense® indicator to illuminate



SafeSense® is active and working properly



If hand is held on SafeSense® area more than 3 seconds shredder will shut off



### **ENERGY SAVINGS SYSTEM**

Optimal energy efficiency 100% of the time - in use and out of use.

- Saves energy in four ways: energy-efficient electronics, jam prevention, standby mode and sleep mode.
- Sleep Mode shuts down shredder after 2 minutes of inactivity.

#### WHEN IN SLEEP MODE



In sleep mode



To get out of sleep mode touch control panel



insert paper

## PRODUCT MAINTENANCE

# **CLEANING AUTO-START INFRARED SENSORS**

Paper detection sensors are designed for maintenance free operation. However, on rare occasions, the sensors may become blocked by paper dust causing the motor to run even if there is no paper present.

(Note: two paper detection sensors are located in the center of the paper entry).

#### TO CLEAN THE SENSORS



Turn off and unplug shredder



Locate Auto-start infrared sensor



Dip cotton swab in rubbing alcohol



Using cotton swab, wipe away any contamination from the paper sensors

# OILING SHREDDER 🚄



All cross-cut shredders require oil for peak performance. If not oiled, a machine may experience diminished sheet capacity, intrusive noise when shredding and could ultimately stop running. To avoid these problems, we recommend you oil your shredder each time you empty your waste bin.

#### FOLLOW OILING PROCEDURE BELOW AND REPEAT TWICE





\*Apply oil across entry

Press and hold forward (▶) 2-3 seconds

ACAUTION \*Only use a non-aerosol vegetable oil in long nozzle container such as Fellowes 35250



# **TROUBLESHOOTING**



Bin Full Indicator: When illuminated, the shredder waste bin is full and needs to be emptied. Use Fellowes waste bag 36056.



SafeSense® Indicator: If hands are too close to the paper entry, the SafeSense® indicator will illuminate and the shredder will stop shredding. If SafeSense® is active for 3 seconds, the shredder will automatically turn off and the user must press the power button on the control panel to resume shredding.



Remove Paper Indicator: When illuminated, press reverse (ISA) and remove paper. Reduce paper quantity to an acceptable amount and refeed into paper entry.



Door Open Indicator: The shredder will not run if the cabinet door is open. When illuminated, close the door to resume shredding.



Straight Feed Indicator: When illuminated, remove paper and feed straight into paper entry.

Go to Support Section at www.fellowes.com or see back page of manual for useful telephone numbers.

# **LIMITED PRODUCT WARRANTY**

Limited Warranty: Fellowes, Inc. ("Fellowes") warrants the parts of the machine to be free of defects in material and workmanship and provides service and support for 2 years from the date of purchase by the original consumer. Fellowes warrants the cutting blades of the machine to be free from defects in material and workmanship for 20 years from the date of purchase by the original consumer. If any part is found to be defective during the warranty period, your sole and exclusive remedy will be repair or replacement, at Fellowes' option and expense, of the defective part. This warranty does not apply in cases of abuse, mishandling, failure to comply with product usage standards, shredder operation using an improper power supply (other than listed on the label), or unauthorized repair. Fellowes reserves the right to charge the consumers for any

additional costs incurred by Fellowes to provide parts or services outside of the country where the shredder is initially sold by an authorized reseller. ANY IMPLIED WARRANTY, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED IN DURATION TO THE APPROPRIATE WARRANTY PERIOD SET FORTH ABOVE. In no event shall Fellowes be liable for any consequential or incidental damages attributable to this product. This warranty gives you specific legal rights. The duration, terms, and conditions of this warranty are valid worldwide, except where different limitations, restrictions, or conditions may be required by local law. For more details or to obtain service under this warranty, please contact us or your dealer.

#### Australia Residents Only:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits under Fellowes' Warranty are in addition to other rights and remedies under a law in relation to the shredder.



# POWERSHRED® 325Ci/325i THE WORLD'S TOUGHEST SHREDDERS™

#### **Declaration of Conformity**

#### **Fellowes Manufacturing Company**

Yorkshire Way, West Moor Park, Doncaster, South Yorkshire, DN3 3FB, England declares that the product Models 325Ci and 325i conform with the requirements of the Restriction of Hazardous Substances Directive [2011/65/EC], the Low Voltage Directive [2006/95/EC], the Electromagnetic Compatibility Directive [2004/108/EC], the WEEE directive [2012/19/EU], and below harmonized European EN Standards.

Safety: EN 60950-1(2nd edition)

EMC Standard: EN55014-1 EN55014-2 EN61000-3-2 EN61000-3-3

Year Affixed: 14

Itasca, Illinois, USA July 1, 2014 James Fellowes

#### W.E.E.E.

This product is classified as Electronic Equipment. Should the time come for you to dispose of this product please ensure that you do so in accordance with the European Waste of Electrical and Electronic Equipment (WEEE) Directive and in compliance with local laws relating to this directive.

For more information on the WEEE Directive please visit www.fellowesinternational.com/WEEE

# **Questions or Concerns?**

www.fellowes.com	Customer Service & Support
Troubleshooting	Troubleshooting
Registration	Replacement parts
Manuals	General questions

Australia +61-1-800-33-11-77

Europe 00-800-1810-1810

United Kingdom +44-(0)-1302-836800

United States +1-800-955-0959



1789 Norwood Avenue, Itasca, Illinois 60143-1095 • USA • 630-893-1600