



HOW TO REMOVE THE ROLL FILM

⚠ Please DO NOT grab this bar

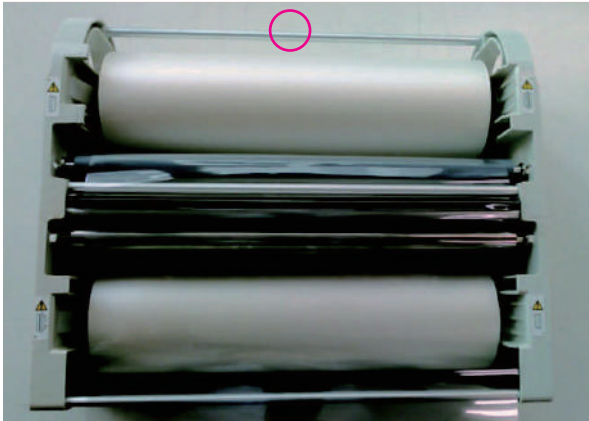


When the roll film is set

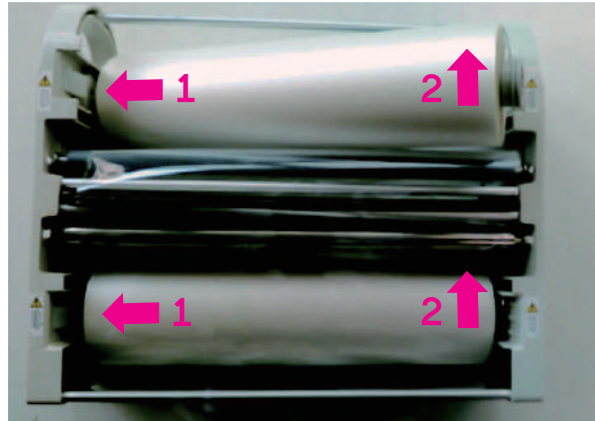


- 1) Push the film to the direction 1
- 2) Raise the film to the direction 2 (front)


FILM SETTING

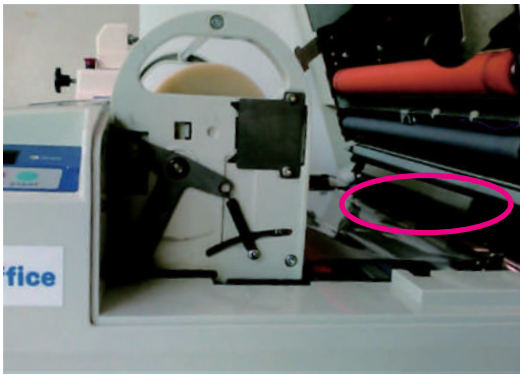

Pull out the film to the output part.

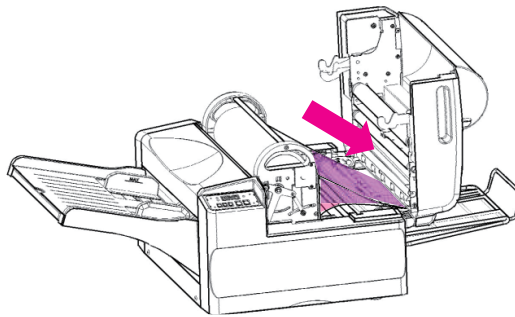


Close the cover, and pull out the film for about 30cm.

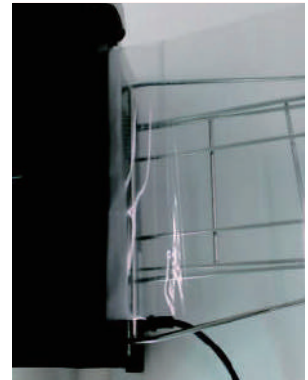


PAPER SETTING

Paper Position

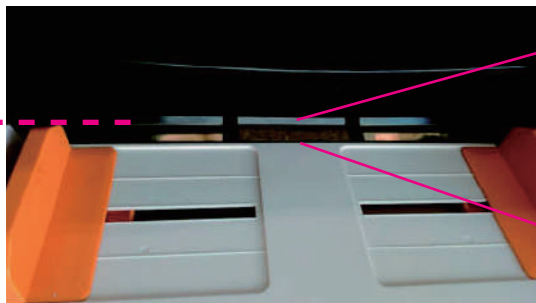

Larger View

Paper Position

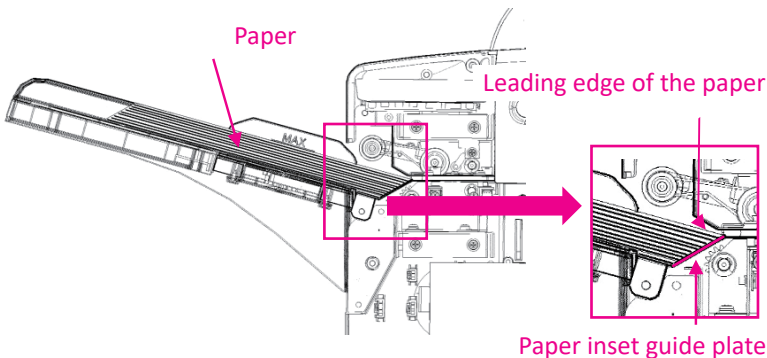

Load paper until the dotted line

- Paper jam will be likely to occur when paper is set further than the dotted line.
- Paper won't be feeded (shows error display "A") when paper is set in front of the dotted line.