

## WHEN PAPER IS RUN OUT

When the laminating process is finished and the paper is run out on the feeding tray, the display will show "A", and the roller drive will automatically stop.



💡 "A" will be shown on the display when laminating process completed normally (when paper is run out).


💡 To restart the laminating process, load the paper on the tray and press **start**.

## WHEN MACHINE DOESN'T START LAMINATING

When the laminating process doesn't start even the start button is pressed, the temperature is not enough raised. Please check the display on the operation panel.

💡 When **READY** lamp is blinking, please wait until it is lit.

## SLEEP MODE

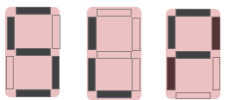

💡 When not used for more than 30 minutes, the machine will enter into sleep mode and "SLP" will be shown on the display.

The temperature of the laminating roller will be controlled to keep 65 degrees.


To cancel the sleep mode, press start.

The machine will start working when the temperature is risen to the set value.

## WHEN FINISHED

**Please release the roller pressure** when laminating is completed and turning the power OFF.  
(To prevent the damage of the roller & deterioration of lamination quality.)

To release the pressure of the laminating roller, shift the pressure lever to the OFF direction. The 2 levers on both sides should be shifted.

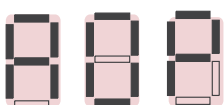

"AOP" will be shown on the display when power is on again.

This will be displayed when the pressure lever is released (OFF).

Please shift the lever to ON and start laminating process.

