


Fellowes

High-Performance Office Laminator

Voyager (A3)

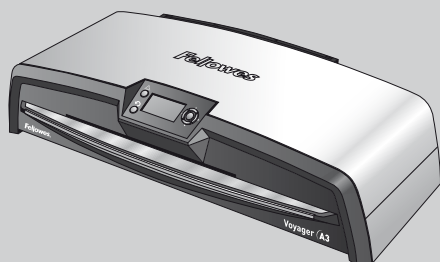

GB Please read these instructions before use.

F Lire ces instructions avant utilisation.

E Lea estas instrucciones antes del uso.

D Diese Anleitungen vor Gebrauch genau durchlesen.

I Primo dell'uso, si raccomanda di leggere questo manuale di istruzioni.

NL Dese instructies voor gebruik lezen.

S Läs dessa anvisningar innan du använder apparaten.


DK Læs venligst denne vejledning før anvendelse.

FIN Lue nämä ohjeet ennen käyttöä.

N Vennligst les nøye igjennom denne bruksanvisningen før bruk.

P Leia estas instruções antes da utilização.


VOYAGER LAMINATOR

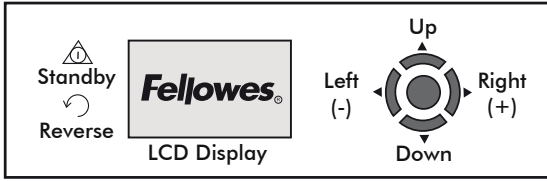


AutoLam - Automatic Lamination



 Manual Lamination




LAMINATOR CONTROLS

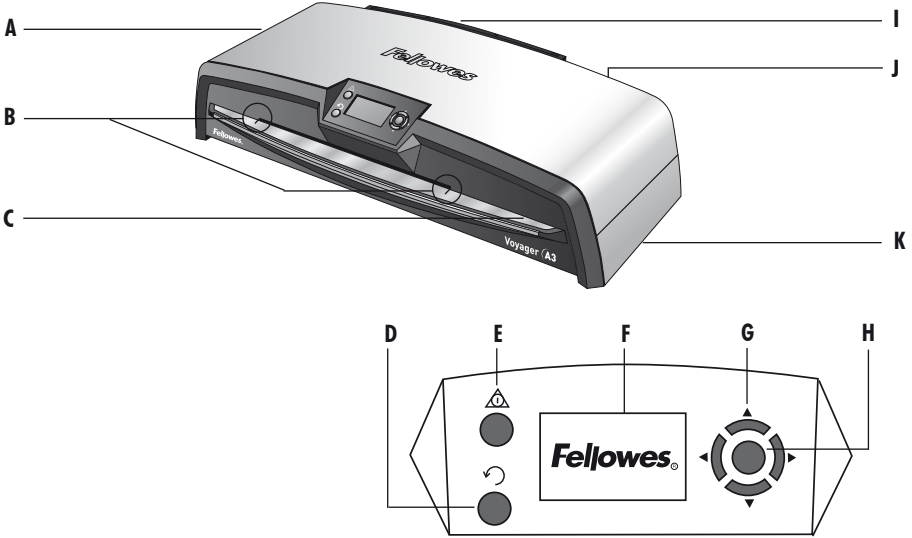


QUICK START GUIDE

SETTING UP THE LAMINATOR

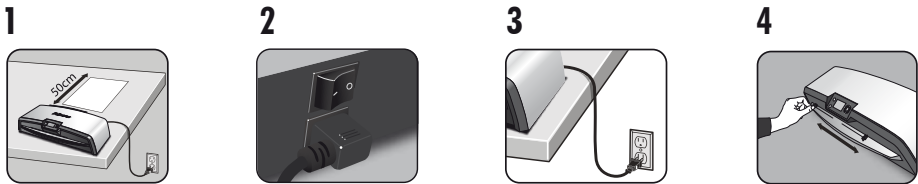

STEPS TO LAMINATE - AutoLam

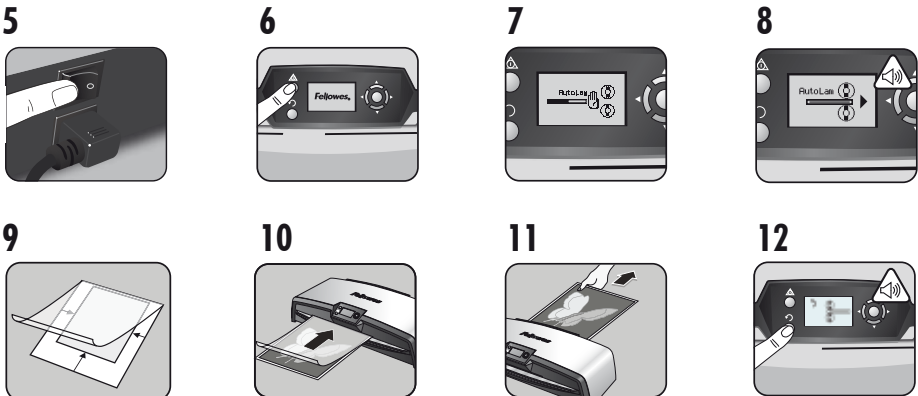

CAPABILITIES

Performance

Format	A3
Entry width	325mm
Estimated heat-up time	4 minutes
Cool down time	30-60 minutes
Lamination speed	variable - max. 90cm/min
Laminating mechanism	Belt-drive
Ready indication	Light & beep
AutoLam laminating	Yes
Easi-Access open mechanism	Yes
Auto Reverse function	Yes
Overload protection	Yes
CleanMe glue sensor	Yes
HeatGuard ™ technology	Yes
Manual override of auto-functions	Yes
Clear Path / Anti-jam engine	Yes

Auto shut-off	Yes (30 mins)
Photo-capable	Yes
Carrier-free	Yes

Technical Data

Voltage / Frequency / Current(Amps)	220-240V AC, 50/60Hz, 4.35A
Wattage	1000 Watts
Dimensions (WxDxH)	634 x 215 x 159mm
Net weight	8.5 kg
Laminating capacity (max thickness)	1mm
Min pouch thickness (total thickness = 2 x 75 = 150 micron)	75 micron
Max pouch thickness (total thickness = 2 x 250 = 500 micron)	250 micron

IMPORTANT SAFETY INSTRUCTIONS



CAUTION: Please read before use and keep for future reference.

When laminating;

- plug the machine into an easily accessible mains socket.
- to prevent electrical shock - do not use the appliance close to water, do not spill water on to the appliance, power cord or mains socket.

DO ensure the machine is on a stable surface.

DO test laminate scrap sheets before final laminations.

DO remove staples and other metal articles prior to laminating.

DO keep the machine away from heat and water sources.

DO turn off the machine after each use.

DO unplug the machine when not in use for an extended period.

DO use pouches designed for use at the appropriate settings.

DO keep away from pets, while in use.

DO only use Fellowes Roller Wipes (item #57037) for internal cleaning.

DO NOT use appliance if the power cord is damaged.

DO NOT attempt to open or otherwise repair the machine beyond the Easi-Access functions.

DO NOT exceed the machines quoted performance.

DO NOT allow minors to use this machine.

DO NOT laminate sharp or metal objects (eg: staples, paper clips).



DO NOT laminate heat-sensitive documents (eg: tickets, ultrasounds etc).

DO NOT laminate with self-adhesive pouches (which require a cold setting).

DO NOT laminate an empty pouch.

DO NOT use sharp objects to clean laminator.

LAMINATOR CONTROLS

A	Easi-Access opening cover	G	Selection buttons (up/down/left/right)
B	Adjustable document entry guide	H	Select / OK button
C	Entry support shelf	I	Detachable document exit tray
D	Reverse button 	J	On/off switch (at rear)
E	Standby button 	K	Carry points (at sides)
F	LCD user interface		

FEATURES & TIPS

FEATURES



AutoLam laminating

Automatically senses the thickness of inserted pouch and document and makes real-time adjustments to always work under optimum laminating conditions. The laminator defaults to 'AutoLam' setting if no other function is selected within 5 seconds of switching it on.



The Auto shut-down switches the machine off if it hasn't been used for 30mins to save energy. To return to the "Home" Menu at any stage, press the "Left/back" key on the navigation buttons.



Easi-Access open mechanism

The Easi-Access mechanism allows to safely and easily open the laminator for cleaning and maintenance.



Auto Reverse function / overload protection

To eject the laminating pouch during use in case of misfeeds or overloads. Reverses laminating process until the pouch has been ejected from the machine.



CleanMe glue sensor

Checks if glue or dirt is on the mechanism and guides the user to clean the laminator.



HeatGuard™ technology

Keeps the laminator surface up to 50% cooler and makes it more energy efficient than comparable laminators.

TIPS

- Always put item into the appropriate sized pouch.
- Always test laminate with a similar size and thickness before final process.
- If required, trim excess material from around the item after lamination and cooling.
- For best results, use Fellowes® brand laminating pouches: Enhance 80, Impress 100, Capture 125, Protect 175, Preserve 250
- When working with different pouch thickness' (temperature settings) it is recommended to start first with the thinnest pouches.
- Prepare pouch and item for lamination. Place item within pouch centred and touching the leading sealed edge. Ensure the pouch is not too large for the item.
- Please read these instructions before use.

SETTING UP THE LAMINATOR

1. Ensure the machine is on a stable surface. Check there is enough clear space (min 50cm) behind the machine to allow items to pass through freely.
2. Select the correct power lead for the appropriate power supply. Fit the lead to the machine (the socket is at the rear of the machine).
3. Plug the machine into an easily accessible mains socket. Switch the mains supply on.
4. To fully support pouches and items of different sizes please use the adjustable entry guide to centre the item before laminating.

STEPS TO LAMINATE - AutoLam

5. Switch the power on (Power switch located at the rear of the machine).
6. Select the 'Standby' button on the control panel. Check the LCD Screen turns on. The LCD interface allows selection of these functions:
 - AutoLam - automatic laminating
 - Manual laminating
 - Open for maintenance
 - Help information
7. The laminator will automatically start in AutoLam mode and begin warm-up if no other setting is selected within 5 seconds.
8. The 'Ready' screen will show when warm-up is complete and two short beeps indicate that machine is ready and user can insert pouch. The AutoLam setting automatically selects the optimum laminating settings for the inserted item and pouch for best laminating results.
9. Place item into open pouch. Ensure it is centred against the sealed edge. Use the appropriate pouch size for the item.
10. Place the pouch, sealed edge first, into the pouch / document entry. Keep the pouch straight and central within the document entry, not on an angle. Use the entry markings as a guide.
11. Upon exit, the laminated pouch is hot and soft. Remove the pouch immediately. Place pouch onto a flat surface to cool. This helps to prevent any jamming.
12. To reverse the laminating process at any stage, press the 'Reverse' button to eject the item. The laminator will beep whilst reversing.

NEED HELP?



Let our experts help you with a solution.


Customer Service: www.fellowes.com

Help Line Europe: 00-800-1810-1810

STEPS TO LAMINATE - MANUAL OPERATION



Set up laminator as above. On start menu, select "Manual" operation within 5 seconds of switching machine on.

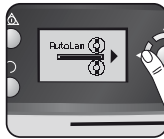

To return to the "Home" Menu at any stage, press the "Left/back" key on the navigation buttons.



Select pouch thickness with navigation buttons as required. Confirm selection with "OK" button.



The warm-up screen will show until operating temperature is reached.



The 'Ready' screen will show when warm-up is complete and two short beeps indicate that machine is ready and user can insert pouch.



Place the pouch, sealed edge first, into the pouch / document entry. Keep the pouch straight and central within the document entry, not on an angle. Use the entry markings as a guide.



Upon exit, the laminated pouch is hot and soft. Remove the pouch immediately. Place pouch onto a flat surface to cool. This helps prevent any jamming.

MAINTENANCE - Easi-Access


The Voyager laminator can be manually opened via the LCD user interface. Please note that the power supply needs to be **ON** and the laminator needs to be **SWITCHED ON** to open.



Select 'Open' in the start-up menu using the navigating buttons and confirm the selection with the 'OK' button.




The machine might need to cool down if it has already been laminating, this can take up to 30 minutes.

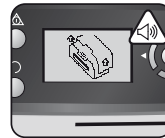


The "open" LCD screen will show and a beep will sound when the laminator is ready to be opened.




Now move the lever on each side of the machine backwards to open the top cover.

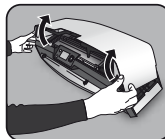


Open the cover with both hands. When the laminator is opened, power to internal parts is isolated so that the user is not in danger of electric shock.

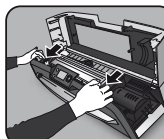

For further maintenance, the internal mechanism can be released by experienced users. Pull the cam levers forward to release the mechanism and lift it up.

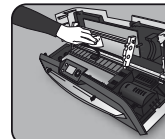

To clean residue off the laminator mechanism, please only use Fellowes Laminator wipes (item No # 57037). Do not use sharp objects to clean laminator.

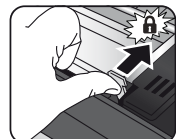

Please remember to re-secure the mechanism with the cam levers again before closing the cover.

CleanMe SYSTEM CHECK

The CleanMe system check warns the user if glue or dirt has built up inside the laminator. Glue can build up inside every laminator, especially when low-cost laminating pouches are used. We recommend using Fellowes brand pouches to reduce the amount of cleaning required and to get the best laminating quality.


The LCD screen will show the CleanMe sequence to guide you through the steps of the Cleaning process.



1. Warning sequence above shows that laminator needs cleaning. Machine might need to cool down if it has been laminating before. This can take up to 30 minutes.
2. Open the laminator as described in "Maintenance" on previous page.
3. To clean residue off laminator mechanism, please only use Fellowes Laminator wipes (item No # 57037). Do not use sharp objects to clean laminator.
4. Please remember to re-secure the mechanism again before closing cover to ensure safe operation.

HELP FUNCTION

The Help function displays in a simple pictorial sequence how to laminate with the Voyager laminator. For further help please consult 'Troubleshooting' at the end of this user manual or contact Fellowes customer service.

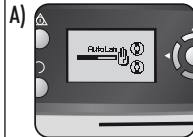

To see how to laminate with the Voyager laminator select 'Help' in start-up menu with navigating buttons and confirm selection with OK (within 5 sec. of turning laminator on).

LCD screen will show simple pictorial sequence of how to laminate with the Voyager laminator in the 3 operation modes in this sequence:

- A) AutoLam mode
- B) Manual mode
- C) Refer to this user manual for further information


AUTO REVERSE AND OVERLOAD PROTECTION

An internal sensor automatically identifies mis-feeds, items that are too thick or jams and reverses machine so items can be taken out again. This screen sequence shows that inserted item was too thick for laminator.



Item will be ejected out of the front of the laminator again to prevent jams and damage to item and laminator.

ADJUSTABLE ENTRY GUIDE

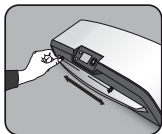


The Entry Guide can be manually adjusted (especially for smaller documents) to ensure the items are best supported when inserted and helps avoid mis-feeds.

INTEGRATED CARRY POINTS



The Voyager laminator has integrated carry points for safe and easy movement of the laminator – push in the flaps on both ends of the laminator to get to them.

SERVICE

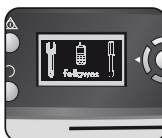

If the service symbol shows in the LCD screen, please call your service engineer or Fellowes customer service.

Customer Service: www.fellowes.com

Help Line Europe: 00-800-1810-1810 UK: +44-(0)-1302-836836

WORLDWIDE WARRANTY


Fellowes warrants all parts of the laminator to be free of defects in material and workmanship for 2 years from the date of purchase by the original consumer. If any part is found to be defective during warranty period, your sole and exclusive remedy will be repair or replacement, at Fellowes' option and expense, of the defective part. This warranty does not apply in cases of abuse, mishandling or unauthorised repair. Any implied warranty, including that of merchantability or fitness for particular purpose, is hereby limited in duration to the appropriate warranty period set forth above. In no event shall Fellowes be liable for any consequential damages attributable to this product. This warranty gives you specific legal rights. You may have other legal rights that vary from this warranty. The duration, terms and conditions of this warranty are valid worldwide, except where different limitations, restrictions or conditions may be required by local law. For more details or to obtain services under this warranty, please contact Fellowes or your dealer.

PRODUCT REGISTRATION


Thank you for purchasing a Fellowes product. Please visit www.fellowes.com/register to register your product and benefit from product news, feedback and offers. Product details can be found listed on the rating plate positioned on the rear side or underside of the machine.

FUNCTION OVERVIEW


Open - Easi-Access function

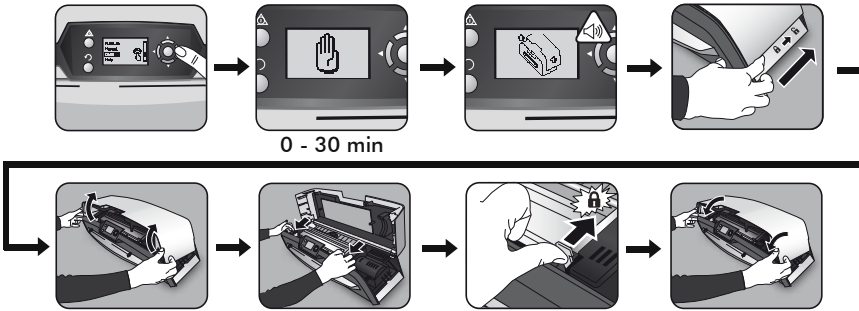


CleanMe - Maintenance

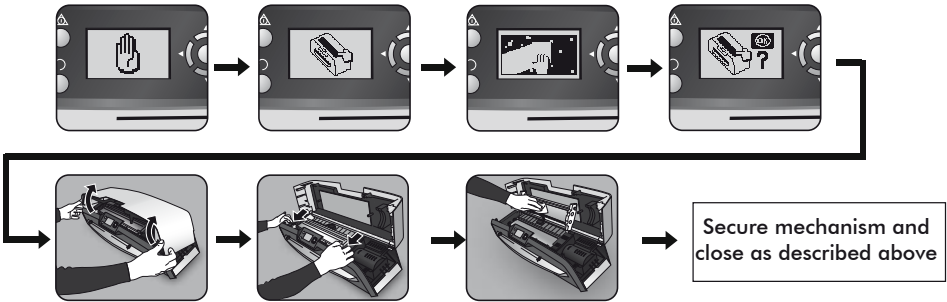

Overload protection - Auto Reverse

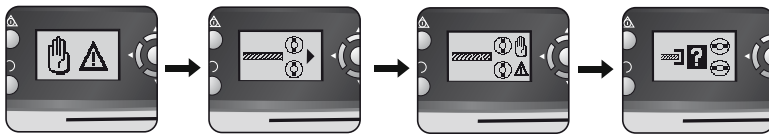

Help - Information display

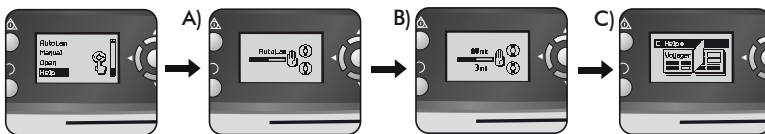

TROUBLESHOOTING

Problem	Possible cause	Solution
No symbols showing in LCD screen	Machine is not switched on	Switch on machine at rear next to plug inlet and at the wall socket, then press standby button to left of LCD screen
Ready screen does not come on after a long period	Machine is in a hot or humid area	Move the machine to a cooler and dry area
Pouch does not completely seal the item	Item may be too thick to laminate	Pass through the machine again
	Temperature setting may be incorrect (manual operation)	Use AutoLam setting or check pouch thickness is correctly selected and pass through again
Item comes out the front of laminator again	Item too thick to laminate	Choose thinner pouch (80mic) and try again. Photocopy item and laminate the copy
Machine speed and noise varies during lamination	Items of different thickness laminated	No problem – automatic AutoLam adjustment to guarantee optimum laminating conditions for varying items
Symbols on LCD screen not clear		Please refer to sections above or flow diagram on previous page
How to stop machine when laminating?	Machine is laminating	Press "Reverse" [↻] to exit pouch or "Left" [◀] to return to "home" menu screen
Pouch is lost in the machine	Pouch is jammed	Select reverse button and pull out the item by hand or open laminator manually via the LCD and follow steps described in CleanMe
Jamming	Pouch was used 'open end' first	
	Pouch was not centred on entry	
	Pouch was not straight upon entry	
	Empty pouch was used	
Pouch is damaged after lamination	Damaged rollers or adhesive on rollers	Open laminator manually via the LCD and follow steps described in CleanMe

STORAGE & EXTERNAL CLEANING

Switch off the machine at the wall. Allow the machine to cool.

The outside of the machine can be cleaned with a damp cloth. Do not use solvents or flammable materials to polish the machine.

Cleaning sheets can be used with the machine. When the machine is warm – run the sheets through the machine to clean any residue off the rollers. For advanced Cleaning of the inside of the laminator, please see the section on the CleanMe function above. Use Fellowes Laminator wipes (#57037) only for the internal cleaning. For optimum performance, it is recommended that cleaning sheets (#53206 / #53207) are used with the machine regularly.

W.E.E.E.



This product is classified as Electrical and Electronic Equipment. Should the time come for you to dispose of this product please ensure that you do so in accordance with the European Waste of Electrical and Electronic Equipment (WEEE) Directive and in compliance with local laws relating to this directive.

For more information on the WEEE Directive please visit www.fellowesinternational.com/WEEE



Declaration of Conformity Useful Phone Numbers

Declaration of Conformity

Fellowes Manufacturing Company

Yorkshire Way, West Moor Park, Doncaster, South Yorkshire, DN3 3FB, England declares that the model Voyager A3 conforms with the requirements of (RoHS) the Restriction of Hazardous Substances Directive 89/336/EEC. The Low Voltage Directive 72/73/EEC as amended by directive 92/68/EEC. The Electromagnetic Compatibility Directive 89/336/EEC as amended by directive 92/31/EEC & 96/68/EEC and the following Harmonised European Normes EN standards and IEC standards.

Information Technology Product: EN-60950-1 2001 / IEC-60950-1 2001

EMC: EN-55014-1 / A2 : 2002 EN-55014-2 / A1 : 2001 EN-61000-3-2 : 2000 EN-61000-3-3 / A1 : 2001

Itasca, Illinois, USA
March 2009


James Fellowes

Help Line

Europe 00-800-1810-1810

Fellowes

Australia	+61-3-8336-9700
Benelux	+31-(0)-76-523-2090
Canada	+1-905-475-6320
Deutschland	+49-(0)-5131-49770
España / Portugal	+ 34 902 33 55 69
France	+33-(0)-1-30-6-86-80
Italia	+39-71-730041

Japan	+81-(0)-3-5496-2401
Korea	+82-(0)-2-3462-2844
Malaysia	+60-(0)-35122-1231
Polska	+48-(22)-771-47-40
Russia	+7-(495)-228-14-03
Singapore	+65-6221-3811
United Kingdom	+44-(0)-1302-836836
United States	+1-630-893-1600



1789 Norwood Avenue, Itasca, Illinois 60143-1095 • USA • 630-893-1600

fellowes.com

Australia Canada Deutschland France Japan Polska United Kingdom
Benelux China España Italia Korea Singapore United States

RESOLUÇÃO DE PROBLEMAS

Problema	Causa possível	Solução
O ecrã LCD não mostra nenhum símbolo	O aparelho não se encontra ligado	Ligue o aparelho na traseira, junto à tomada da ficha, e na tomada de parede, depois prima o botão "standby" existente à esquerda do ecrã LCD
O ecrã "Ready" (Pronto) não acende ao fim de um longo período	O aparelho encontra-se em local quente ou húmido	Coloque o aparelho num local mais fresco e seco
A bolsa não veda totalmente o artigo	O artigo pode ser demasiadamente espesso para laminar	Passo novamente pelo aparelho
	A definição da temperatura pode estar incorrecta (operação manual)	Utilize a definição AutoLam ou verifique se a espessura da bolsa está correctamente seleccionada e passe novamente
O artigo sai novamente pela frente do laminador	Artigo demasiado espesso para laminar	Escolha uma folha mais fina (80 mic.) e tente novamente. Faça uma fotocópia do artigo e lamine a cópia
A rotação e o ruído do aparelho variam durante a laminação	Artigos de espessuras diferentes laminados	Nenhum problema – ajuste AutoLam automático para garantir condições de laminação óptimas para artigos diferentes
Símbolos no ecrã LCD sem nitidez		Consulte as secções acima ou o fluxograma da página anterior
Como parar o aparelho durante a laminação?	O aparelho está a laminar	Prima "Reverse" (Inverter) [↶] para retirar a bolsa ou "Left" (Esquerda) [◀] para regressar ao ecrã do menu "home"
A bolsa perdeu-se no aparelho	A bolsa está encravada	Selecione o botão de inversão e puxe o artigo para fora ou abra o laminador manualmente através do LCD e cumpra os passos descritos em CleanMe
Encravamento	A bolsa foi utilizada com a extremidade aberta inserida em primeiro lugar	
	A bolsa não estava centrada ao entrar	
	A bolsa não estava alinhada ao entrar	
	Foi utilizada uma bolsa vazia	
A bolsa está danificada após a laminação	Roletos danificados ou adesivo nos roletos	Abra o laminador manualmente através do LCD e siga os passos descritos em CleanMe

ARMAZENAMENTO E LIMPEZA EXTERIOR

Retire a ficha do aparelho da tomada de parede. Deixe o aparelho arrefecer.

O exterior do aparelho pode ser limpo com um pano húmido. Não utilize dissolventes nem materiais inflamáveis para polimento da máquina.

É possível utilizar folhas de limpeza no aparelho. Quando a máquina estiver quente – passe as folhas de limpeza na máquina para eliminar quaisquer resíduos dos roletos. Para uma limpeza avançada do interior do laminador, consulte a secção referente à função CleanMe acima. Utilize apenas toalhotes de laminador Fellowes (Nº 57037) para proceder à limpeza do interior. Para um óptimo desempenho, recomenda-se a utilização regular de folhas de limpeza (Nº 53206 / Nº 53207).

R.E.E.E.



Este equipamento está classificado como Equipamento Eléctrico e Electrónico. Caso seja necessário eliminar este equipamento, certifique-se de que procede em conformidade com a Directiva Europeia relativa a Equipamento Eléctrico e Electrónico (REEE) e de acordo com a legislação local relativa a esta directiva.

Para mais informações sobre a Directiva REEE, visite www.fellowesinternational.com/WEEE