


Technical Specification

Product fiche

Trademark	Sharp	
Model ID	LC-60UI7652K	LC-70UI7652K
Energy efficiency class	A	A
Visible screen size (diagonal)	153 cm / 60 inches	177 cm / 70 inches
On-mode power consumption	130.0 W	155.0 W
Annual energy consumption *1	190 kWh	226 kWh
Standby power consumption *2	<0.50 W	<0.50 W
Off mode power consumption	n/a	n/a
Screen resolution	3840 (H) x 2160 (V)	3840 (H) x 2160 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.		
*2: When the TV is turned off with the remote control/standby button and no function is active.		

Additional Technical Information

	LC-60UI7652K	LC-70UI7652K
RF	75 ohm Antenna / Analog / DVB / Satellite	
Inputs	3 x HDMI2.0, 3 x USB, 1 x SD card reader, 1 x RJ45 LAN/Ethernet, 1 x Composite/CVBS Video & Component YPbPr Input, 1 x L/R Audio Input for Composite/CVBS & Component YPbPr	
Sound Outputs	1 x Digital Optical Audio output, 1 x 3.5mm Headphone	
Speaker*/ Amplifier Watts (RMS)	2 x 10+ 15W Subwoofer / 2 x 8 + 15W Subwoofer	
Voltage and power consumption	AC 220V ~ 240V; 50Hz 130/180/210W (home mode/standard/ max) (<0.5W in Standby)	AC 220V ~ 240V; 50Hz 155/195/225W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	1358W x 840H x 280D	1564W x 967H x 326D
Net weight (Kgs)	18.3	28.0
Wall Mounting	VESA 200 x 200 (mm)	
	VESA 400 x 200 (mm)	

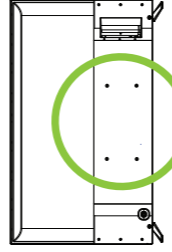

Location of VESA mounting points



If wall mounting your television, please refer to the Operating Instructions.

*Built-in **Harman Kardon** speaker systems (Full-range speaker and tweeter).

harman / kardon

Harman Kardon is trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.


This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or Windows DRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Microsoft PlayReady™

Please save your box/backpacking as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/backpacking.

1. Plug
2. Accessories pack

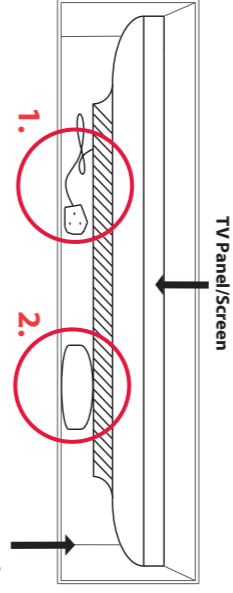

- 1) Remove the stand/feet from the TV.
- 2) Put all of the accessories that came with the TV in the box ensuring they are placed at the back of the TV (not near the screen/panel side) Note: In the event of warranty/service support, you do not need to send the accessories/stand/feet.
- 3) Ensure the power cable / plug is located at the back of the TV (not on the screen/panel side)
- 4) Never put anything in the box on the screen/panel side of the TV as it's likely to damage it.

The best way to package it is in the original box.

Please take the following steps:

Re-packing the Television

To launch the Online Manual, press the [MENU] button and then select Settings>About TV>Help Information>View Online Manual.

Online Manual

If you need help setting up your TV or you require any technical support, in the first instance please contact the helpline.

In the unlikely event you need to return the product to the store/retailer from where it was purchased or you need warranty/service support, please ensure you package the item adequately in order that it does not get damaged.

SHARP

Quick Start Set Up Guide

For information on using the TV's features, please refer to the Operating Instructions. (Available online to download.)

Model Numbers

LC-60UI7652K

LC-70UI7652K

Win a

SHARP
Soundbar

Terms and conditions apply. Online registration only.



Register your manufacturer's guarantee online within 14 days of purchase at www.registertoday.co.uk/sharp and enter into a prize draw to

Quick & easy guide for setting up your TV

What is included in the box

Using the remote control

Setting up the TV for the first time - including attaching the stand

Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*

Telephone UK 0330 024 0803 or ROI 01443 3323

Online support at: www.umc-uk.co.uk

Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider.

Calls to the ROI number are charged at the local call rate.

The telephone opening hours are Monday to Friday 8.30am to 6pm, Saturday 9am – 5pm.

Bank Holidays - 10am to 4pm

Closed Christmas and New Years day



1800/00/SQW/0303

Sky Remote Code



If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134. If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.



1 For models with integrated DVD players.
For models with PVR Function.
For models with USB Playback.
For models with 3D functions.

2 STANDBY - Switch on the TV when in standby or vice versa.
MUTE - Mute the sound or vice versa.

3 NUMBER BUTTONS - 0-9 to select a TV channel directly.
TV GUIDE - Opens the 7 day TV guide (digital TV mode).
C - To return to the previous channel viewed.

4 VOL (+/-) - To increase/decrease the sound level.
PICTURE - Scrolls through picture mode options.
SOUND - Scrolls through sound mode options.
SOURCE - To display the input/source menu.
CH (+/-) - To increase or decrease the channel being watched.
MENU - To display OSD menu.
EXIT - To exit all menus.
(+/-) / (I/ON) - Allows you to navigate the on-screen menus and adjust the system settings to your preference.
BACK - To go back a previous step.
FAV - To display favourites menu.

1 INFO - Press once for now/next channel information.
- Press twice for information about the current programme.

TEXT - To enter/exit Text.
SUBTITLE - To switch the dialogue at the bottom of the screen (on/off).
TV - To switch to Digital Channels.
YOUTUBE - Access the Youtube App.
NETFLIX - Access the Netflix App.
APPS - Access the APPS menu.
RECORD - Access the USB record function.
REC LIST - Opens the list of previously recorded items.

⏪ - To restart the current chapter
⏩ - To advance forward to the next chapter
⏹ - To stop the playback/Eject Disc
(To EJECT the disc press/hold the button for 4 seconds)
⏮ - To play in fast rewind mode
⏭ - To play in fast forward mode
⏸ - To play/pause

⏴ - To go to a specific chapter.
A-B - Press once to set point, press a second time to return to point.
ANGLE/3D - Select different angle of DVD.
REPEAT - To repeat playback.

Setting up the TV set for the first time


What is included in the box


- 1 x Operating Instructions
- 1 x Quick Start Guide
- 1 x TV
- 1 x Remote Control
- 2 x AAA Batteries
- 1 x Stand installation pack
- 1 x RF Cable

1 Fitting the stand


TV panel must be facing downwards.

Note: To complete the stand installation you will require a cross head screw driver.


4 x  Used for attaching the stand to the TV set (fig.2)

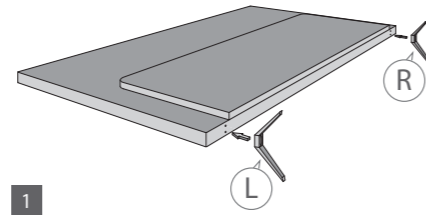

1 Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

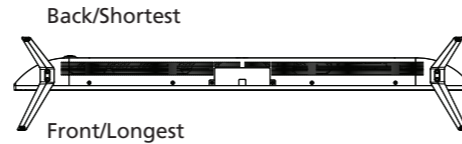


2 When the stand feet are installed correctly the stand feet will be longest at the front of the TV and shortest at the back with the feet pointing away from each other.

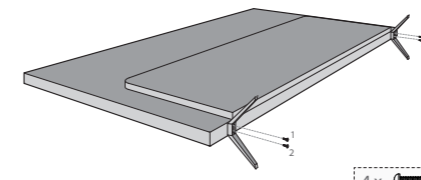


3 When the stand/feet are in the correct position, secure the feet to the underside of the TV set using 4 screws provided.

2 Connecting your set

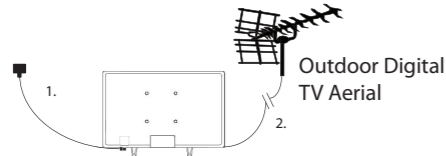


- 1) Connect the TV to your power socket.
- 2) If you wish to use the TV to receive Freeview/Saorview channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saorview, skip this step.

3 Powering On the TV

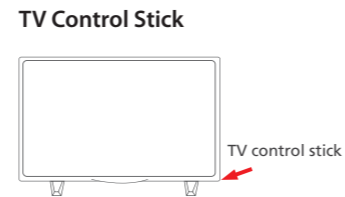

Switch on the television by pressing the TV control stick located on the TV set.

Remote Control: Installing Batteries

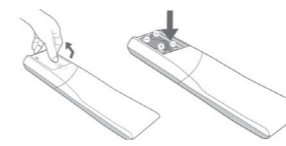

Insert the batteries supplied into the remote control and press the standby button to power on the TV.

Win a SHARP Soundbar


Register your manufacturers guarantee online within 14 days of purchase at www.registertoday.co.uk/sharp and enter into a prize draw to win a Sharp Soundbar

Terms and conditions apply. Online registration only.



4 First time installation


Basic installation steps are shown below. These may vary slightly depending on model.

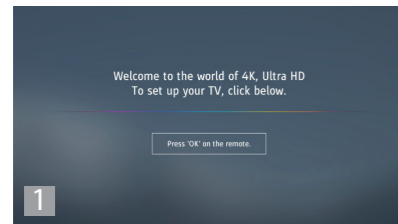

Introduction


When the set first turns on, it enters the First Time Installation mode. This can be restarted by restoring the set to default settings in the 'About TV' Menu.

Note: In home mode, the TV will switch off automatically after 4 hours in the event that no buttons are pressed on the TV or remote control. (You can change this by pressing the [MENU] button and then selecting Settings>Time>Auto Standby)

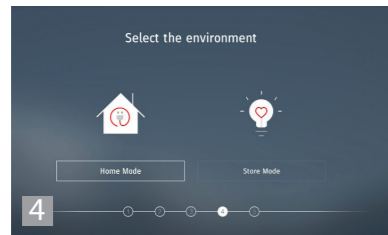


Environment of Use

Home Mode: For normal use, by default it is set to a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). This can be changed in the picture mode settings.

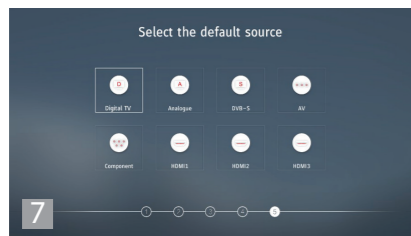


Default Source

Select the source which you use the most. If Digital TV (Freeview) is chosen, then at the next step, the set will tune in and default to Digital TV (Freeview). If one of the other sources is selected, then the set will not tune in at this stage and default to that input. If it is required to tune the set in later, press the [MENU] button and then select Settings>Channels

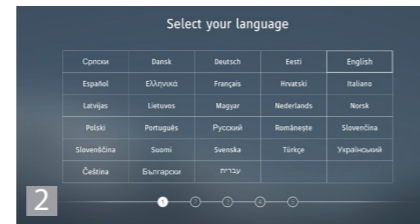


Languages

Select your preferred on-screen display language. This will change the language in which the menus and associated information is displayed in. When set up has been completed, to change this press the [MENU] button and then select Settings > System Menu > Language

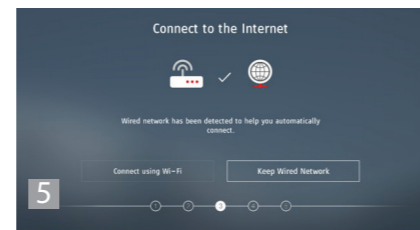


Network setup

You can connect the TV to your broadband router or wireless network in order to take advantage of the Smart functions. If you connect the TV to your router using an Ethernet cable (recommended) this step will be skipped.

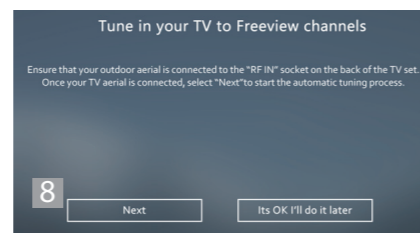


Tune in Channels

Choose to install terrestrial channels now or later.

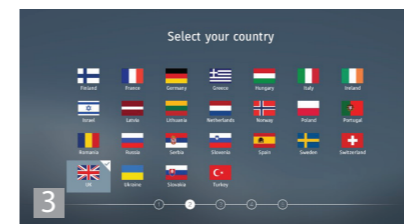


Country Selection

Select the correct flag for the country in which the set will be used in. This will enable the set to correctly install the functions applicable in the country of use.

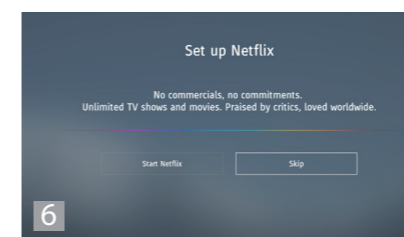

Set Up Netflix

If you have a Netflix account, it can be set up on the television here. Once set up and validated, the First Time Installation returns to the next step.

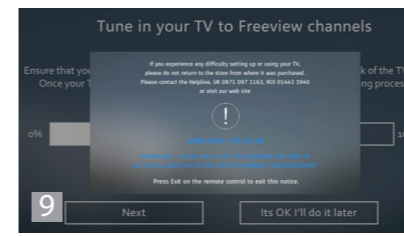


Support Advice

Information regarding support is displayed for a little while. Tuning continues and a progress bar is shown with the number of channels found indicated below.

If you are picking up signals from more than one transmitter, you will be requested to select your primary and secondary regions.

Connectivity

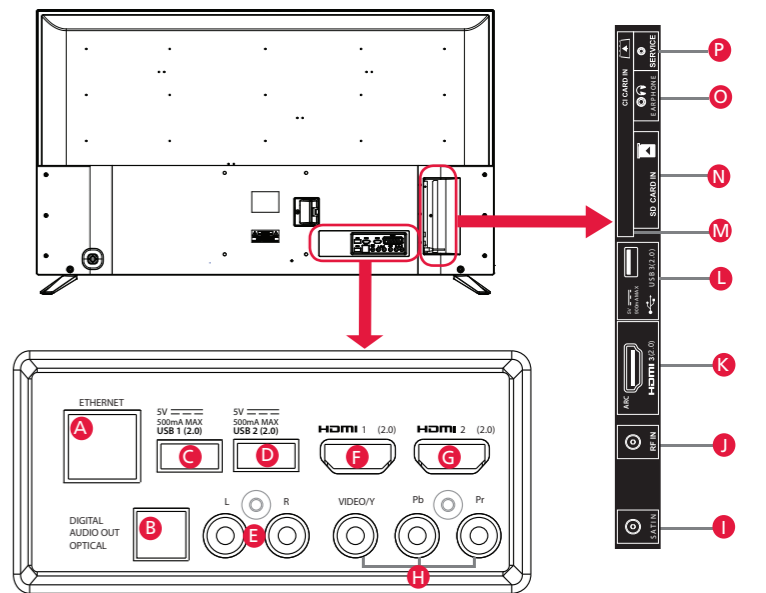

A	Ethernet/LAN*	Network connection	I	SAT IN	Satellite input
B	Digital Audio	Digital Optical Audio Output	J	RF in	RF / TV aerial input
C	USB 1	USB port 2.0	K	HDMI 3	HDMI input 2.0 (ARC)
D	USB 2	USB port 2.0	L	USB 3	USB port 2.0
E	L/R	Audio shared for Video/Composite and component/YPbPr	M	CI card in	Common interface module
F	HDMI 1	HDMI input 2.0	N	SD	SD card input
G	HDMI 2	HDMI input 2.0	O	Earphones	Earphone input
H	Video/YPbPr	Video Input (green) and HD input (Ypbpr)	P	Service Input	Input is used only by service centres

* The Ethernet/LAN port is used for Freeview HD services and smart functions.