

User Manual



GENERATION FUTURE





Introduction

Dear customer,

First of all, we would like to congratulate you for purchasing this Hoover iron and to thank you for the confidence you have in Hoover brand.

This appliance has been manufactured with great care, respecting all of our quality criteria and has been tested several times. We hope its use will fulfil your expectations. We are strongly convinced that it will make your ironing much faster and better.

Before using your new Hoover appliance, please read carefully this user's manual. If you need further information or if you encounter any trouble which are not noticed in this manual, please contact the after-sales service or your standard dealer.

Important Safety Instructions

Read this user manual carefully before you first use and save it for future reference.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


- This product has been designed for domestic use only. In case of any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer is not responsible and the guarantee will not apply.
- Before connecting your appliance, check if the mains voltage is the same as the voltage indicated on your appliance and that the power outlet is connected to the earth.
- Ensure before each use that the electric cord or any other important part is not damaged.
- Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.




Important Safety Instructions

- Never direct the steam towards persons or animals. Never direct the steam jet towards any other electrical or/and electronic appliances.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- If the appliance shows evidence of breakdown, malfunction, leakages. Please make sure it is checked by an authorized Service Centre to avoid any danger.
- Always make sure the appliance is switched off, unplugged and cooled down before doing any maintenance work.
- The iron must not be left unattended while it is connected to the supply mains and before it has cooled down.
- Do not unplug the appliance by pulling on the cord or on the appliance.
- Never immerse the iron, the stand, the cable or the plugs in water. Never hold them under the water tap.
- The sole-plate of the iron can become extremely hot and may cause burns if touched. Never touch the electric cords with the sole-plate.
- If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid a hazard.
- When placing the iron on its heel, ensure that the surface on which the heel is placed is stable.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.

Important Safety Instructions

- The surfaces with  are liable to get hot during use.
- To have a electronic copy of the instruction manual contact the after sales service in guarantee card.
- The iron must be used and rested on a stable surface.

Parts Description

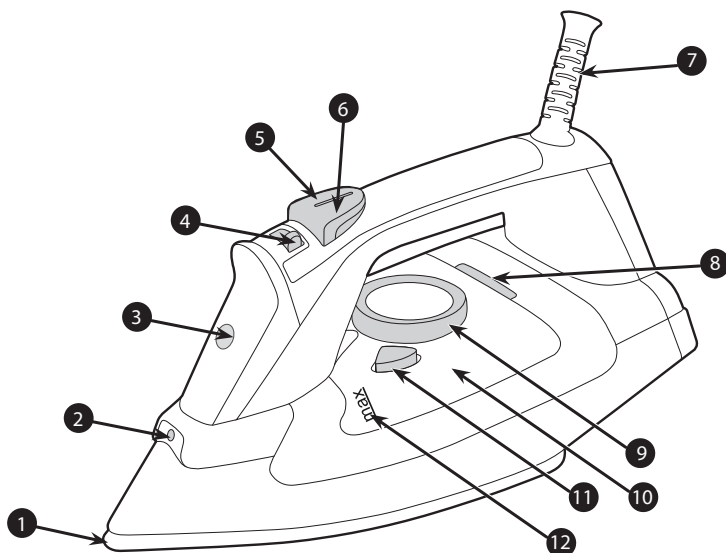

1	Sole-plate
2	Spray Nozzle
3	Water Fill Cover
4	Steam Control
5	Spray Button
6	Boost Button

7	Swivel
8	Lamp Cover
9	Temperature Dial
10	Water Tank
11	Self Clean
12	Max filling level



Chapter 1: Preparation for Use

Place the iron on a stable and level surface, for example on the hard part of an ironing board or on a heat resistant surface.

Chapter 1.1 : What Kind of Water May be Used?

The Hoover iron has been designed to be used with tap water only.

There is no need to use distilled or pure distilled water.

Nevertheless, if you live in a hard water area, you can mix 50% of distilled water with 50% of tap water.

Do not use any other kind of water or do not add any other contents to water tank as it can damage your appliance.

Chapter 1.2 : Filling the Water Tank

Remove the mains plug from the wall socket before filling the iron.

Set the steam control button to position "0" or "☒" and open the water fill cover.

Please fill your iron with normal tap water before using for the first time.

Use the water beaker supplied to fill clean tap water into water tank until "MAX" filling level.

Push the water fill cover firmly to close and dry any spilt water around the enclosure of the appliance, do not overflow.

WARNING: Do not add vinegar, hot water, perfume, or any other kind of chemical agents or any other contents in the water tank. It could damage the steam generator and shorten its life.

Chapter 2: Using Your Iron

Plug the appliance into an earthed socket and switch the power on. Stand the iron in the vertical position, turn the temperature dial to your desired setting, the power light on the tank will illuminate red indicating that the sole plate is heating up to the required temperature.

When the red light switches off, your appliance is ready for use.

N.B

1) The first time you use your appliance you may find some dust and smell of fumes, this is quite normal and they will quickly disappear.

Chapter 2.1: Regulating the Sole-plate Temperature

Select the temperature of the sole-plate by turning the temperature dial on the iron to the desired position.

Wait a few moments until the temperature indicator lamp switches off, this indicates that the sole plate has reached the requested temperature.

While ironing the temperature indicator lamp will switch on and off to control the temperature, this will not interrupt your ironing.

Help

To know the best suitable temperature for each textile, check the laundry care label of the article to be ironed. Please note that during use, the temperature light goes on from time to time. It signifies that the iron is heating up to the set temperature.

If a fabric is made with various kinds of fibres always select the sole-plate temperature to suit the most delicate one.

If you select a lower temperature while ironing, wait until the iron has cooled down to the set temperature before you continue ironing.

If the temperature is too low, some drops of water could escape from the sole-plate. Please increase the temperature above the 2 dots (••) to avoid this issue.

Chapter 2.2 - Ironing

Dry Ironing

For dry ironing, turn the steam control to “0” or “”. This will cut off the steam flow if water is in the water tank.

Turn the temperature dial to select the desired fabric/temperature setting. The indicator power lamp will illuminate. Ensure the iron is on a smooth and stable surface vertically.

After the indicator power light goes out, you can begin to iron.

Steam Ironing

As indicated on the temperature control and the table on the rear of the iron, steam-ironing is only possible at higher ironing temperatures (between “●●” to “MAX”).

Ensure that there is enough water in the water tank.

Stand the iron on its end; Insert the mains plug into the wall socket.

Set the temperature control at the required position within the steam area.

After the indicator power light has gone out and has come on again, you may start ironing.

ATTENTION: Never direct the steam towards people. Burns or serious injury may occur.

Chapter 2.3 - How to Choose the Correct Sole-plate Temperature

To obtain the best results, it is important to set the correct temperature of the sole-plate.

Textile	Soleplate T°C
Jeans	Max
Cotton	●●●
Linen	Max
Starched Clothes	●●●
Velvet/Alcantara	●●
Wool	●●
Silk	●●
Cashmere	●●
Rayon	●●
Polyester	●
Nylon	●
Acrylic	●
Lycra	●
Polyamid	●

Help

When steam ironing clothes on which shiny patches may occur, we recommend you to set the sole-plate temperature to a lower temperature or to iron the garment on the reverse.

Start with the fabrics that need to be ironed at a lower temperature (●) and finish with those that needed to be ironed at the higher temperature (●●●/Max).



Chapter 2.4 - Shot of Steam

Ensure that there is enough water in the water tank.

When the temperature dial is set to steam setting (between “●●” to “MAX”) a shot of steam can be produced.

Press the steam boost button, the sole-plate will emit a strong flow of steam.

NOTE

Only use the steam boost button when the steam iron has reached the steam or maximum temperature.

Do not press the steam boost button more than 3 times repeatedly. For optimum steam output, leave an interval of at least 5 seconds between pressing the steam boost button.

The steam boost button feature can be used with Dry or Steam ironing as desired.

ATTENTION: Never direct the steam towards people. Burns or serious injury may occur.

Chapter 2.5 - Spraying

Ensure there is enough water in the water tank.

Press the spray button to produce a fine spray of water from the nozzle and continue ironing.

NOTE: Do not spray silk.

Chapter 2.6 - Vertical Shot Of Steam

When the temperature dial is set to a steam setting (between “●●” to “MAX”) vertical steam can be used.

Simply hold the iron vertically, positioned in front with a slight distance from the item to be steamed, and press the steam boost button.

ATTENTION: Never direct the steam towards people. Burns or serious injury may occur.

NOTE: This is especially useful for getting wrinkles out of hanging clothes, curtains, wall hangings etc.

Chapter 2.7 - Automatic Anti-Calc Function

Your iron contains an anti-calc cartridge to reduce scale deposits. This considerably prolongs the operational life of your iron.

The anti-calc cartridge is an integral part of the water tank and does not need to be replaced.

Chapter 2.8 - Automatic Anti-Drip Function

Your iron has an anti-drip function. The iron automatically stops generating steam when the temperature is too low to prevent water from dripping out of the sole-plate.

NOTE: When using the steam function, your appliance may stop generating steam for several seconds, this is normal.

Chapter 2.9 - Self-Clean Function

Use the self clean function once every two weeks. If the water in your area is very hard, the self clean function should be used more frequently.

Make sure the iron is unplugged.

Set the steam control knob to OFF position.

Fill the water tank to the maximum level.

Put the plug in the wall socket.

Select the maximum ironing temperature.

Unplug the iron when the temperature power light has gone out.

Hold the iron over the sink, press and hold the self clean button and gently shake the iron to and fro.

Release the self clean button after 5-10 seconds.

Repeat the self clean process if the iron still contains a lot of impurities.

NOTE

Steam and boiling water will come out of the sole-plate, impurities and flakes(if any)will be flushed out.

ATTENTION: Keep hands and body away from hot water.

Do not push and hold the self clean button while ironing.

Chapter 3: Maintenance and Cleaning

To prevent any risk of burns, all maintenance and cleaning operations should only be carried out when the unplugged appliance has cooled down for at least 2 hours.

Before cleaning, set the steam control to the "0" or "☼", unplug the iron from wall socket, and allow the appliance to completely cool down, and then clean with a damp cloth, do not immerse the unit into water or other liquids.

Clean and empty the water tank after every use.

If ironing clothes with high temperature, which is not recommended on the garment table, this will cause burns to your clothes and residue left on the sole-plate of the unit, it is recommended that you iron over an old cloth to remove any residue from the sole-plate.

After use, set the steam control to the "0" or "☼", disconnect the unit from mains socket, empty remaining water from water tank and then store the iron after it has been completely cooled down.

Never use scouring pads, abrasive or chemical cleaners, or solvents

Chapter 4: Storage

Empty the water tank.

Roll up the power cord with cable ties.

Put the iron in the upright position on it's back cover.

Wait at least 30 minutes allowing the sole plate to cool down.

Then you can take away your appliance in order to store it safely and easily.



Important Information

Hoover spares and Consumables

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering spare parts, always check your model number.

Hoover Service

Should you require service at any time, please contact your local Hoover Service Office. Please see all the contact details below.

Safety

Hoover believes that independent approval is the best way of demonstrating safety in design and manufacture. **All Hoover irons have been manufactured in compliance of all safety regulations and approved by the most qualified independent approval certification bodies.**

ISO 9001

Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.



This product complies with the European Directives 2006/95/EC, 2004/108/EC and 2011/65/EC.

HOOVER Limited, Pentrebach, Merthyr Tydfil, Mid Glamorgan, CF48 4TU, UK

Your Guarantee

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice.



GENERATION FUTURE

Printed in P.R.C.
PART No. 48018078

