



OPERATING INSTRUCTIONS

MIP™ System

Portable Ding Dong

Door Chime




MODEL: B7010WH

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Simple 'Ding Dong' Chime
- Flashing Strobe Light (A)
- IP44 Waterproof Bell Push (B)
- Free Standing, Wall Mountable (C) or Clip-On (D) Options
- Integral Hang Hole (C)
- 150 Metre Unobstructed Range
- Battery Operated
- Receiver Requires 2xAA Batteries (not included)
- Bell Push Transmitter Requires 1xA23 Battery (included)

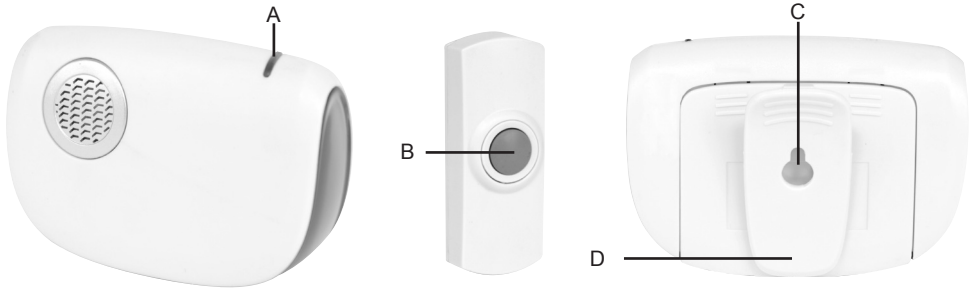

IMPORTANT SAFEGUARDS AND PRECAUTIONS



SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- The Receiver is for use indoors. Do not use outside or in damp conditions.
- To prevent against the risk of electric shock, Do not submerge any part in water.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this appliance.
- Cleaning and user maintenance shall not be made by children.
- Do not use rechargeable batteries
- Do not mix old and new batteries, different types of batteries, alkaline or rechargeable batteries with different capacity together.
- Should you find the sensitivity or quality of sound deteriorating, replace all old batteries with new ones as soon as possible.
- The use of long life Alkaline batteries is recommended.
- Dispose of used batteries carefully and in accordance with Local Government Guidelines.

MiP™ SYSTEM

This Door Chime can automatically learn the frequency of other MiP™ System modules including additional Bell Push transmitters and Door Chime receivers. This is useful if you wish to use more than one Bell Push or Door Chime or require a replacement for either.

HOW TO PROGRAMME

1. On each Receiver, select and hold the “Chime Selection” Button for 10 seconds. An audible “beep” will be heard. The Receiver is now in a waiting mode.
2. Press the Bell Push or turn on the PIR (Transmitter) and an audible beep will be heard again. The receiver/s is now being programmed.
3. To exit the programming mode, press and hold the “Chime Selection” button again or wait a further 10 seconds until a “beep beep” is heard and the programming is finished.

Up to 4 receivers and 4 transmitters can be programmed together at any one time.

Note: This is only compatible with products highlighting the MiP™ System

OPERATION

MOUNTING THE DOOR CHIME:

1. Slide open the battery door cover located at the back of the unit.
2. Insert 2 x 1.5 Volt DC ‘AA’ size batteries (not included), ensuring the battery polarity matches the internal marking. Replace the battery cover.
3. This unit can be carried around the house or garden or can be placed in any convenient location.
4. To mount the door chime, hang the unit on a screw using the keyhole on the back.

INSTALLING THE BELL PUSH

1. Pry open the Bell Push unit.
2. Mount the bell push into an upright position onto a wall or doorframe by using the screws supplied or the double-sided sticky pad.
3. Insert a 12 Volt DC ‘A23’ size battery (included), ensuring the battery polarity matches the internal marking.
4. Replace the cover and press to lock into position.

NOTE: The battery can be used for one year. If the chime sounds distorted or faint, replace the old batteries with fresh ones.

IMPORTANT -

This wireless Door chime has an operating distance of 150 metres, but local conditions and the number of walls may affect this. Metal door frames and other factors that interfere with the signal will reduce the operating distance.

CLEANING AND CARE

Wipe with a clean soft cloth only.
Do not wash with detergent or use any form of solvent.

WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the Proper treatment, recovery and recycling please take this product to the appropriate waste collection point.

If you are unsure where this may be, please contact your local authority.

Improper disposal may be harmful to the environment



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com

web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at **www.lloytron.com**
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K