


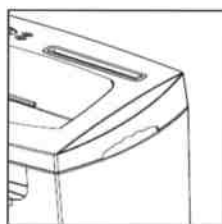

intallation

Fig. 1



Mount the shredder securely to the rim of the cabinet (Fig. 1) Position the waste basket completely inside the cabinet. Connect the power cord to any standard 230 V AC, 50 Hz outlet.

Attention:

- This shredder includes a built in safety mechanism that requires the shredder to be correctly mounted on the supplied wastebasket. Lining the waste basket with a plastic bag will interfere and may keep the shredder from functioning.
- Cross cut shredders have very sharp, exposed blades on the underside. User care when mounting the shredder on the wastebasket.

operation



The switch located on housing top enables you to select one of the followings settings by sliding the switch either left or right (Fig.2):

- auto With this setting the shredder is automatically started by inserting paper into the shred opening. When the paper has passed through, the shredder will stop
- rev In the unlikely event of paper jam, the reverse setting can be used to help clear the cutters of paper that has not passed through properly
- off This setting turns off all functions of the shredder

capacity

The 1250 can shred up to 8 sheet of papers (80 g/m²) into particles of 4x40mm. Working width 230 mm. One folded sheet of paper equates to 2 sheets of paper.

warning



Place the device near to an easily accessible electric socket. Always switch-off the device before removing it from the waste basket. Always disconnect the plug before opening the case. Always turn the shredder off and unplug the power cable before cleaning it, moving it, or emptying the wastebasket.

DO NOT PLACE FINGERS OR CLOTH TOO CLOSE TO THE FEED SLOT AS SERIOUS INJURY MAY OCCUR.

Keep wastebasket emptied so that the shredder output is not impeded. The unit should only be fed with paper. Shredding other types of materials like envelopes, labels or anything with glue or any sticky substance can cause injuries or may damage the shredder.

caution

Do not attempt to open this unit. There is a risk of electrical shock which could cause serious injury or even death due the hazardous voltage.

- Do not alter the unit or power cord in any way
- Do not operate the unit if it or the power cord appears damaged in any way.
- Never overload electrical outlets beyond their capacity. This could result in an electrical fire.
- Always unplug the unit when moving it or not using it for a period of time.
- Keep children away from the machine.
- Keep all loose articles of clothing, ties, jewellery, long hair or other loose objects away from opening, injury may result.
- Never insert fingers into opening. Serious injury may result.
- Ensure that the sheet capacity of 8 sheets is not exceeded.
- Do not shred any wet paper, carbon paper or vinyl bags.

The shred will stick in the cutter and may shorten shredding performance.

product specification

Throat width: 220 mm Shred Width: 4x40mm Sheet Capacity: 8 sheets (A4 paper) Voltage: 230V
Compliant with EU directive 2006/95/EC LVD (Low Voltage directive), Operating Limits 230V -10% +6% (i.e. 207.0 V-243.8V)
http://ec.europa.eu/enterprise/electr_equipment/lv/index.htm

code: **928857**

www.5staroffice.com
company no. 425809