

Here's **one** for  
the **books**.

# Industrial Style 2 Shelf Bookcase

Model 5420276


**NOTE:** THIS INSTRUCTION  
BOOKLET CONTAINS **IMPORTANT**  
SAFETY INFORMATION.

PLEASE READ AND KEEP FOR  
FUTURE REFERENCE.


# Table of Contents

# Assembly Tools Required

Part Identification	2
Assembly Steps	3-4
Safety	9

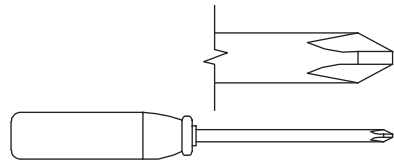

No. 2 Phillips Screwdriver  
Tip Shown Actual Size

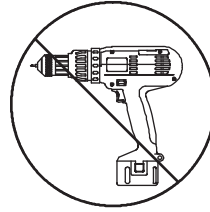

Skip the power trip.  
This time.

## Part Identification

 
Now you know  
our ABCs.



While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

A	TOP (1)
B	SHELF (2)
C	END (2)
D	SHELF SUPPORT (6)


1 1-3/8" ALLEN SCREW - 12



2 1-1/8" SCREW - 12




3 ALLEN WRENCH - 1

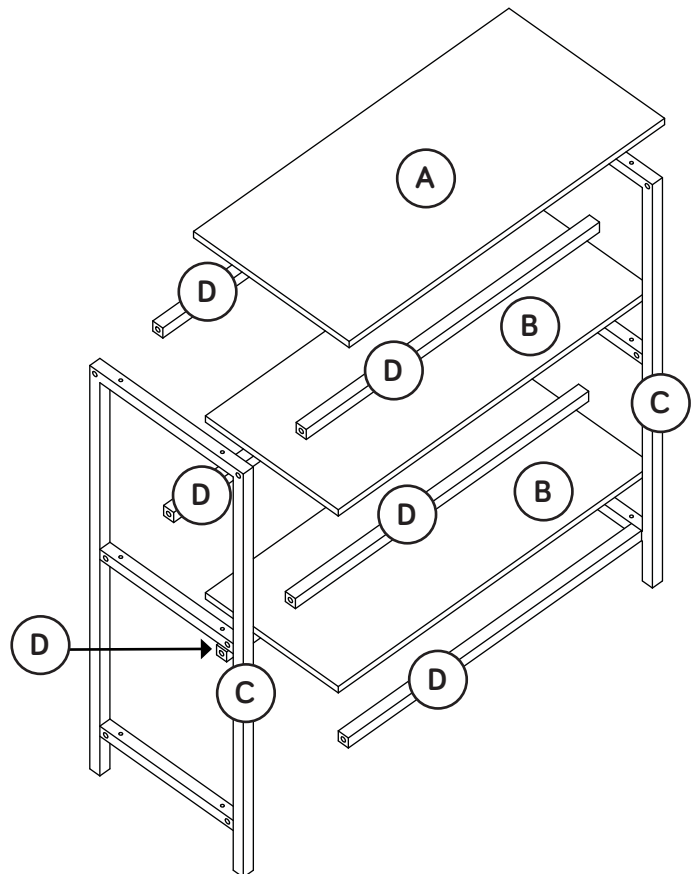


# Step 1

- ✦ Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- ✦ NOTE: You should start each SCREW a few turns before completely tightening any of them.
- ✦ Fasten the ENDS (C) to the SHELF SUPPORTS (D). Use twelve 1-3/8" ALLEN SCREWS (1) and the ALLEN WRENCH (3).
- ✦ NOTE: Be sure to square up the SHELF SUPPORTS (D) to the ENDS (C) before you completely tighten the SCREWS.

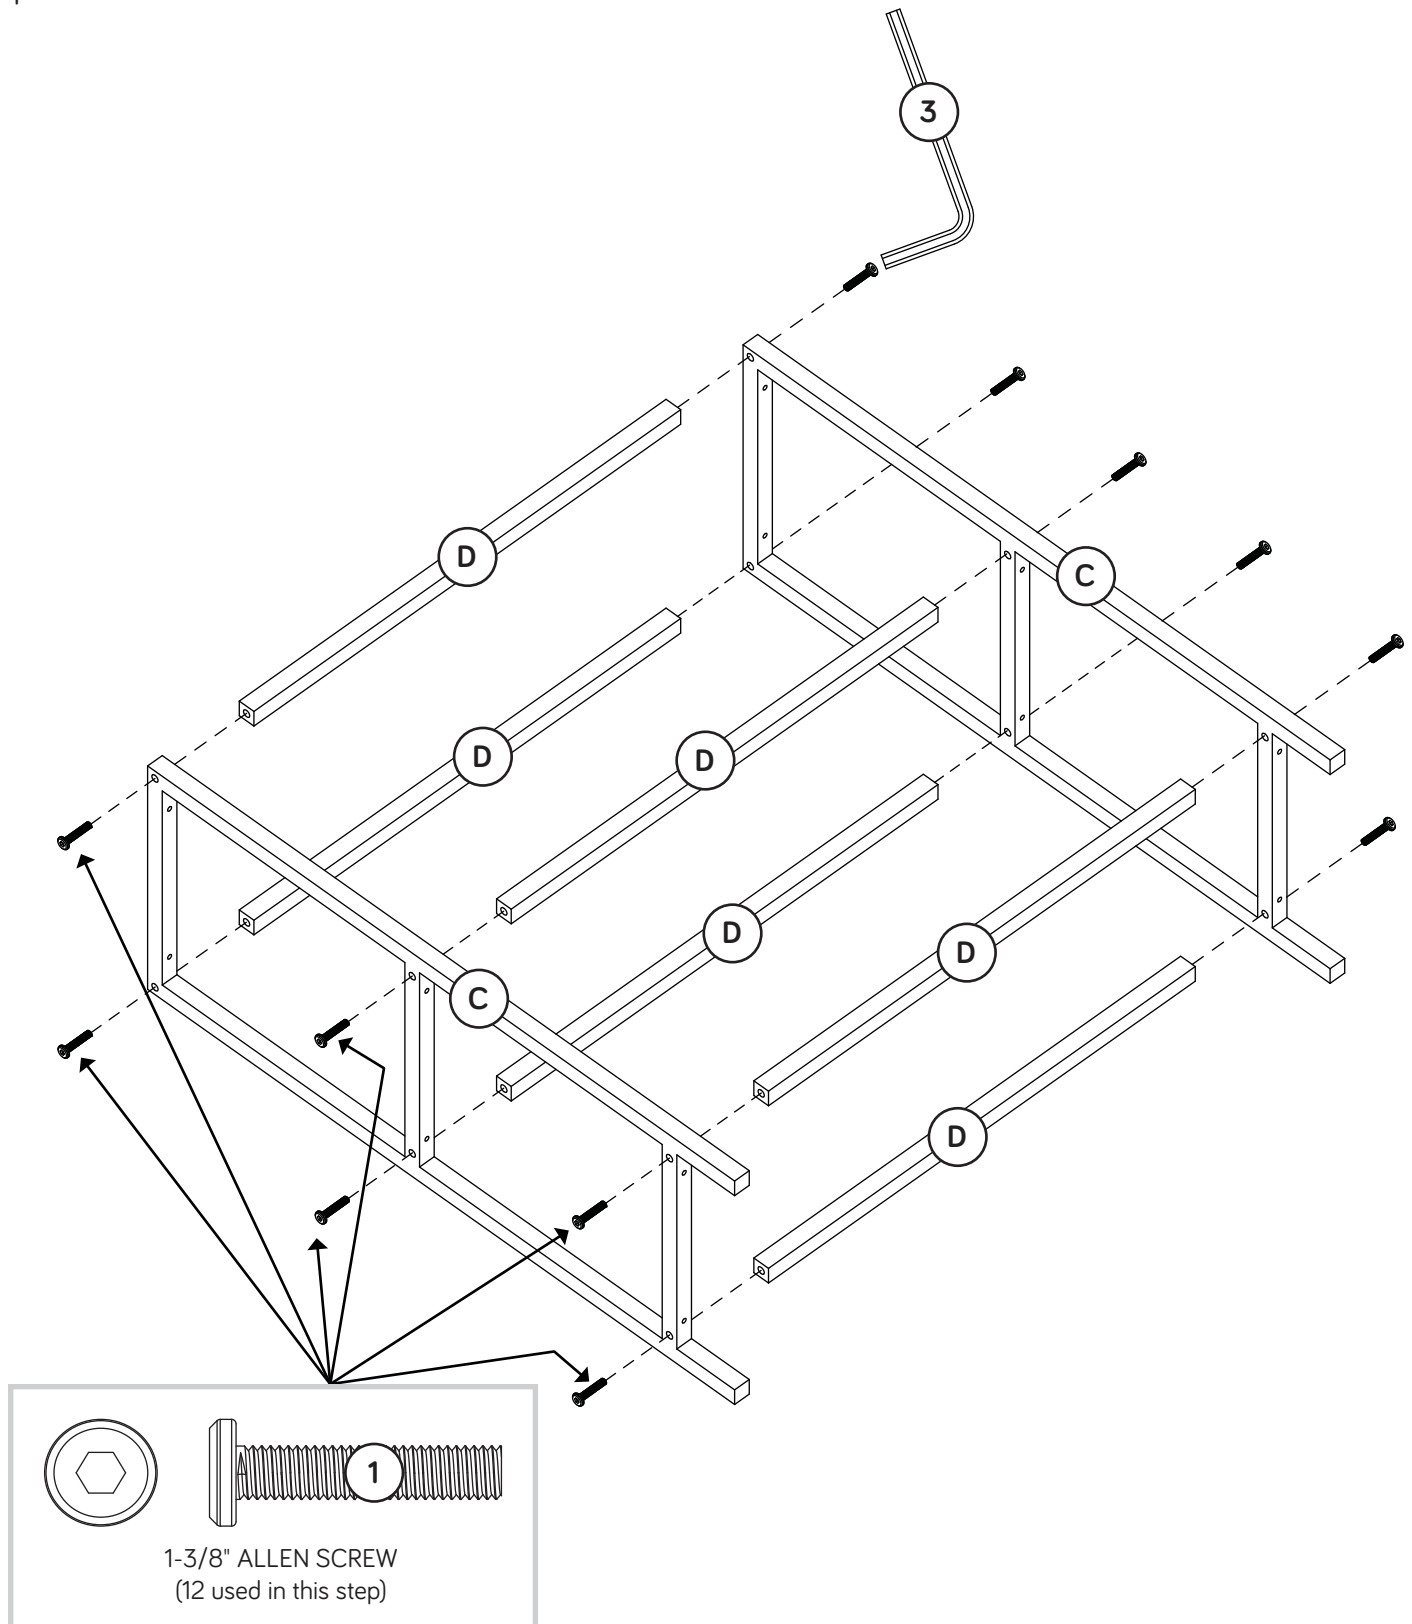

# Step 2

- ✦ **NOTE:** You should start each SCREW a few turns before completely tightening any of them.
- ✦ Fasten the TOP (A) and SHELVES (B) to the ENDS (C). Use twelve 1-1/8" SCREWS (2).
- ✦ **NOTE:** Do not overtighten the SCREWS.
- ✦ Carefully stand your unit upright.
- ✦ **NOTE:** Please read the back pages of the instruction booklet for important safety information.
- ✦ This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.

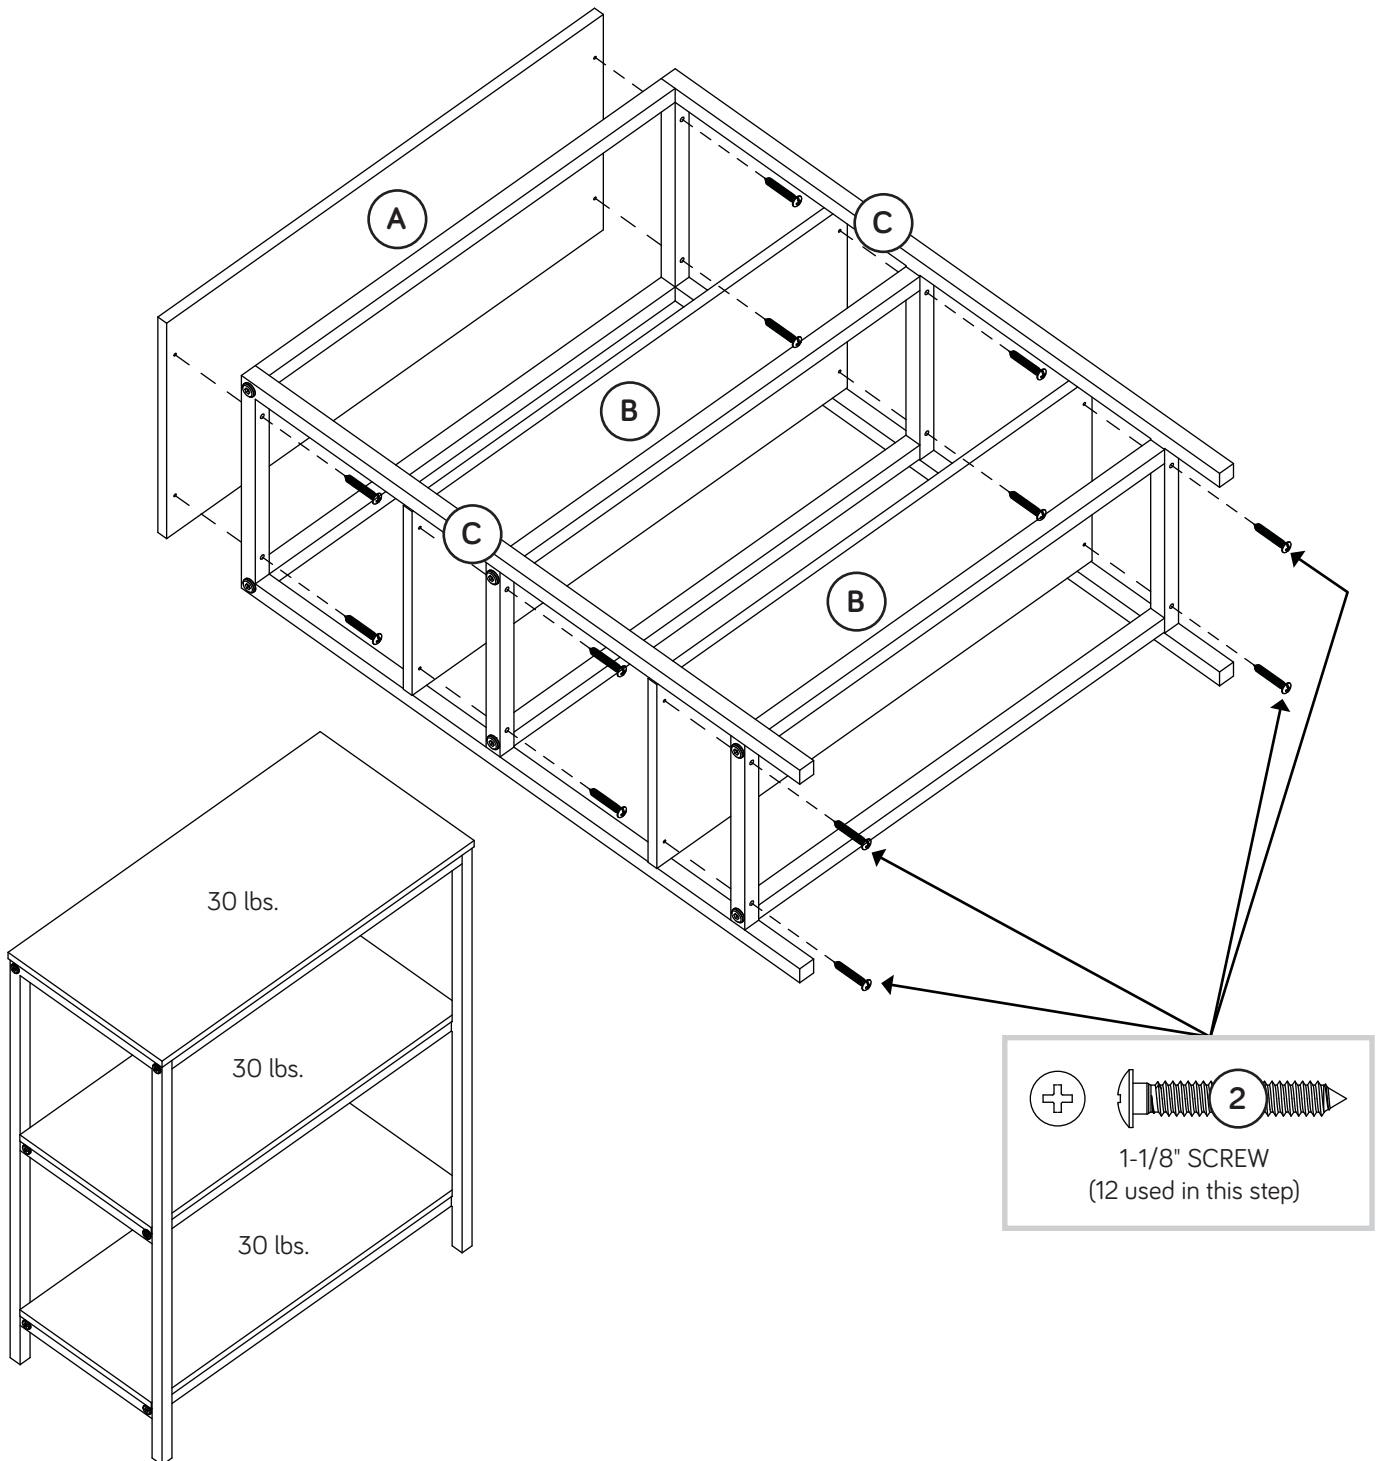

### **WARNING**

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. ***Carefully read the following chart.***

Look out for:	What can happen:	How to avoid the problem:
<ul style="list-style-type: none"><li>• Overloaded shelves.</li><li>• Improper loading can cause the product to be top-heavy.</li></ul>	<ul style="list-style-type: none"><li>• Risk of injury.</li><li>• Top-heavy furniture can tip over.</li><li>• Overloaded shelves can break.</li></ul>	<ul style="list-style-type: none"><li>• Never exceed the weight limits shown in the instructions.</li><li>• Work from bottom to top when loading shelves. Place the heavier items on the lower shelves.</li></ul>
<ul style="list-style-type: none"><li>• Improperly moving furniture that is not designed and equipped with casters.</li></ul>	<ul style="list-style-type: none"><li>• Furniture can tip over or break if improperly moved.</li><li>• Physical injury. Furniture can be very heavy.</li></ul>	<ul style="list-style-type: none"><li>• Unload shelves from top to bottom before moving the furniture.</li><li>• Do not push furniture, especially on a carpeted floor. Have a friend help you lift the item and set it in place.</li><li>• This unit must be positioned against a wall.</li></ul>
<ul style="list-style-type: none"><li>• Children climbing on the shelves can cause the product to tip.</li></ul>	<ul style="list-style-type: none"><li>• Risk of injury or death.</li></ul>	<ul style="list-style-type: none"><li>• Do not allow children to climb on the shelves. Avoid placing items like toys or candy on upper shelves.</li><li>• Use the supplied safety bracket for added stability.</li></ul>
<ul style="list-style-type: none"><li>• Placing TVs on furniture items that are not designed to support a television is hazardous.</li></ul>	<ul style="list-style-type: none"><li>• Risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward.</li></ul>	<ul style="list-style-type: none"><li>• This product is not designed to support a television.</li></ul>