
Teknik

www.teknikoffice.co.uk

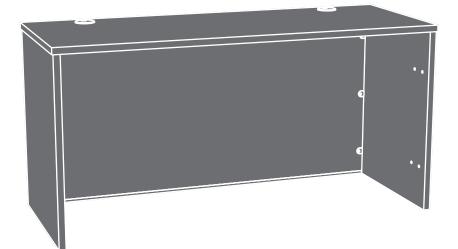

1500x600 Desk

Hudson Elm finish | Model 5427415

NOTE: THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.


English pg 1-12 Français pg 13-14 Español pg 15-16

Lot # **572554** Purchased: 09/17/21

Table of Contents

Assembly Tools Required


Part Identification	3	
Hardware Identification	4	
Hardware Usage Guide	6	
Assembly Steps	5-12	
Français	13-14	
Español	15-16	
Safety	17-18	
Warranty	19	

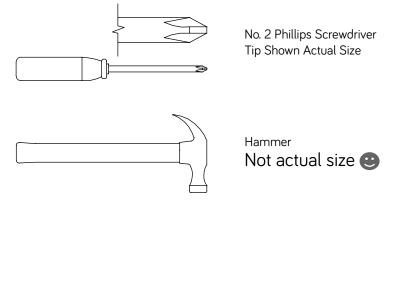

While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.


А	RIGHT END (1)	
В	LEFT END (1)	
С	SMALL END (1)	
D	MODESTY PANEL (1)	
Е	TOP (1)	
		E
	В	°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°

F Screws are shown actual size. You may receive extra hardware with your unit.

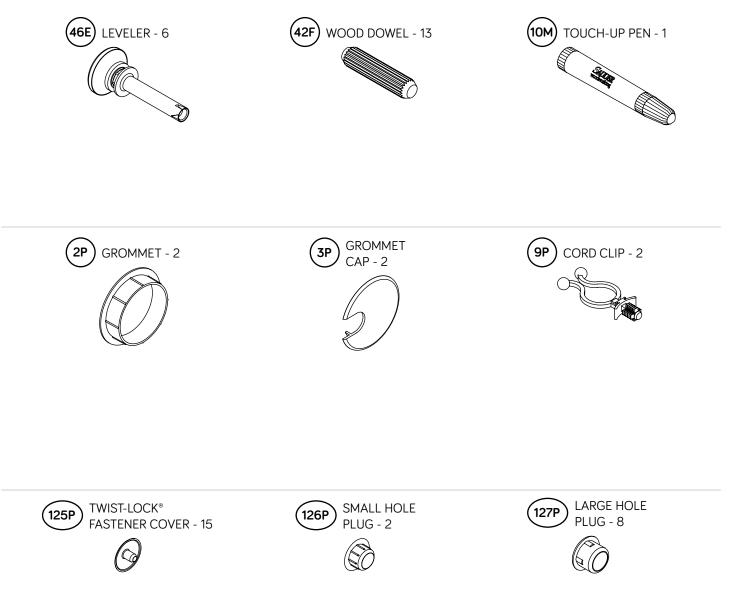


 $m{x}$ This piece of furniture accommodates one or more of the following optional accessories (sold

separately). **The Powered Grommet (Item 5427829)**

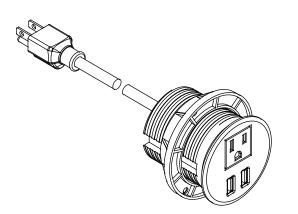


Articulating Keyboard Shelf (Item 5426468) The Articulating Keyboard Shelf is designed to be fastened to the underside of your desk, desk return, or credenza top.

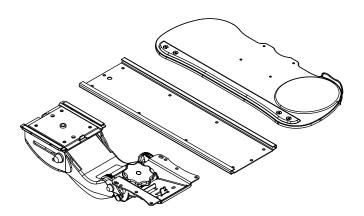

- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Insert four WOOD DOWELS (42F) into the MODESTY PANEL (D).
- NOTE: You may need to gently tap the WOOD DOWELS in with your hammer.



Just think. The sooner you do this, the sooner you do something else.

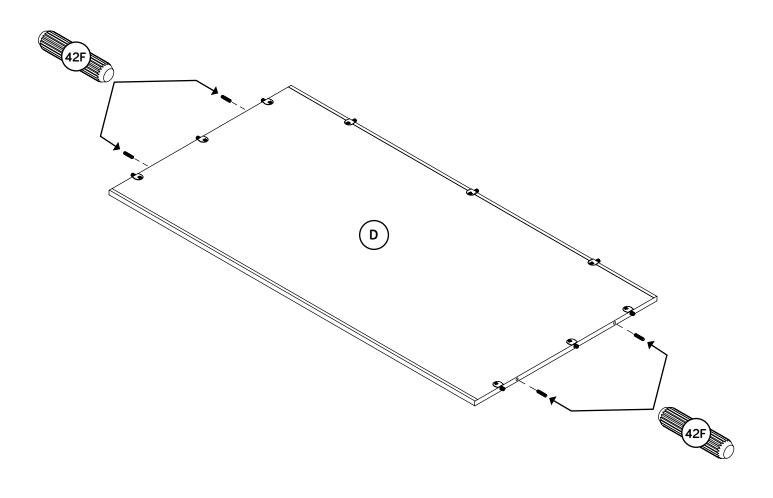

HOW TO USE A TWIST-LOCK® FASTENER


1. Push a TWIST-LOCK[®] FASTENER into the large hole in the part.

2. 1. Insert the dowel end of the FASTENER into the hole of the adjoining part.

<u>NOTE</u>: The dowel end of the FASTENER must remain fully inserted in the hole of the adjoining part while locking the FASTENER.

2. Tighten the FASTENER with a Phillips screwdriver as tight as possible.

(4 used)

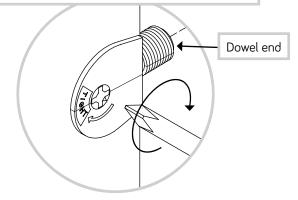


Step 2

- Using your hammer, gently tap four LEVELERS (46E) completely into the holes in the ENDS (A and B).
- <u>NOTE</u>: Adjustments to the LEVELERS will be made later in assembly once your unit is standing upright.
- Insert four WOOD DOWELS (42F) into the ENDS (A and B).
- <u>NOTE</u>: You may need to gently tap the WOOD DOWELS in with your hammer.
- NOTE: The SMALL END (C) is <u>not</u> used in this assembly.


Edge with TWIST-LOCK® FASTENERS


(4 used

- Fasten the ENDS (A and B) to the MODESTY PANEL (D). Tighten six TWIST-LOCK[®] FASTENERS.
- A NOTE: Be sure the WOOD DOWELS in the MODESTY PANEL insert into the ENDS.

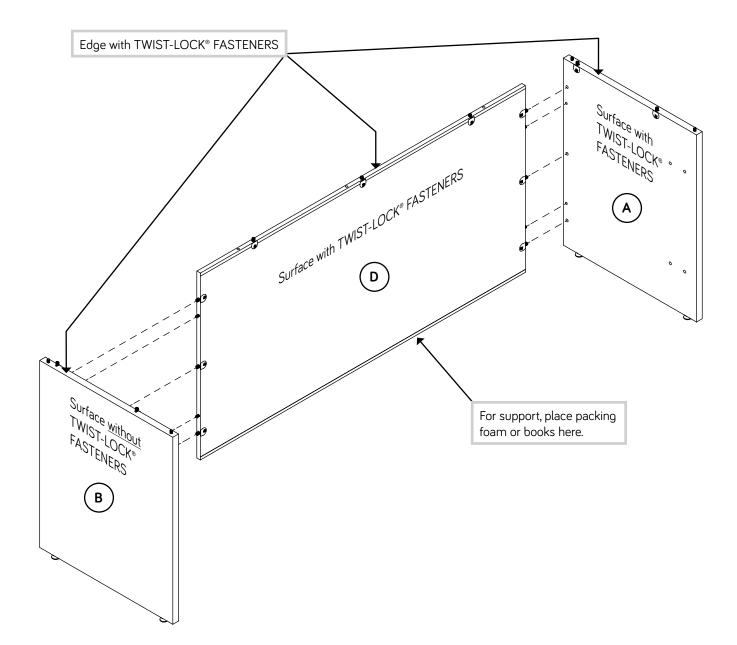


- \blacksquare Push two CORD CLIPS (9P) into the holes shown in the TOP (E).
- $\blacksquare \quad \underline{NOTE}: The CORD CLIPS are used to hold cords against the TOP.$

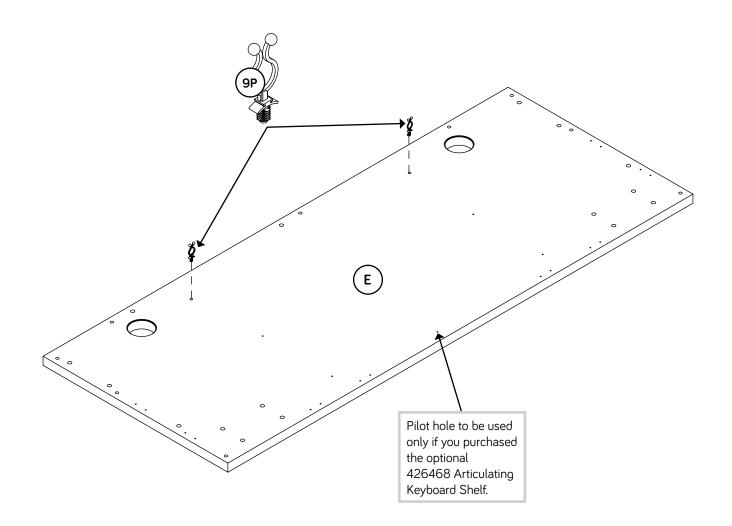

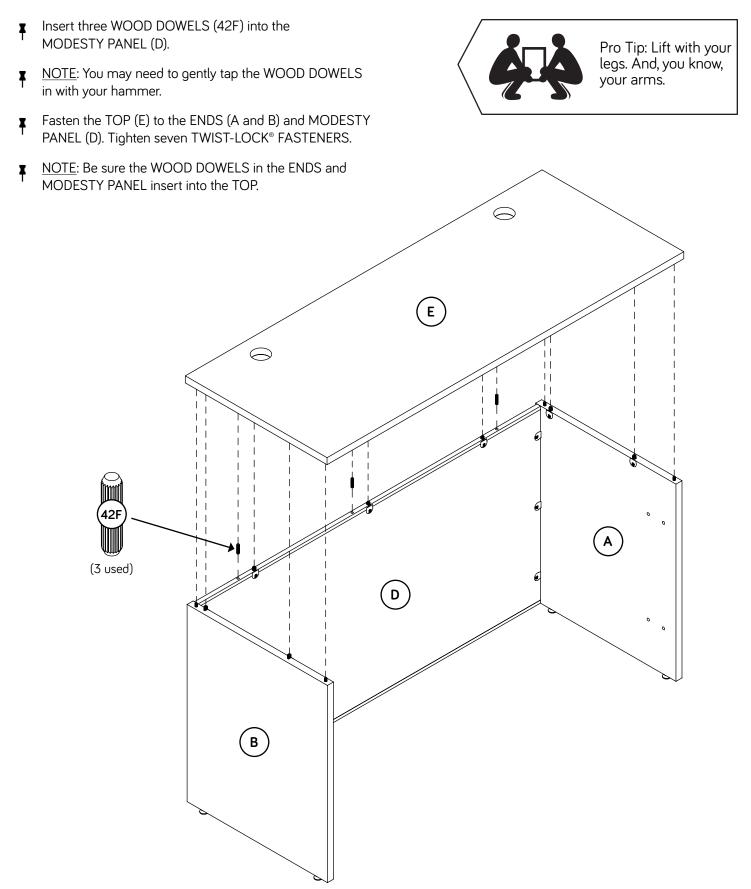

- Insert a GROMMET (2P) and GROMMET CAP (3P) into each large hole in the TOP (E).
- Insert the HOLE PLUGS (127P) into the unused holes in the ENDS (A and B).
- Using your hammer, gently tap a TWIST-LOCK[®]
 FASTENER COVER (125P) onto each visible TWIST-LOCK[®] FASTENER.

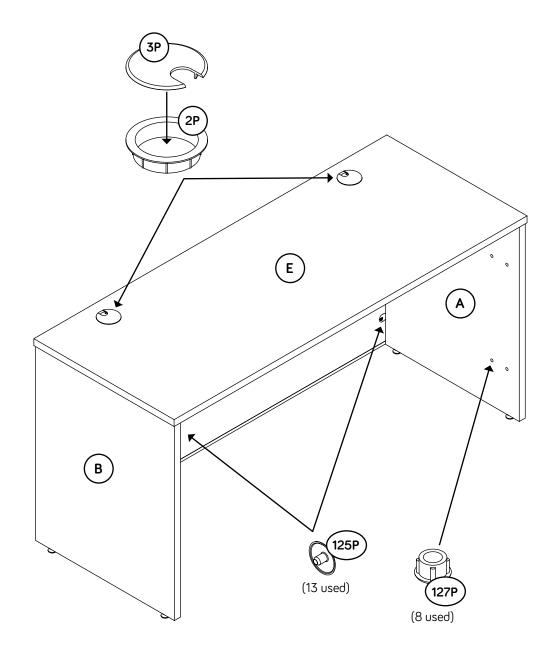

- For long-term care and maintenance of your unit, you may touch up the edges with the TOUCH-UP PEN (10M).
- Your unit may need leveling. To raise a corner of your unit, rotate the LEVELER downward. To lower a corner of your unit, rotate the LEVELER upward.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with a damp cloth. Wipe dry.

