Teknik

www.teknikoffice.co.uk



Hutch for storage units

Hudson Elm finish | Model 5427430


NOTE: THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

English pg 1-18 Français pg 19-21 Español pg 22-24

Lot # **573391** Purchased: 11/12/21


Table of Contents

Assembly Tools Required

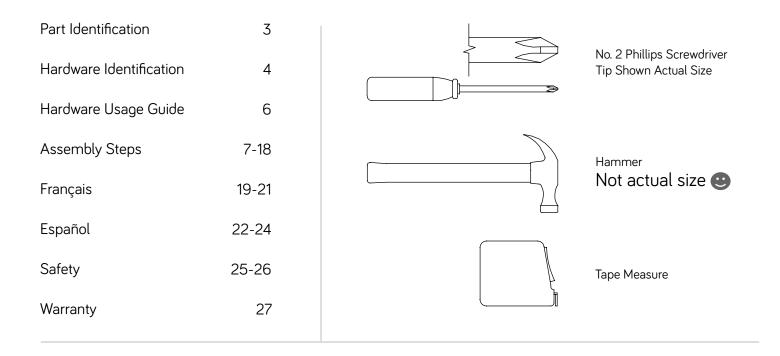



While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

А	RIGHT END (1)
В	LEFT END (1)
С	TOP (1)
D	SHELF (2)
Е	LOWER BACK (1)
F	BACK (2)

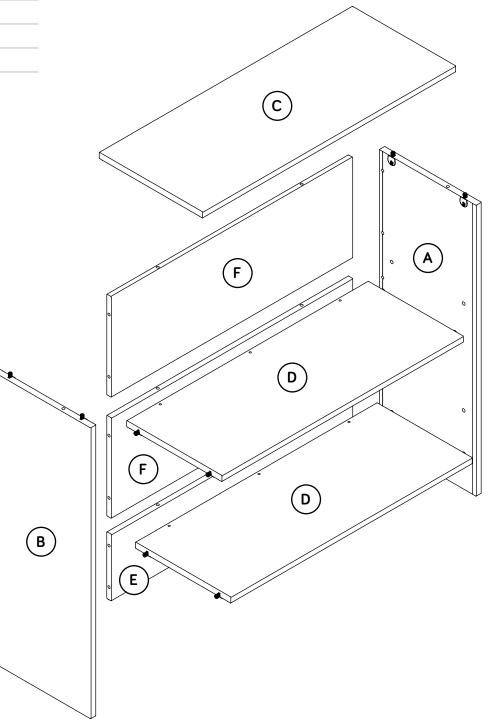

 F Screws are shown actual size. You may receive extra hardware with your unit.

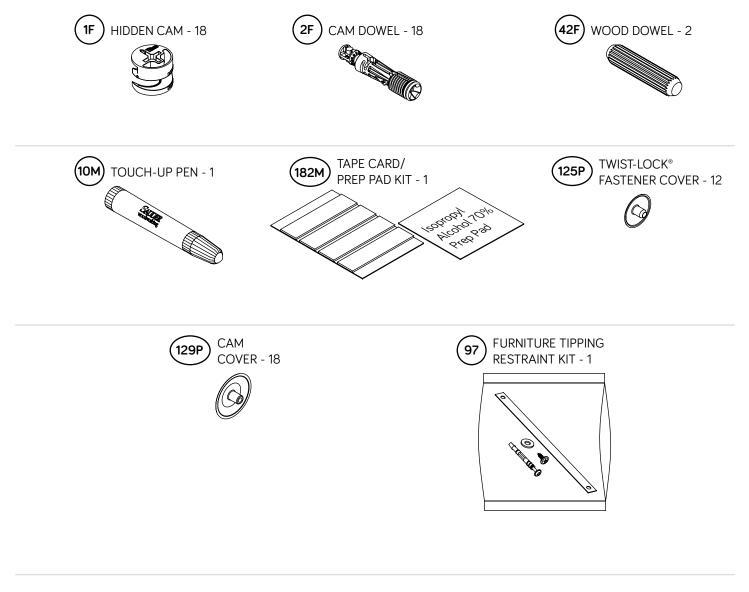




HOW TO USE A TWIST-LOCK° FASTENER


1. Push a TWIST-LOCK[®] FASTENER into the large hole in the part.

2. 1. Insert the dowel end of the FASTENER into the hole of the adjoining part.

<u>NOTE</u>: The dowel end of the FASTENER must remain fully inserted in the hole of the adjoining part while locking the FASTENER.


2. Tighten the FASTENER with a Phillips screwdriver as tight as possible.

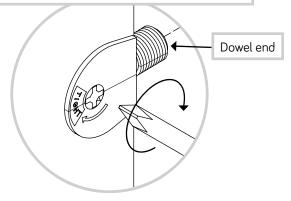

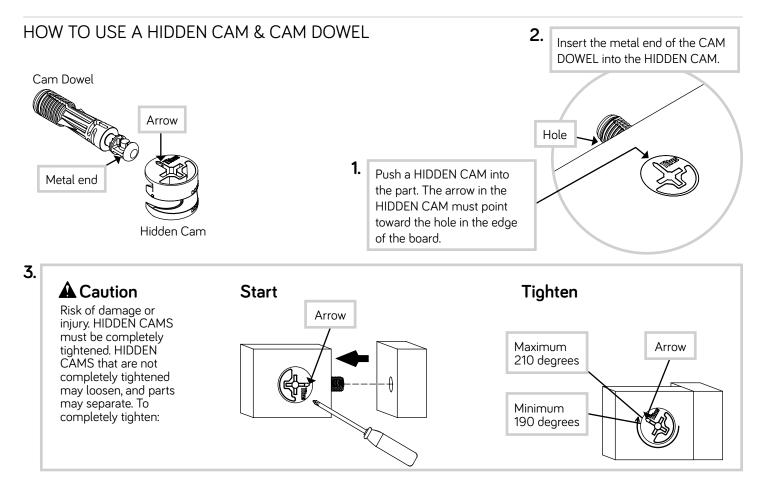



- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Push eighteen HIDDEN CAMS (1F) into the BACKS (E and F). Then, insert the metal end of a CAM DOWEL (2F) into each HIDDEN CAM in the long edges of the BACKS.



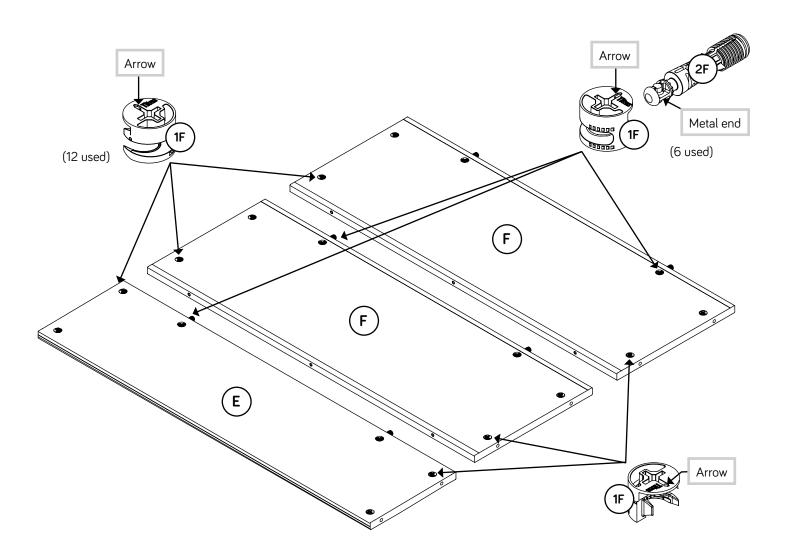


 - Fasten one of the SHELVES (D) to one of the BACKS (F). Use three BLACK 1-15/16" FLAT HEAD SCREWS (113S).
- NOTE: You should start each SCREW a few turns before completely tightening any of them.




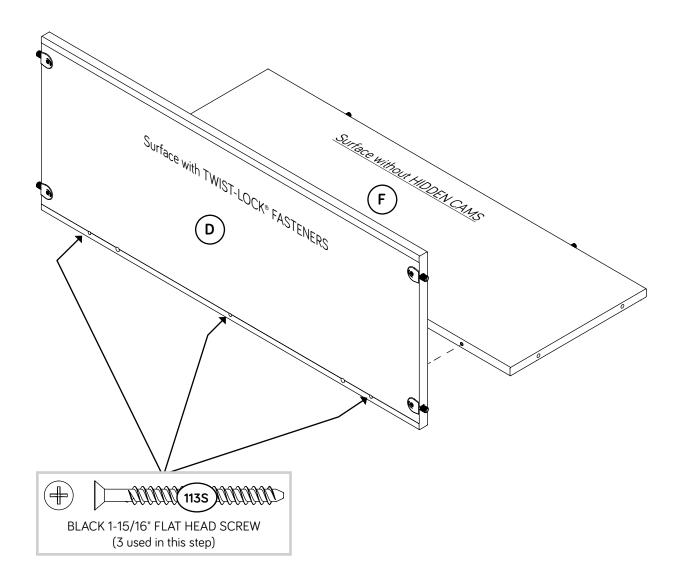


Push the remaining BACK (F) onto the SHELF (D). Do <u>not</u> tighten the HIDDEN CAMS.

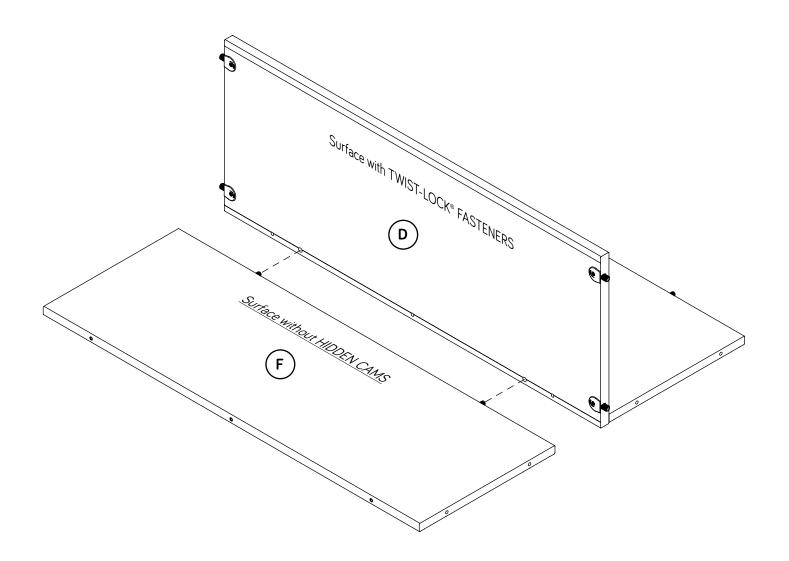

- Fasten the remaining SHELF (D) to the BACK (F). Use three BLACK 1-15/16" FLAT HEAD SCREWS (113S).
- NOTE: You should start each SCREW a few turns before completely tightening any of them.
- Push the LOWER BACK (E) onto the SHELF (D). Do <u>not</u> tighten the HIDDEN CAMS.

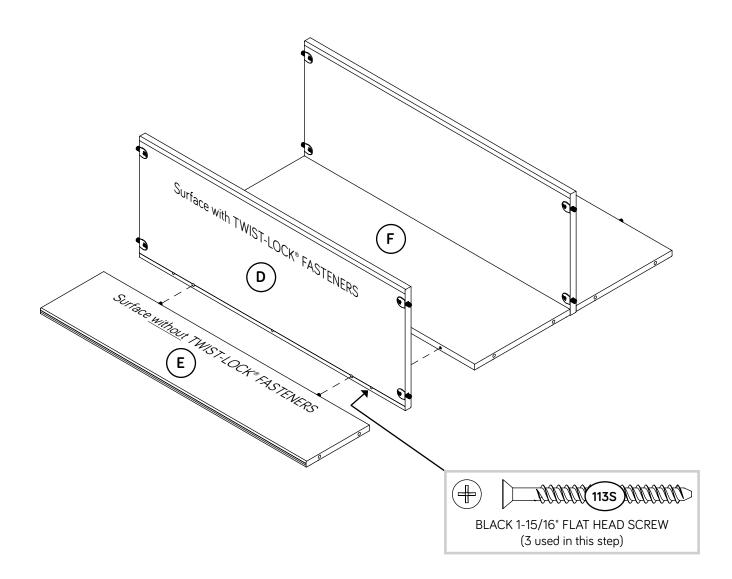


- Insert the plastic end of a CAM DOWEL (2F) into the holes shown in the LEFT END (B).
- Fasten the LEFT END (B) to the SHELVES (D). Tighten four TWIST-LOCK® FASTENERS.
- NOTE: Be sure the CAM DOWELS in the LEFT END insert into the HIDDEN CAMS in the BACKS.

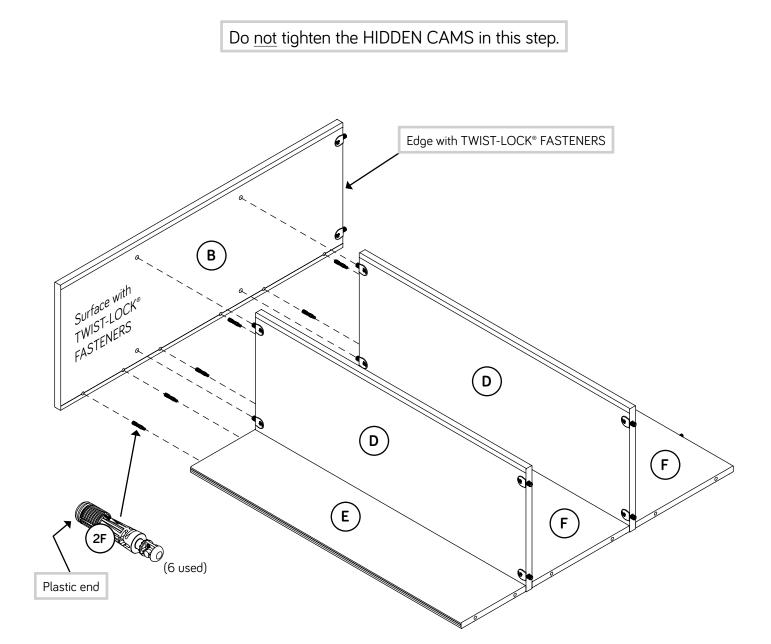


- Insert the plastic end of a CAM DOWEL (2F) into the holes shown in the RIGHT END (A).
- Fasten the RIGHT END (A) to the SHELVES (D). Tighten four TWIST-LOCK® FASTENERS.
- <u>NOTE</u>: Be sure the CAM DOWELS in the RIGHT END insert into the HIDDEN CAMS in the BACKS.




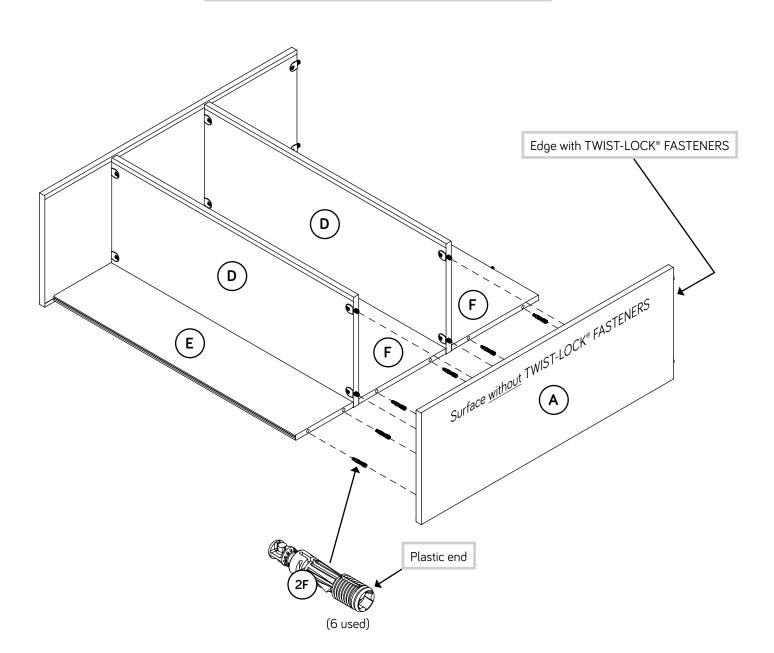

- Carefully stand your unit upright.
- Insert two WOOD DOWELS (42F) into the ENDS (A and B).
- NOTE: You may need to gently tap the WOOD DOWEL in with your hammer.
- Fasten the TOP (C) to the ENDS (A and B). Tighten four TWIST-LOCK[®] FASTENERS.
- Fasten the TOP (C) to the BACK (F). Tighten two HIDDEN CAMS.
- Tighten the HIDDEN CAMS in the BACKS (E and F).
- <u>NOTE</u>: Be sure the WOOD DOWELS in the ENDS insert into the TOP.

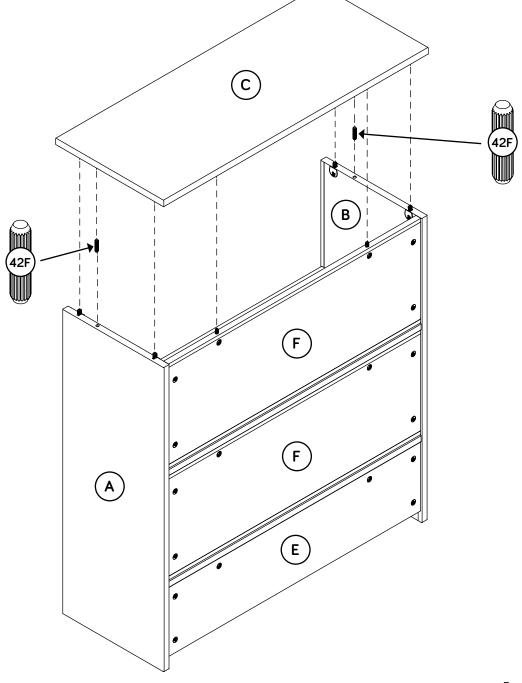

- ✔ Open the FURNITURE TIPPING RESTRAINT KIT (97) and fasten the SAFETY STRAP to the TOP (C). There is <u>no</u> pre-drilled hole. Use extra force when turning the provided short screw into your desired location in the TOP.
- NOTE: Position the SAFETY STRAP hole 2" in from the back edge of the TOP.

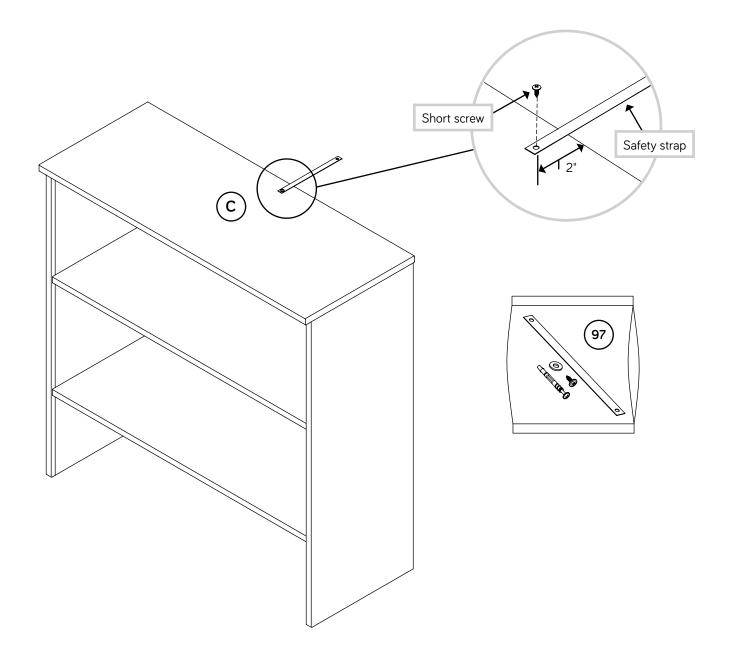


Almost time to celebrate! With a nap.


Zzz

Page 14


- Carefully lay your unit onto its back edges.
- Open the TAPE CARD/PREP PAD KIT (182M). Peel four double stick strips from the TAPE CARD and stick them onto the bottom edges of the ENDS (A and B) as shown in the upper diagram.
- $\ensuremath{{\ensuremath{\Xi}}}$ Next, peel the paper covering from the double stick strips.

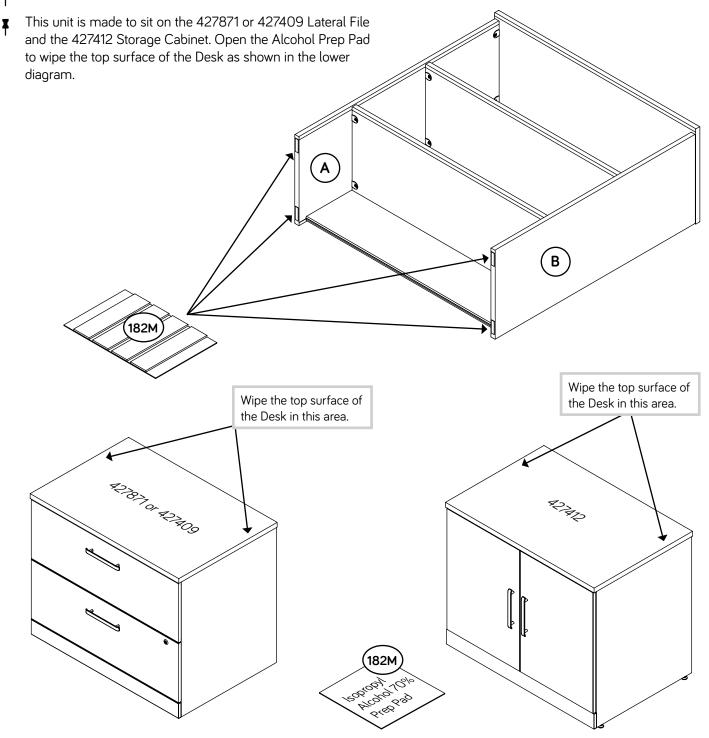

- IMPORTANT: The Hutch <u>cannot</u> be moved after it is set in place. Pre-plan the Hutch placement, then place it completely on the attaching surface.
- With the help of another person, carefully center the Hutch onto your 427871/427409 Lateral File or 427412 Storage Cabinet.
- ▼ <u>NOTE</u>: The back edges of the Hutch and Desk must be even.

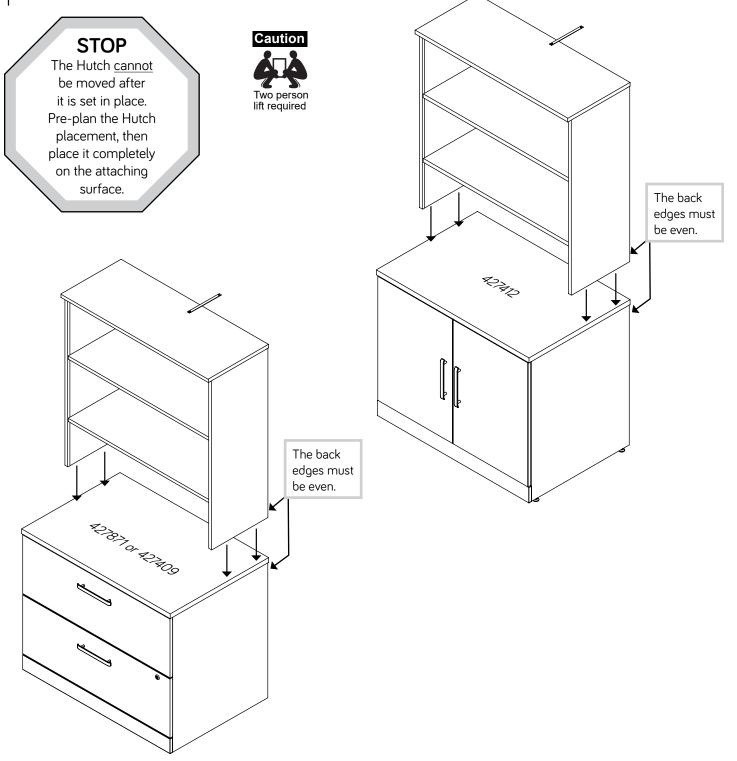

- Position your unit in its final location against a wall. We recommend using the SAFETY STRAP for added stability.
- NOTE: Do not turn the SAFETY DRYWALL ANCHOR into a wall stud. If you prefer to fasten the SAFETY STRAP to a wall stud, go to your local hardware store for proper hardware.
- INSTALLATION INSTRUCTIONS:
 - 1. Insert the SAFETY DRYWALL ANCHOR through the WASHER and the end of the SAFETY STRAP.
 - 2. Using a Phillips screwdriver or a hand drill, press the screw slightly onto the drywall..
 - 3. Apply pressure; turn the screw until a pilot hole is made and the nylon sheath slips through.
 - 4. Turn the screw until it is flush against the wall and you feel a firm resistance.
 - 5. Continue to turn until the screw starts spinning freely.
- NOTE: Before moving your unit to a different location, unscrew the SAFETY DRYWALL ANCHOR from your wall. The nylon sheath will remain behind your wall.

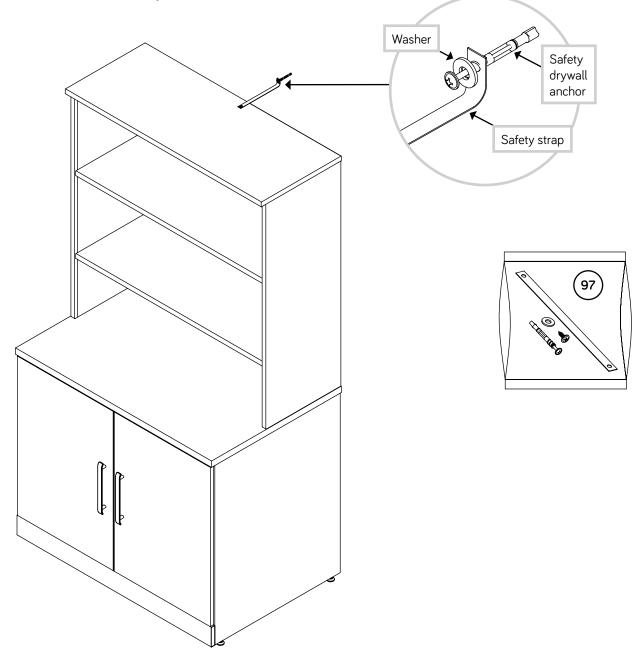

- For long-term care and maintenance of your unit, you may touch up the edges with the TOUCH-UP PEN (10M).
- Using your hammer, gently tap a CAM COVER (129P) onto each visible HIDDEN CAM.
- Using your hammer, gently tap a TWIST-LOCK[®] FASTENER COVER (125P) onto each visible TWIST-LOCK[®] FASTENER.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with a damp cloth. Wipe dry.

