

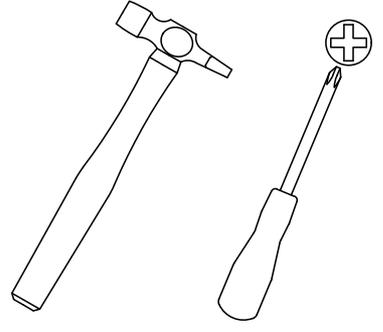
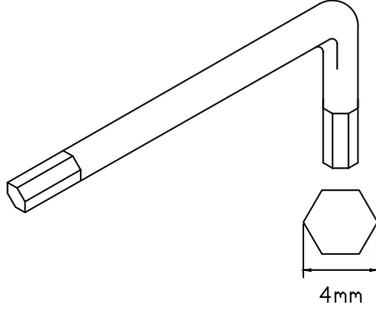



**TOOLS REQUIRED
FOR ASSEMBLY**

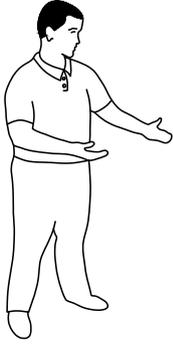


**DON'T STRUGGLE
2 MAN LIFT**

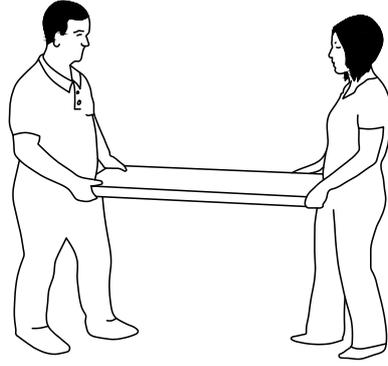

**ALWAYS HANDLE
ITEMS WITH CARE**

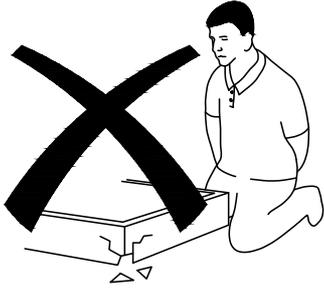

**IF UNSURE CALL
FOR ASSISTANCE**








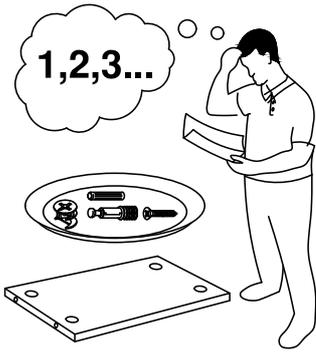


**KEEP FITTINGS AWAY
FROM CHILDREN**






Please check that you have all the components!

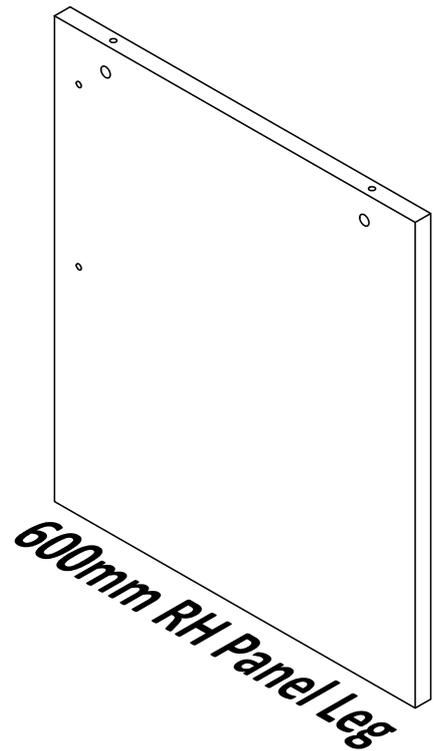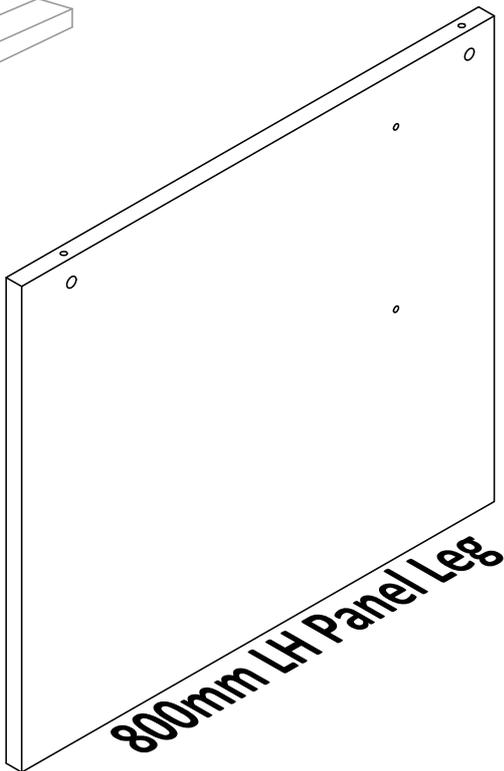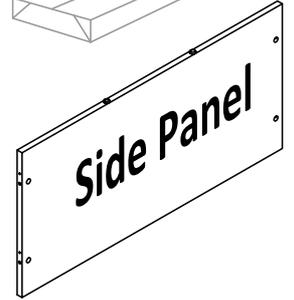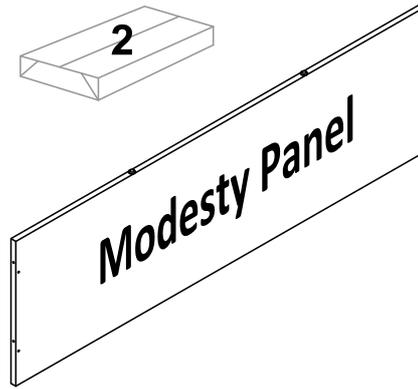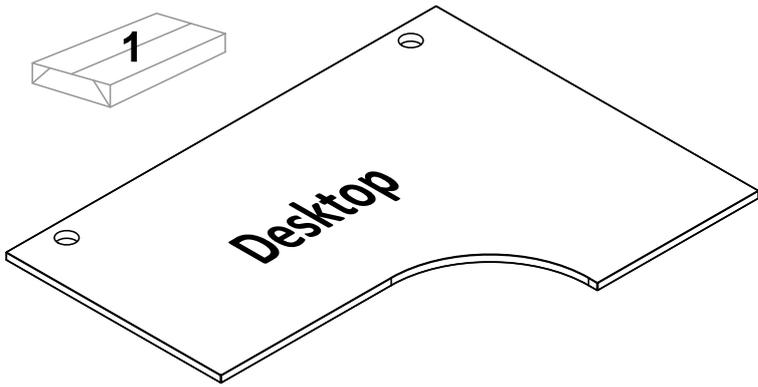

Please check that you have all the hardware!

4mm Allen Key
RM-ALK01

x1

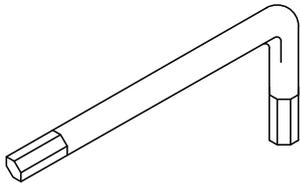


Confirmat Screw 70mm (Silver)
RM-CFM04

x6




Adjustable Foot Dia 25mm
RM-FRL19

x5

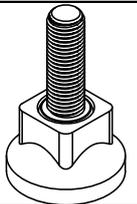


M6x34mm Minifix Bolt
RM-BLT07

x4




24mm Woodfix Pin
RM-PIN04

x2



40x20mm M8 Threaded Ferrule
RM-FRL10

x1

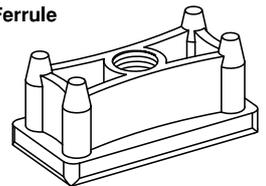

4x20mm Wood Screw
RM-SCR37

x1



Nylon M6x10 Socket
RM-PAR05

x2



M6 Brass Insert
RM-PAR03

x2




15mm Minifix Cam
RM-CAM03

x6



M8 Gesipa Insert
RM-NUT04

x4



1

Step 1

Place your desktop face down onto a clean dry surface and knock the inserts into the pre drilled holes on the underside of the desktop.


Nylon M6x10 Socket
RM-PAR05

x2




M6 Brass Insert
RM-PAR03

x2

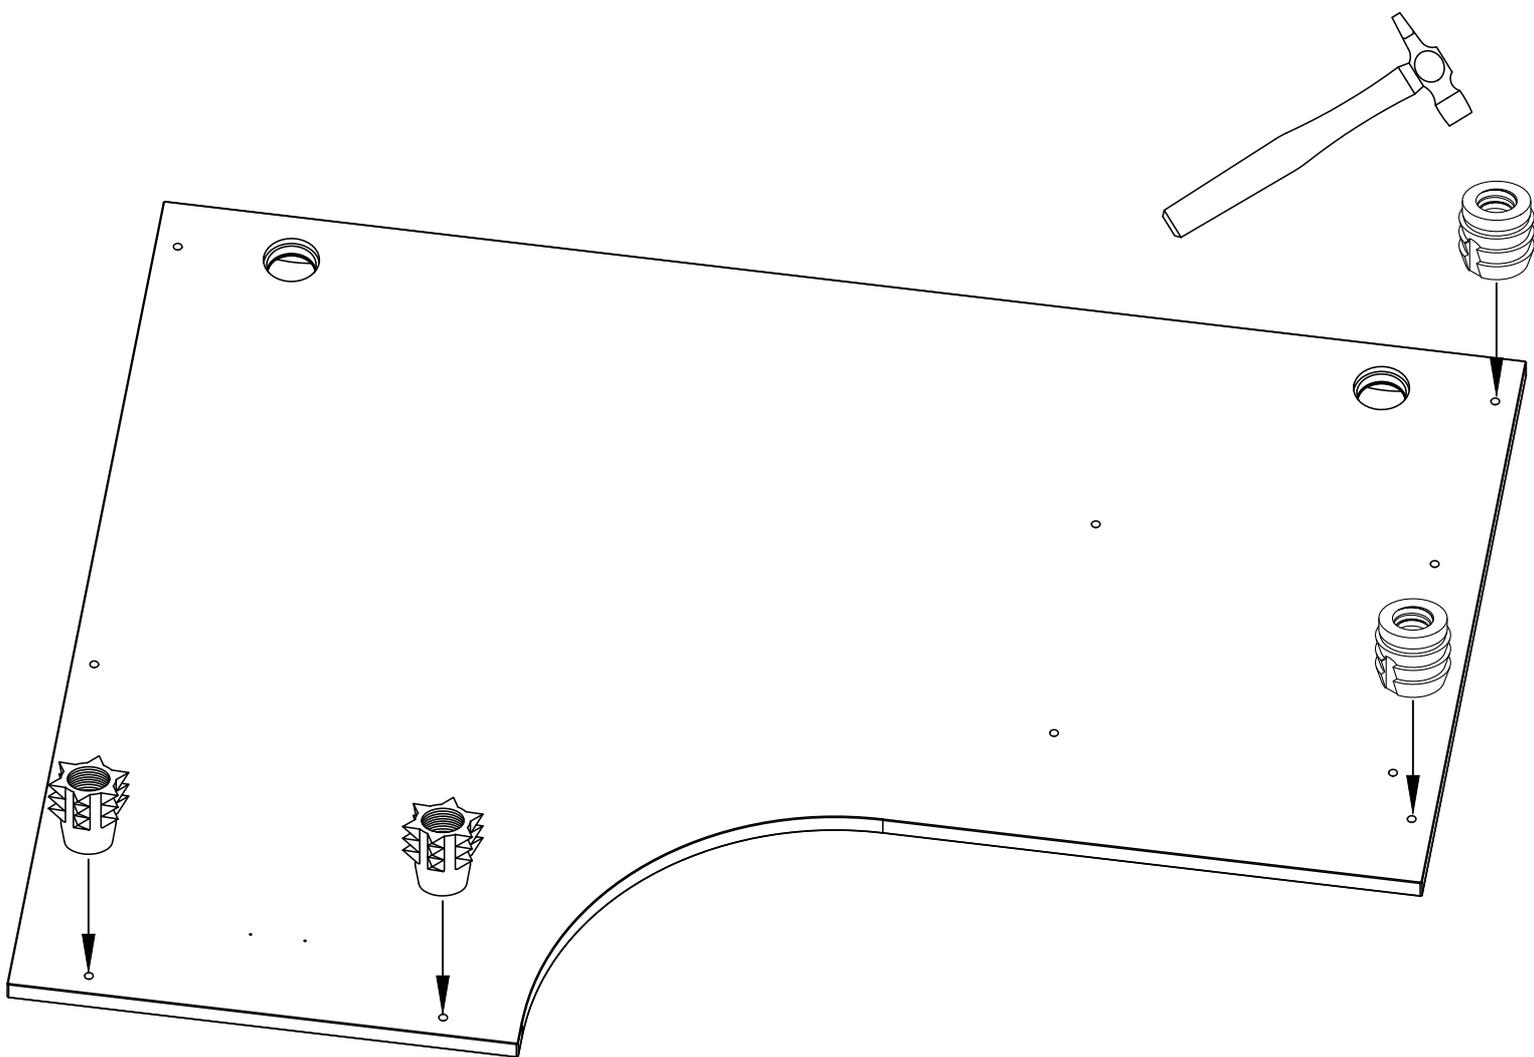

2

Step 2
Screw in the woodfix pins into the modesty panel. Ensure they are screwed into the RH side of the panel.

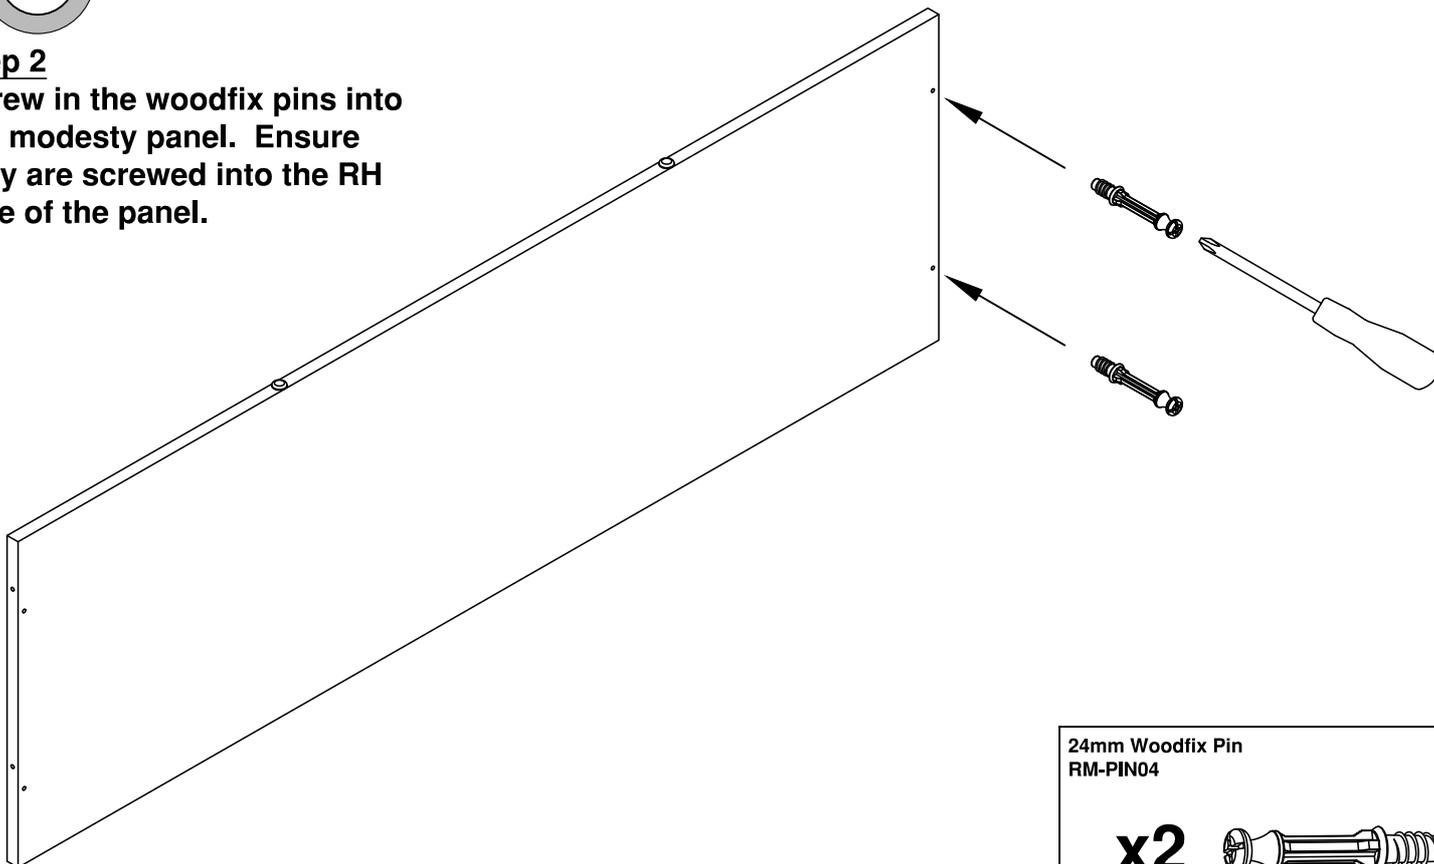


24mm Woodfix Pin
RM-PIN04

x2



3

Step 3
Insert the minifix cams into the side panel. Ensure they are inserted into the LH side of the panel and that the fitting is pushed all the way down and that the arrow guideline is aligned with the hole in the edge of the panel.

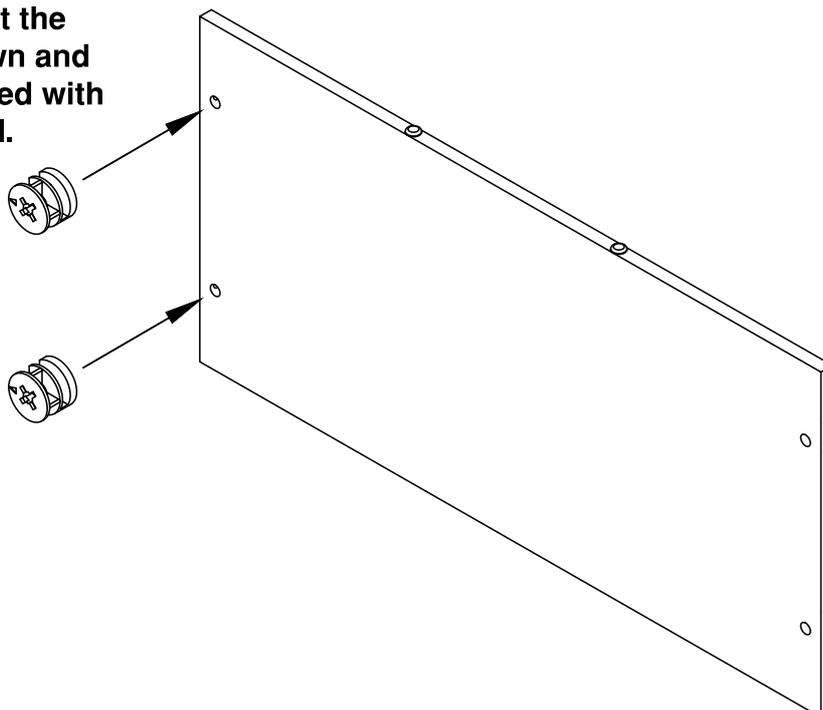


15mm Minifix Cam
RM-CAM03

x2




4

Step 4
Knock in the gesipa inserts
into the holes on the bottom
edge of the panel end leg.
Repeat for both legs.

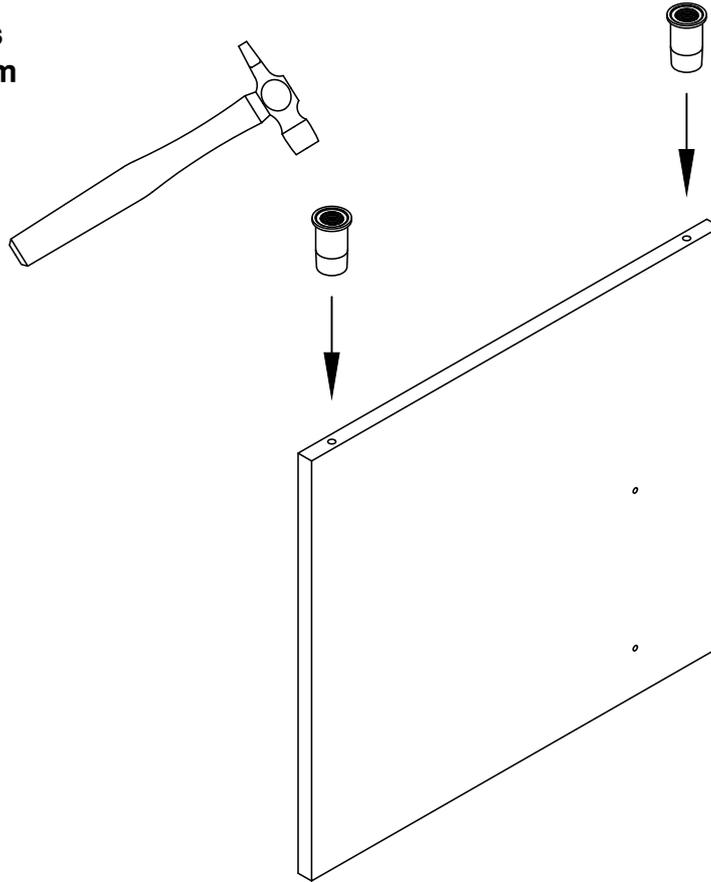


M8 Gesipa Insert
RM-NUT04

x4




5

Step 5
Screw the 25mm adjustable feet
into the bottom of the panel end leg.
Repeat for both legs.

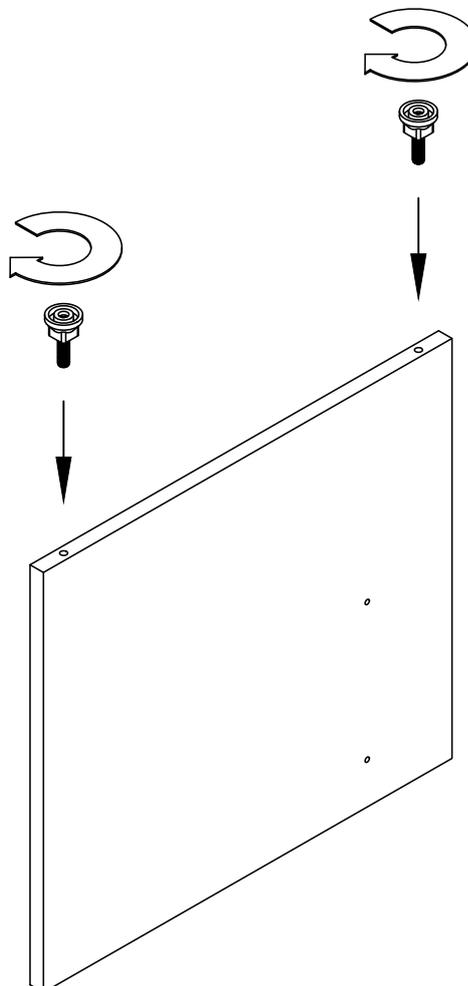


Adjustable Foot Dia 25mm
RM-FRL19

x4



6

Step 6
Insert the minifix cams into the panel end leg. Ensure the fitting is pushed all the way down and that the arrow guideline is aligned with the hole in the edge of the panel. Repeat for both legs.

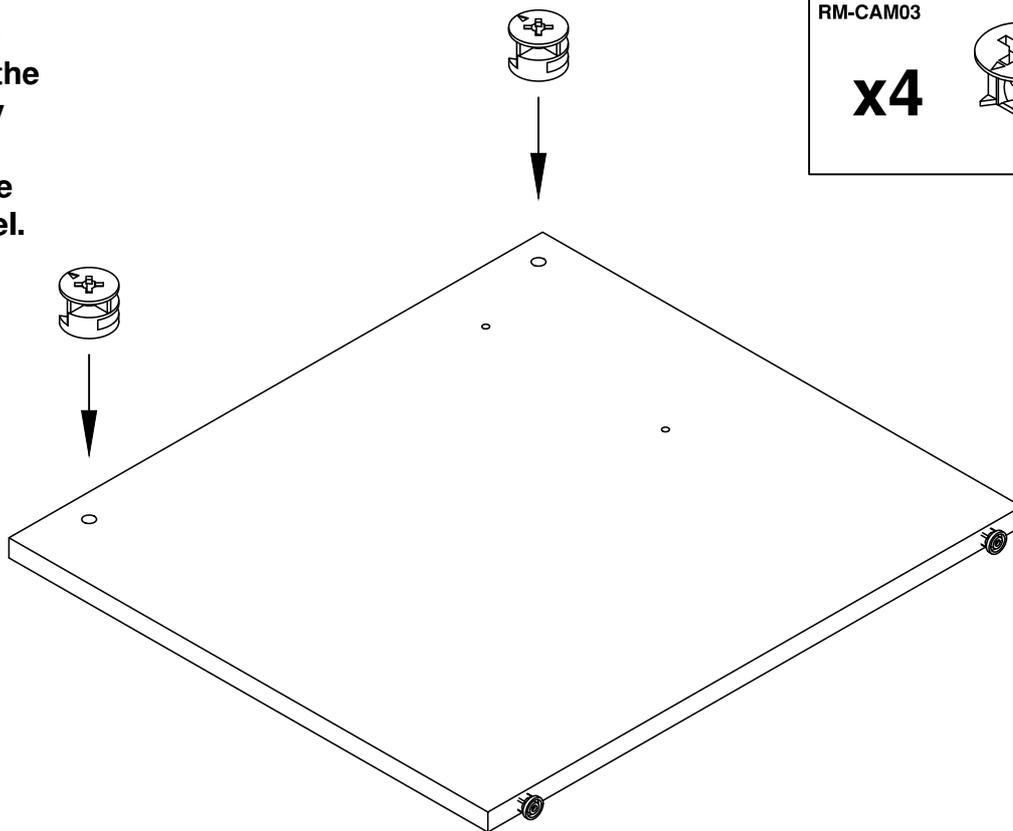



15mm Minifix Cam
RM-CAM03

x4




7

Step 7
Insert the threaded ferrule into the end of the steel corner post leg. No tools should be used for this step, do not hit with a hammer as this will result in damage to the plastic fitting.




40x20mm M8 Threaded Ferrule
RM-FRL10

x1

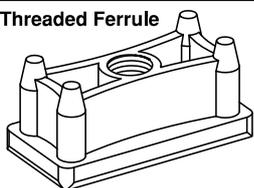


8

Step 8
Screw the 25mm adjustable foot into the threaded ferrule.




Adjustable Foot Dia 25mm
RM-FRL19

x1

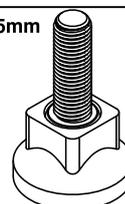


9

Step 9
Screw the M6x34mm minifix bolts into the inserts that you inserted in step 1.

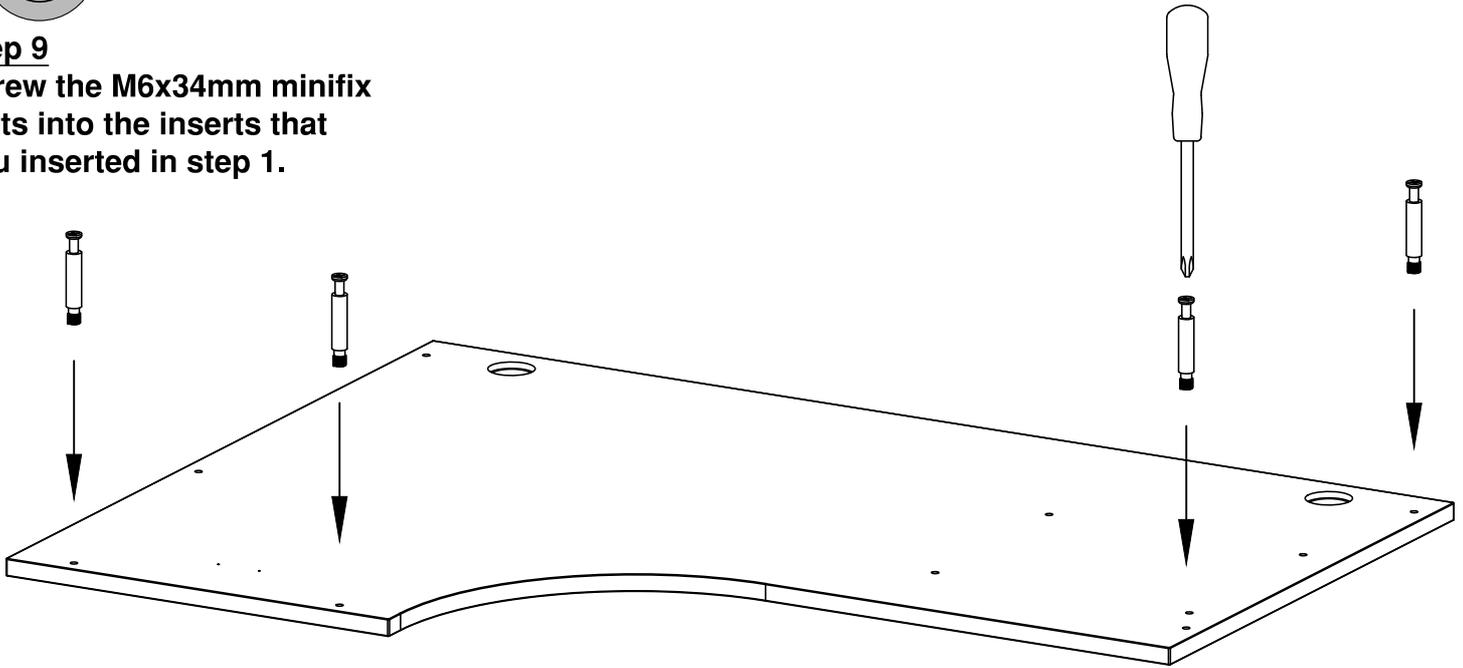



M6x34mm Minifix Bolt
RM-BLT07

x4




10

Step 10
Place the LH Leg onto the desktop ensuring that the cam fittings engage over the minifix bolts. Once in place tighten the cams to lock the panel end leg into place.

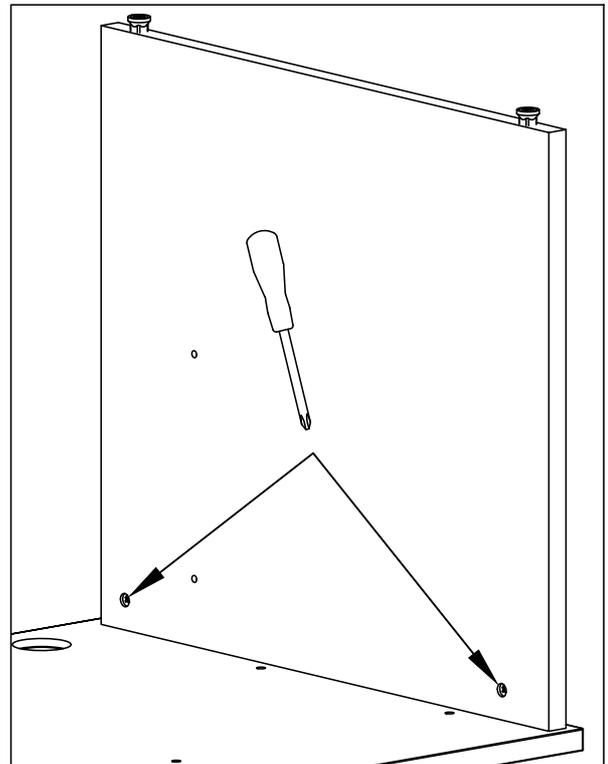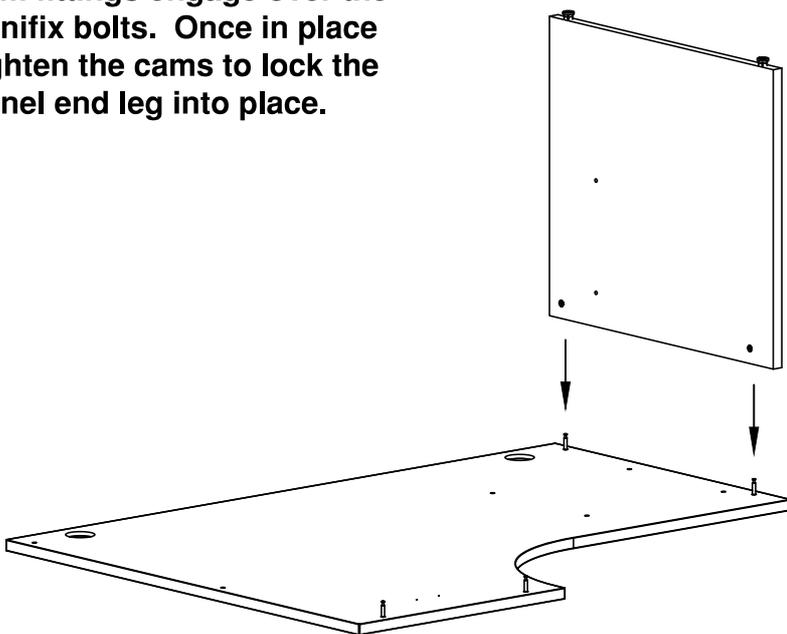


11

Step 11
Line the modesty panel up with the RH panel end leg ensuring the pre drilled holes are aligned. Attach the leg to the modesty panel using the 70mm confirmat screws.

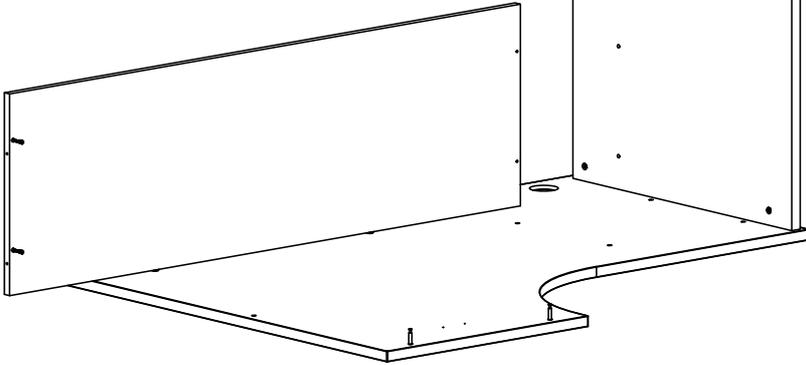


Confirmat Screw 70mm (Silver)
RM-CFM04

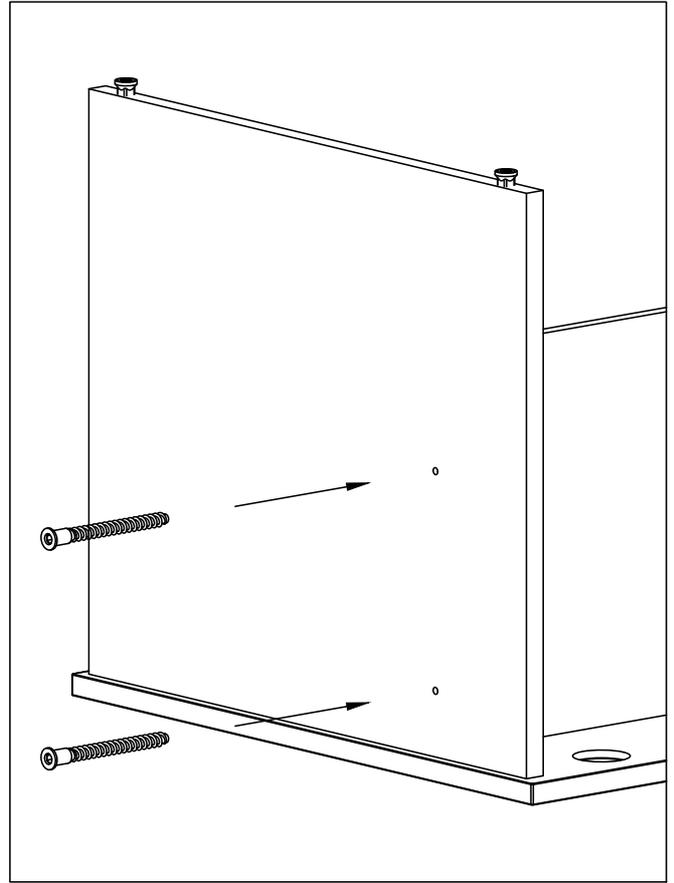

12

Step 12
Line the corner post leg up with the modesty panel ensuring the pre drilled holes are aligned. Attach the leg to the modesty panel using the 70mm confirmat screws.


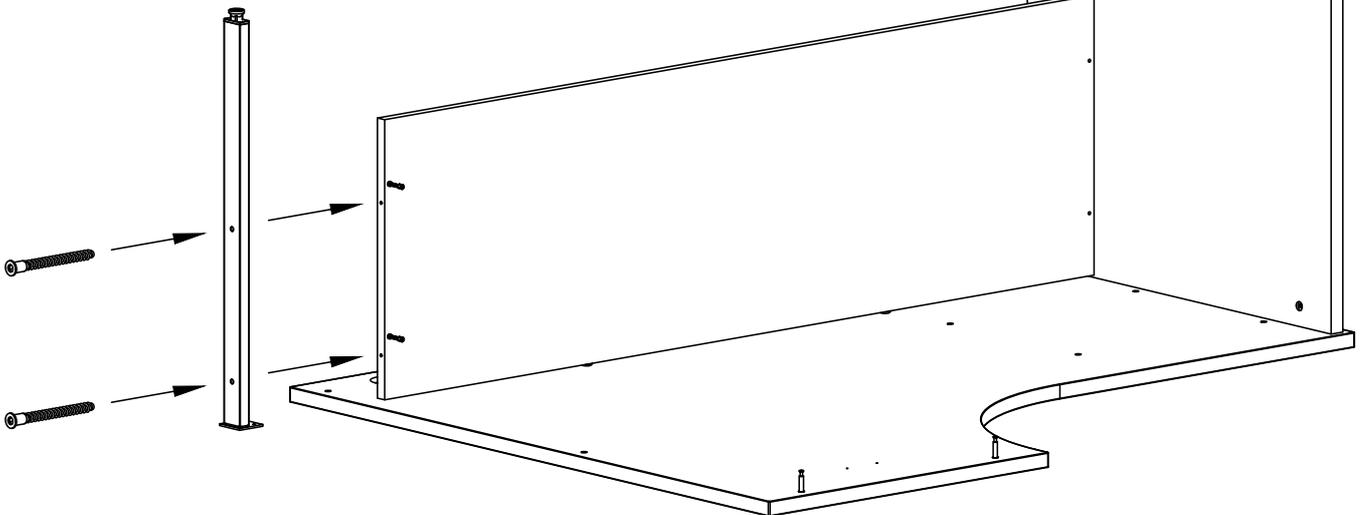


Confirmat Screw 70mm (Silver)
RM-CFM04




13

Step 13
Position the side panel onto the modesty panel ensuring that the cam fittings engage over the woodfix pins. Once in place tighten the cams to lock the side panel into place.

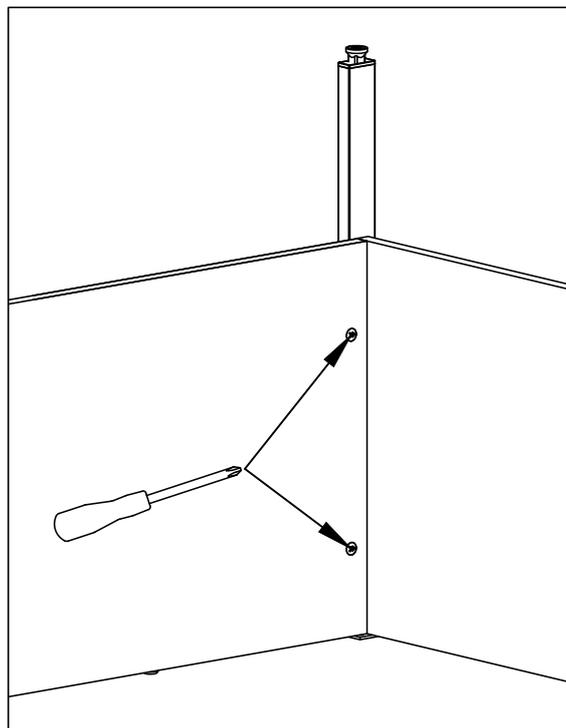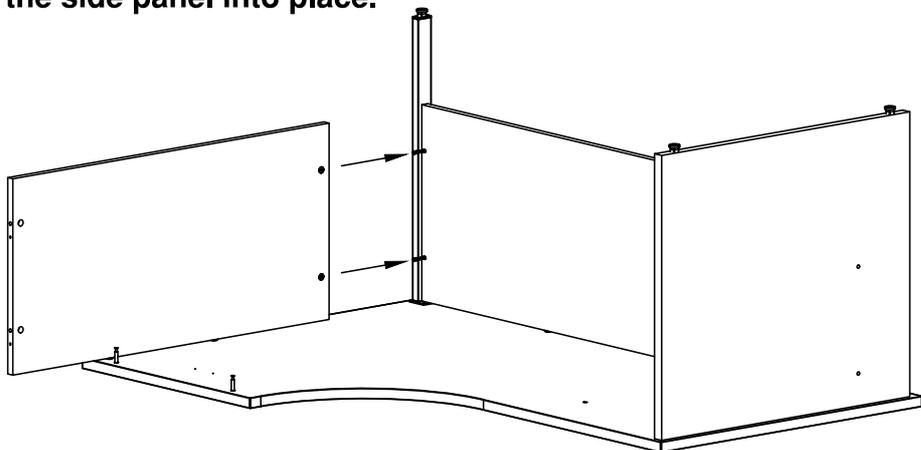

14


Step 14
Place the LH panel end leg onto the desktop ensuring that the cam fittings engage over the minifix bolts.

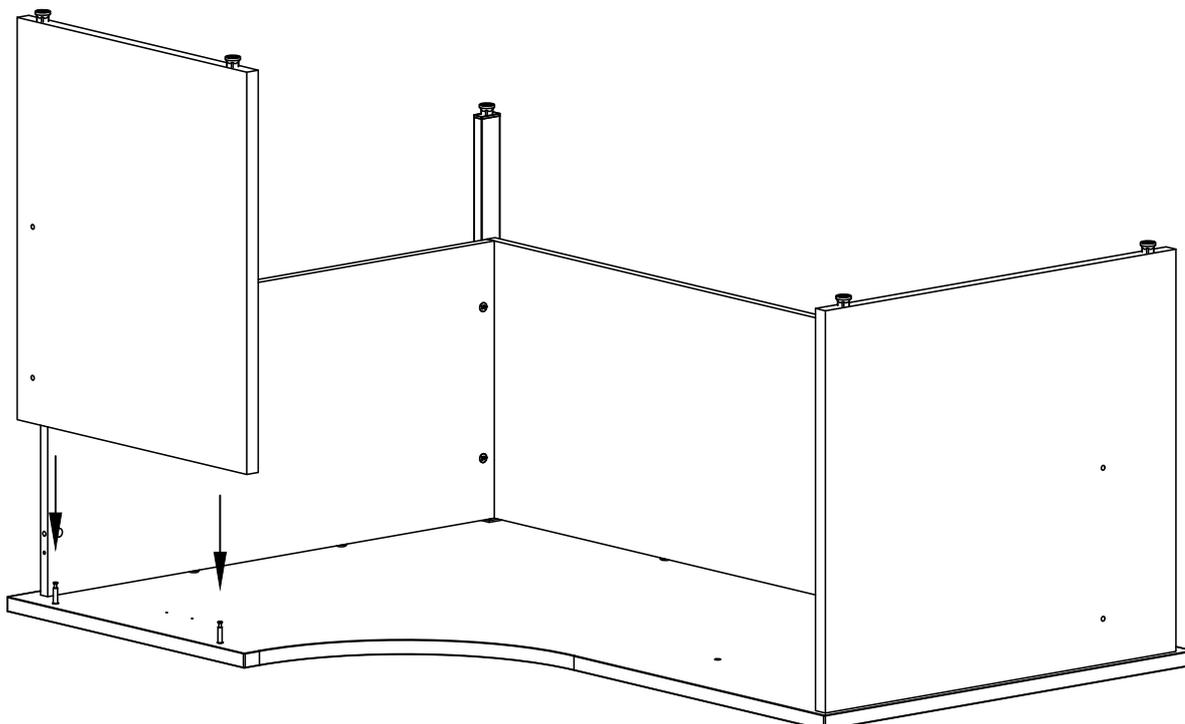

15



Step 15
Attach the LH panel end leg
to the modesty panel using
the 70mm confirmat screws.

Confirmat Screw 70mm (Silver)
RM-CFM04

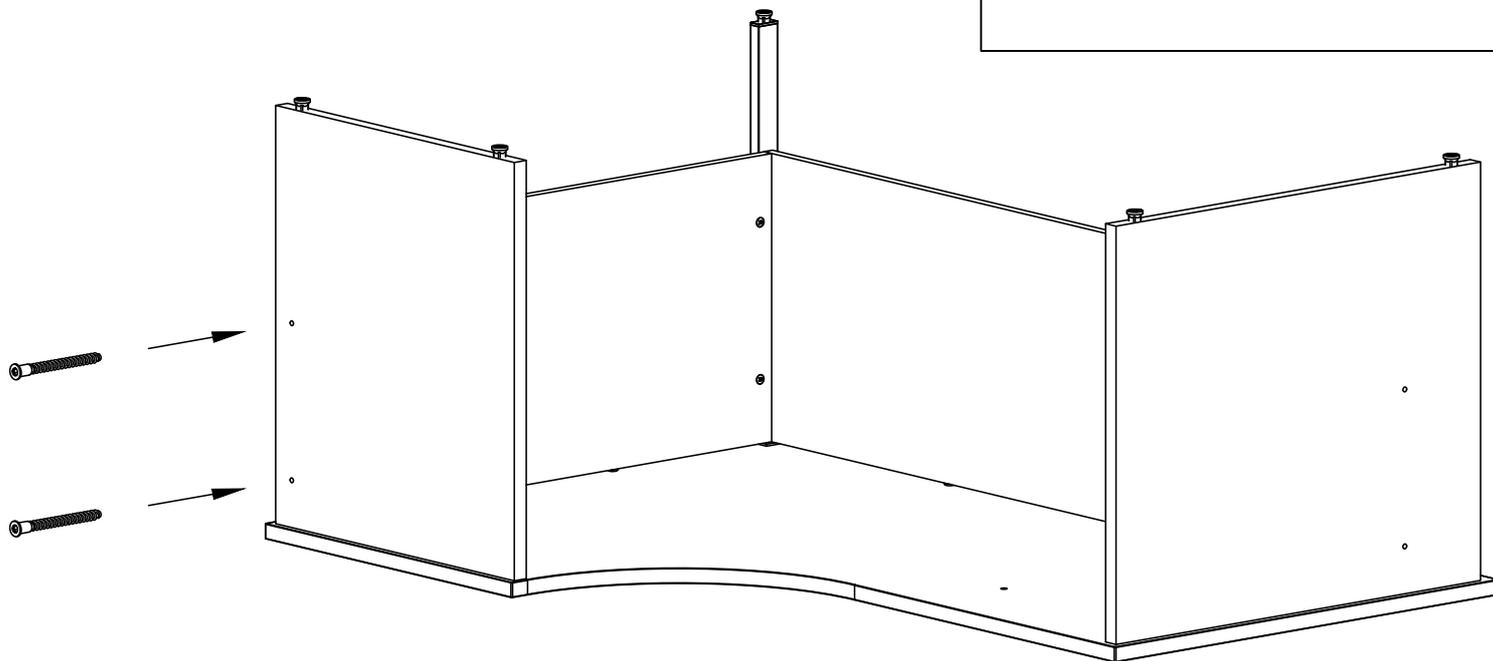

16



Step 16
Tighten the cams to lock the
panel end leg into place.

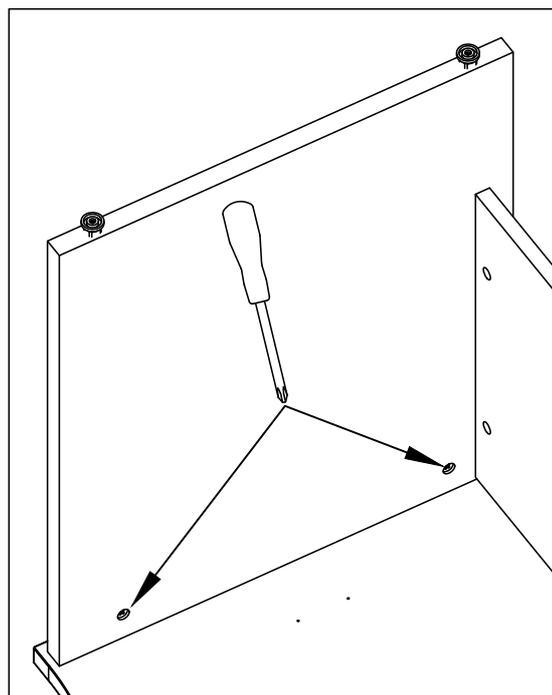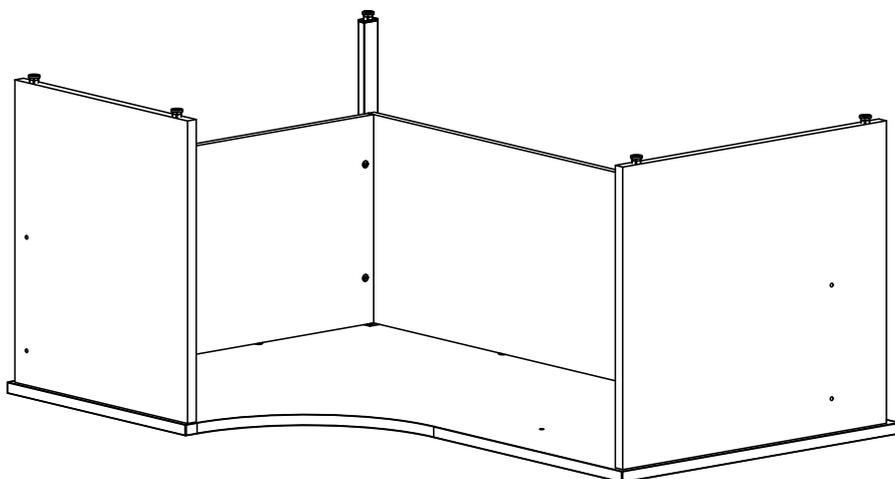

Step 17
Fix the corner post leg to the desktop using the 20mm wood screw.

4x20mm Wood Screw
RM-SCR37

x1

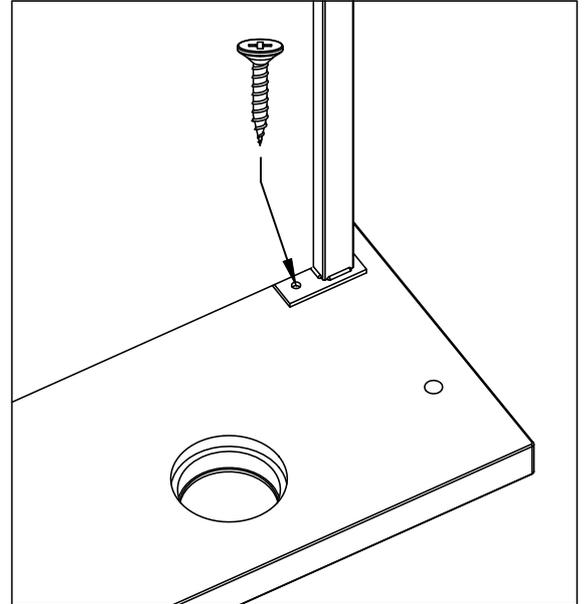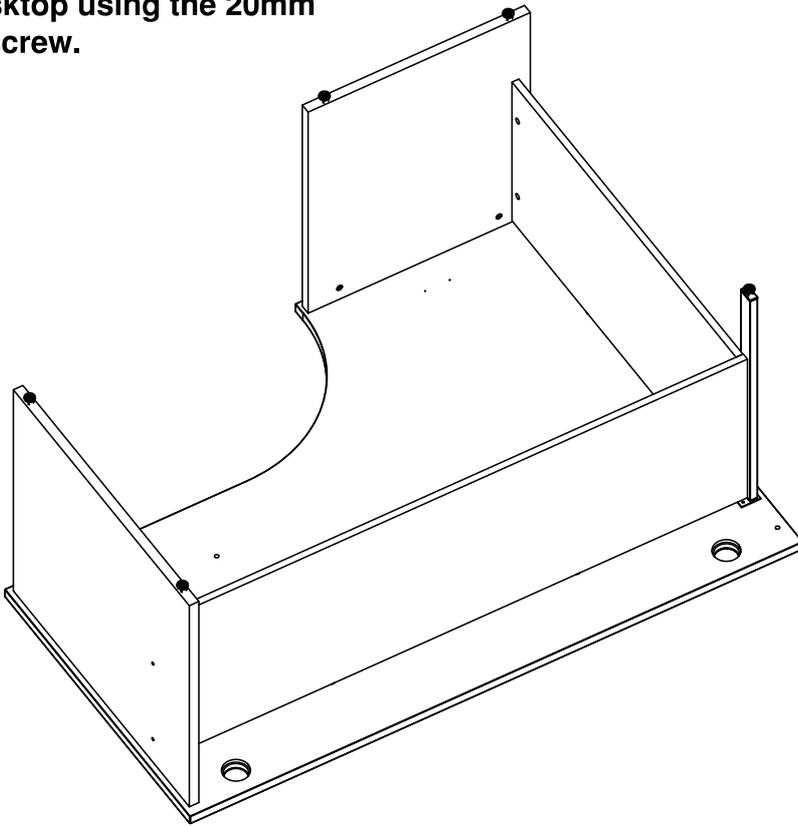

Matching adhesive caps are provided to cover any visible screw heads or cam fittings.

