



# RU8D RU12D







Reception Desk 800  
Reception Desk 1200

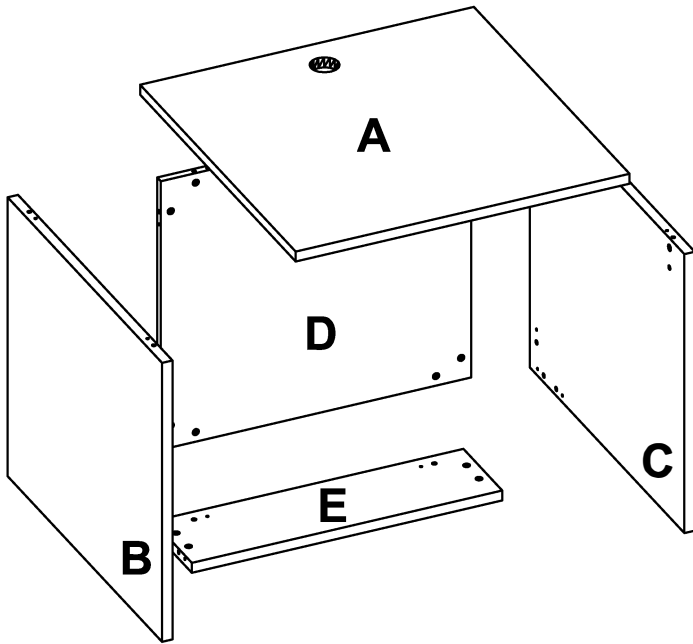




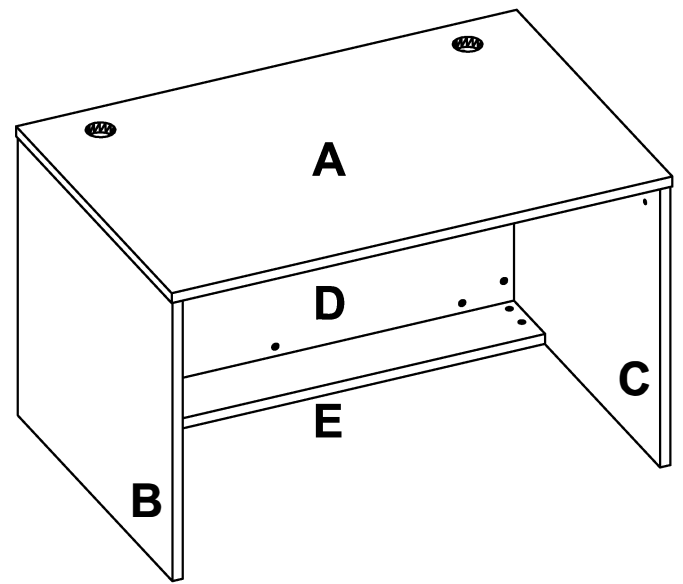


## RU8D

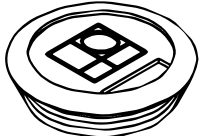



## RU12D



QTY	DESCRIPTION
16	Wood dowel 5mm 012-01-074 
16	Cam 15N 111-22-021 
16	Quick fix pin 012-01-099 
4	Adjustable Foot 012-01-030 
1	Allen Key F034 
1	Cableport 000-00-002 

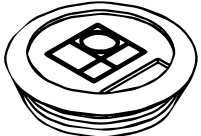QTY	DESCRIPTION
16	Wood dowel 5mm 012-01-074 
18	Cam 15N 111-22-021 
18	Quick fix pin 012-01-099 
4	Adjustable Foot 012-01-030 
1	Allen Key F034 
2	Cableport 000-00-002 





1

<h1>RU8D</h1>	
Quick fix pin 012-01-099	
<b>6</b>	

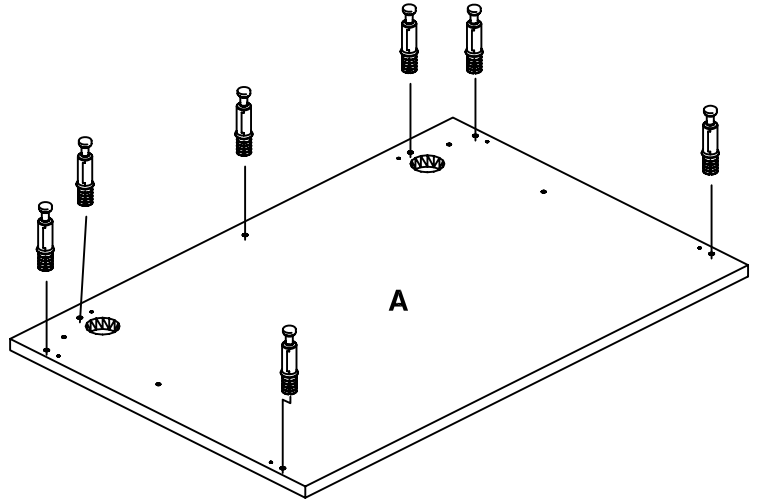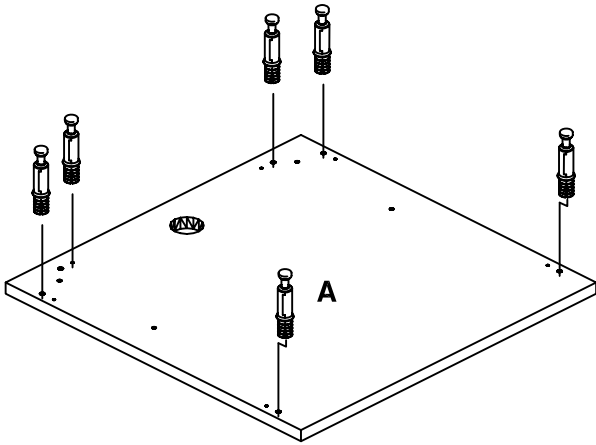



<h1>RU12D</h1>	
Quick fix pin 012-01-099	
<b>7</b>	





2

<b>2</b>	Wood dowel 5mm 012-01-074 
<b>4</b>	Quick fix pin 012-01-099 
<b>2</b>	Cam 15N 111-22-021 
<b>2</b>	Adjustable Foot 012-01-030 

3





<b>2</b>	Wood dowel 5mm 012-01-074 
<b>4</b>	Quick fix pin 012-01-099 
<b>2</b>	Cam 15N 111-22-021 
<b>2</b>	Adjustable Foot 012-01-030 

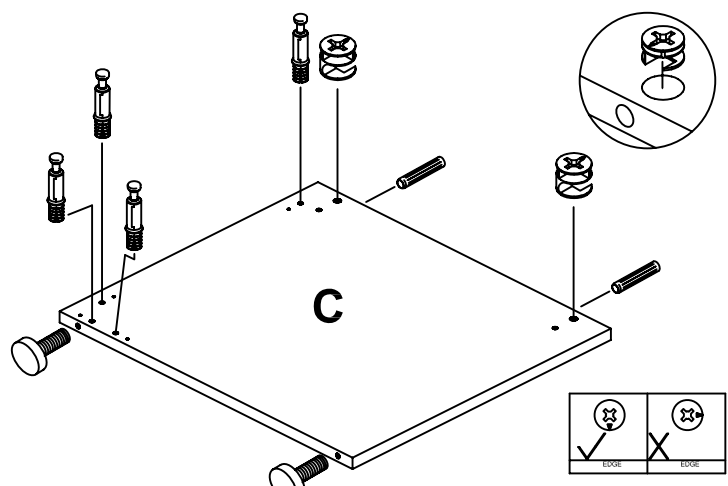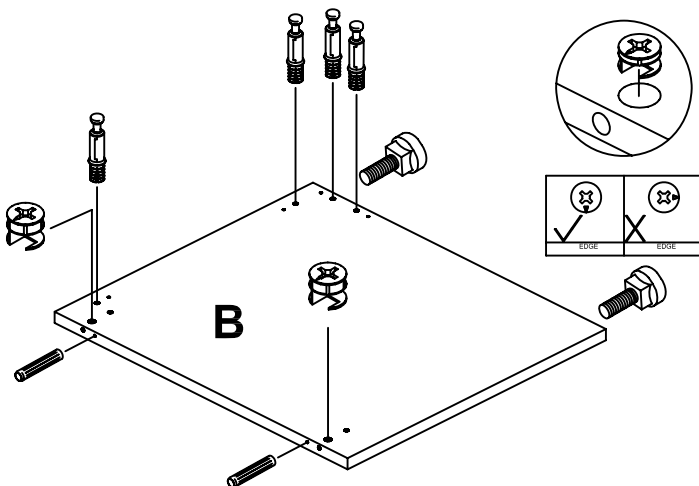

4

<b>RU8D</b>	
8	Wood dowel 5mm 012-01-074
8	Cam 15N 111-22-021





<b>RU12D</b>	
8	Wood dowel 5mm 012-01-074
10	Cam 15N 111-22-021

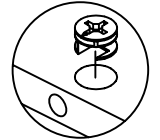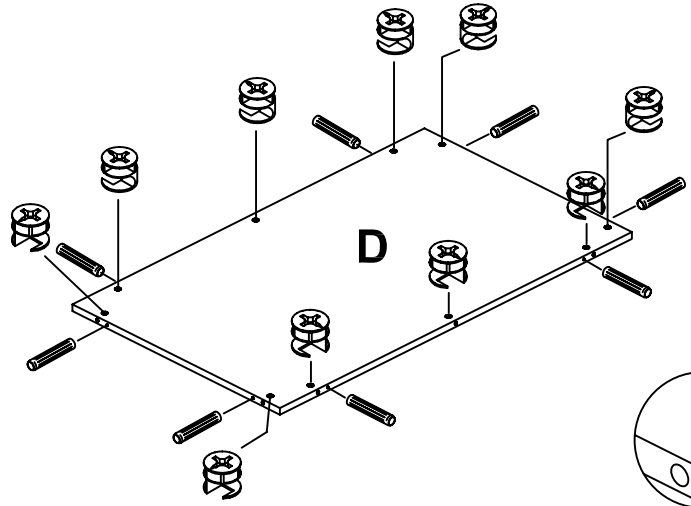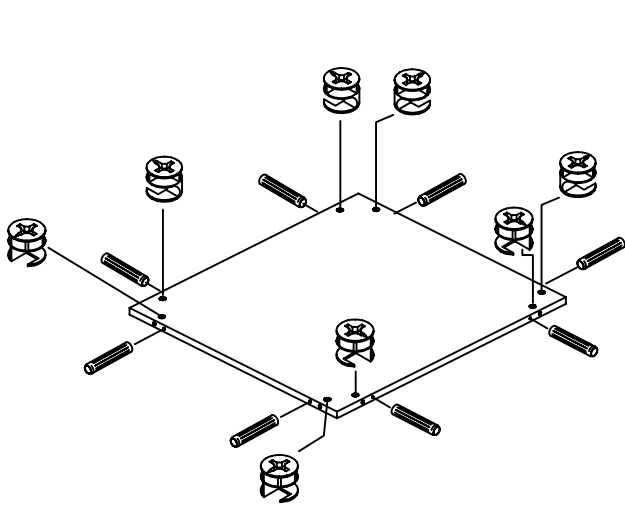



5

<b>RU8D</b>	
4	Wood dowel 5mm 012-01-074
4	Cam 15N 111-22-021
2	Quick fix pin 012-01-099



<b>RU12D</b>	
4	Wood dowel 5mm 012-01-074
4	Cam 15N 111-22-021
3	Quick fix pin 012-01-099

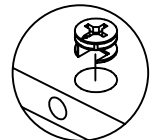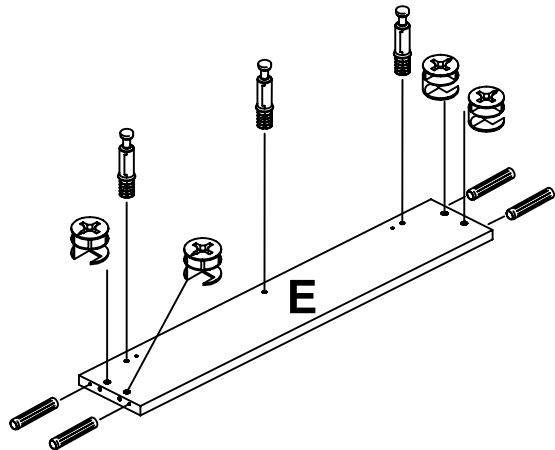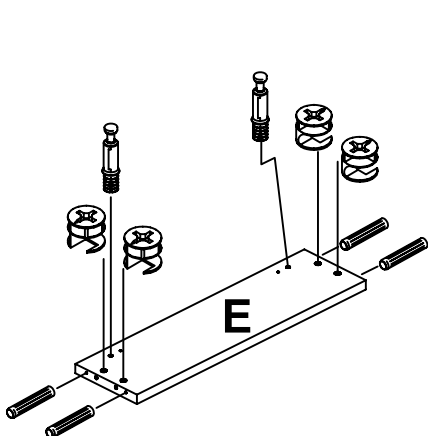



6

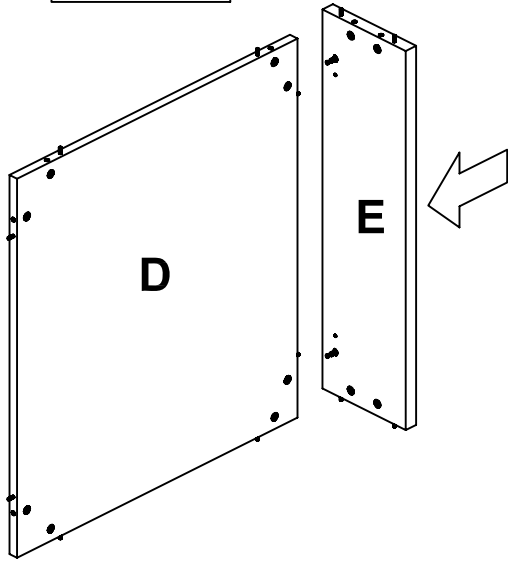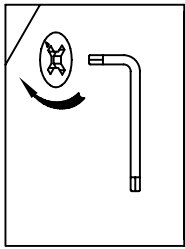

7

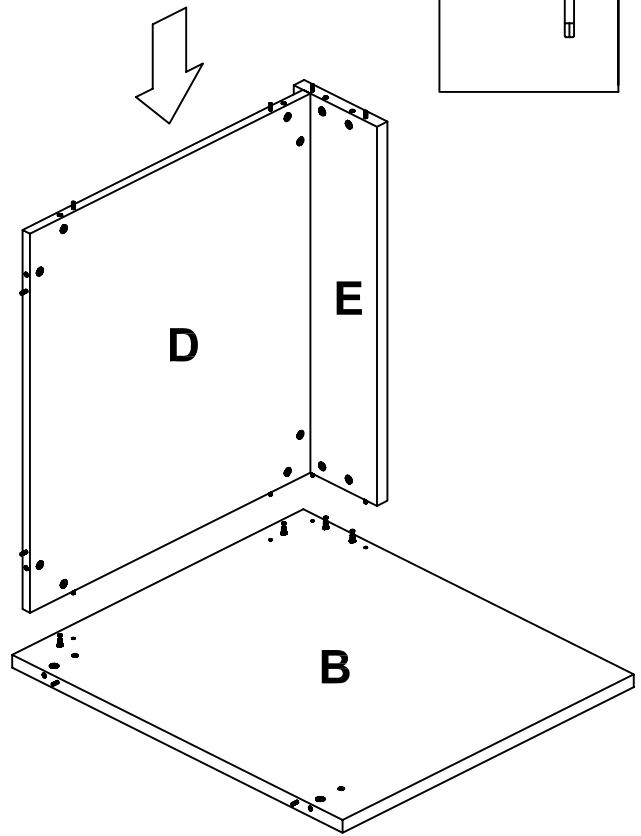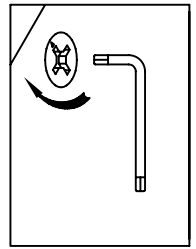

8

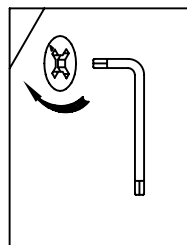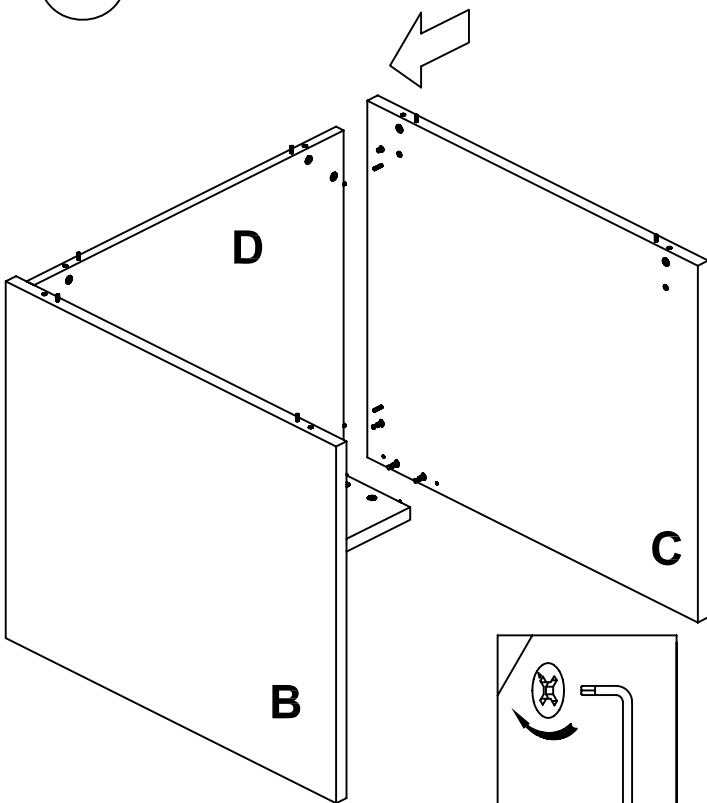

9

Cableport  
000-00-002

