


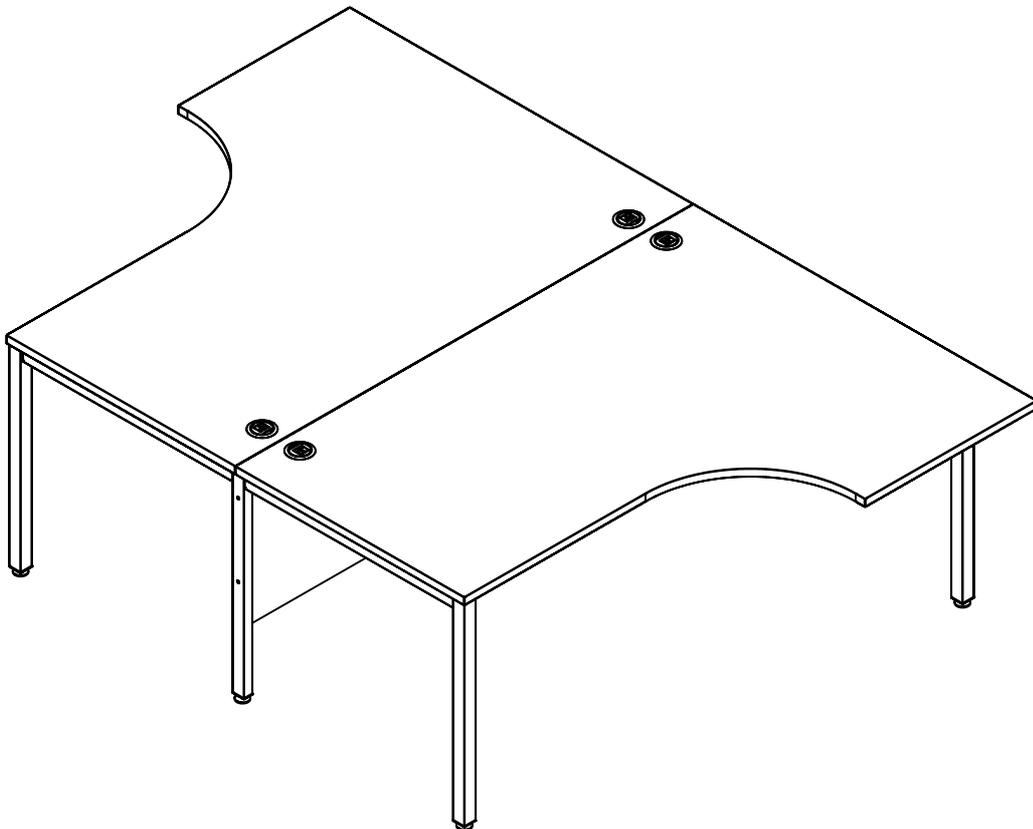
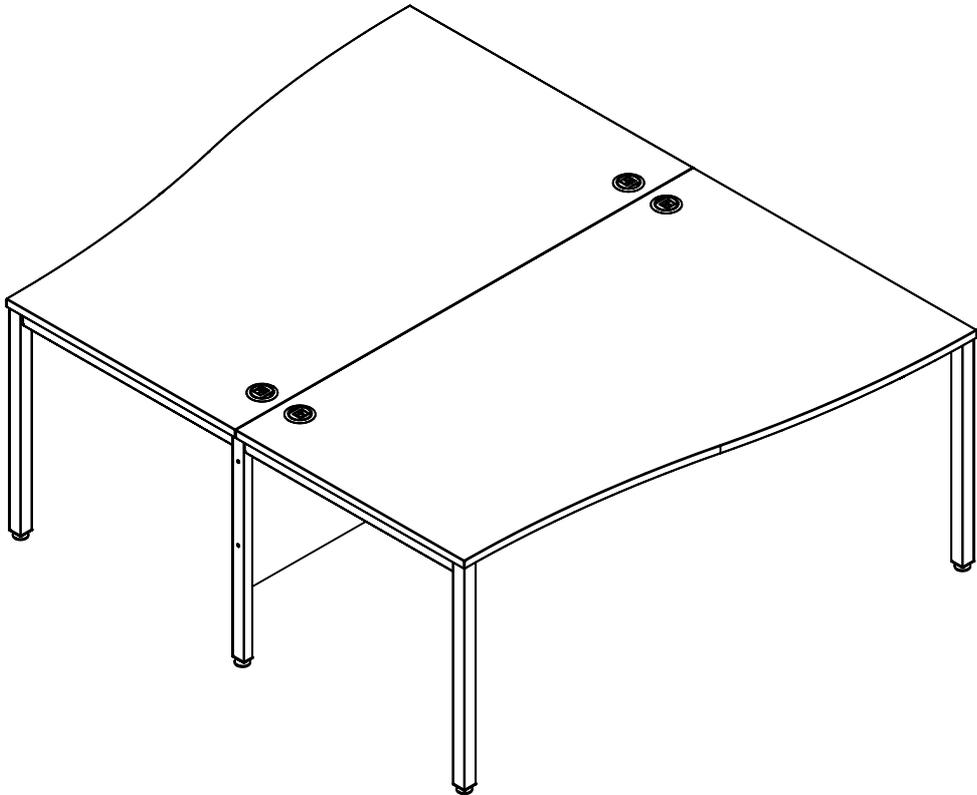
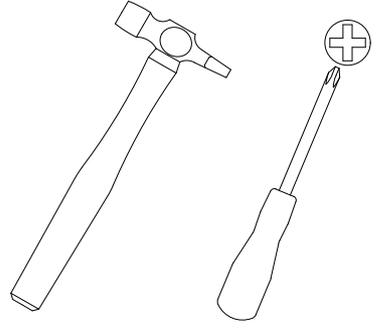


N20HLS


2000mm Back to Back H-Frame End Legs

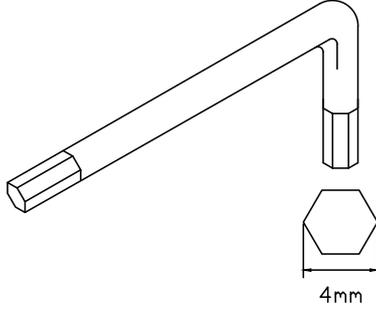


**TOOLS REQUIRED
FOR ASSEMBLY**

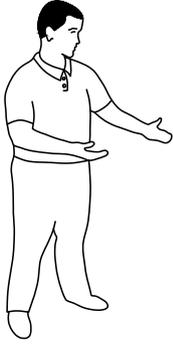


**DON'T STRUGGLE
2 MAN LIFT**

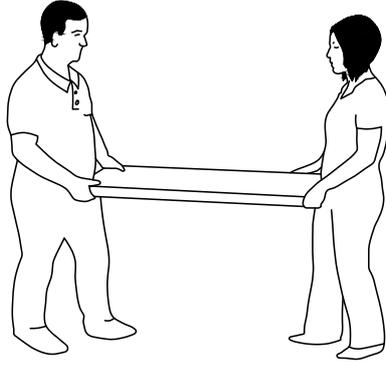

**ALWAYS HANDLE
ITEMS WITH CARE**

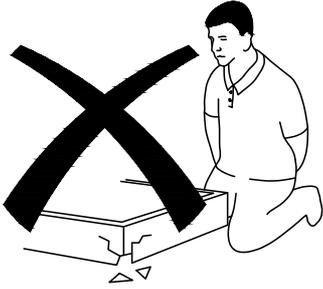

**IF UNSURE CALL
FOR ASSISTANCE**



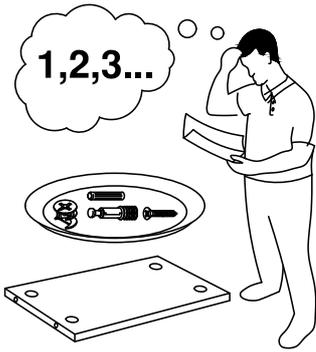


**KEEP FITTINGS AWAY
FROM CHILDREN**









Please check that you have all the components!

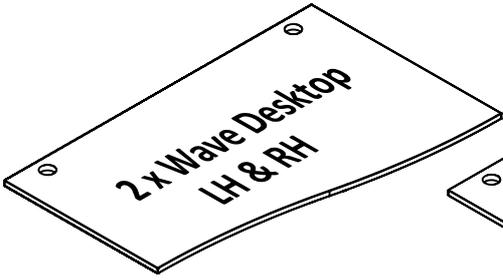

Or

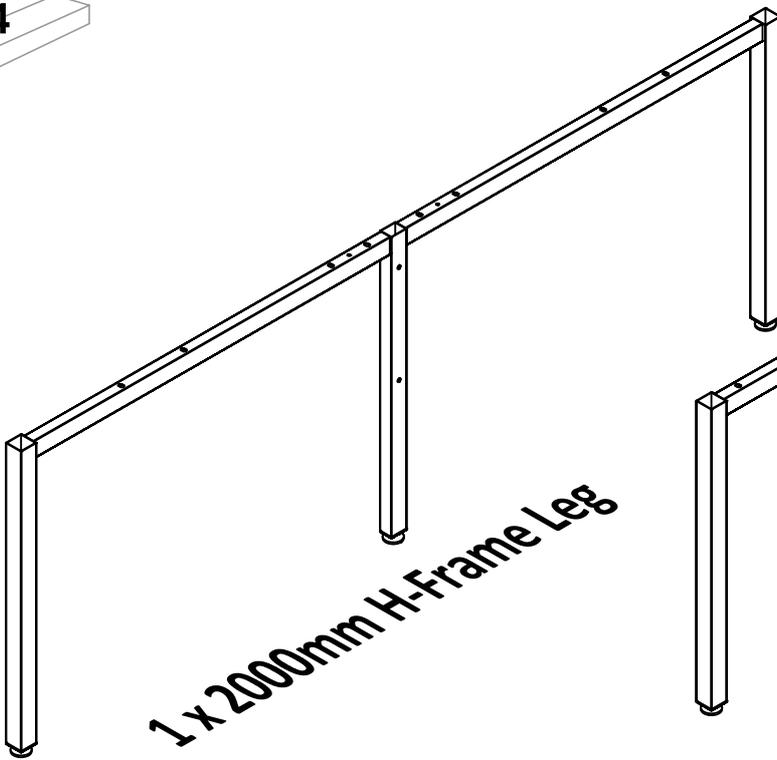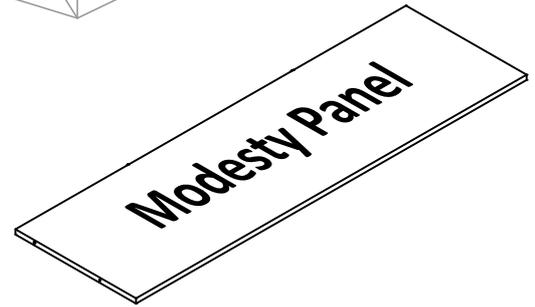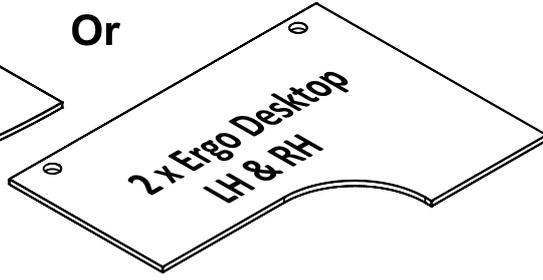

1 x 2000mm H-Frame Leg

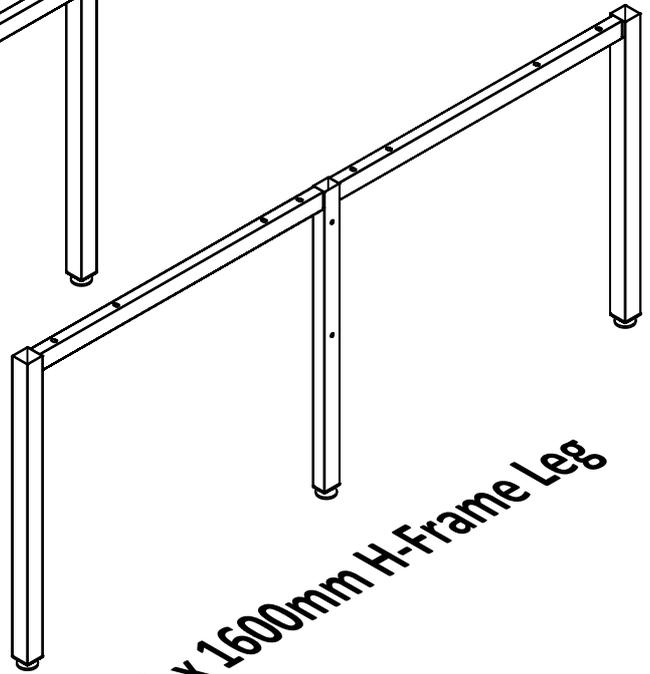


1 x 1600mm H-Frame Leg



Please check that you have all the hardware!

4mm Allen Key
RM-ALK01

x1

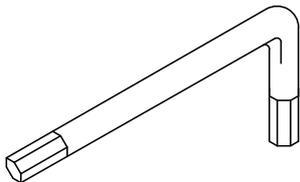

Confirmat Screw 70mm (Silver)
RM-CFM04

x4




Nylon M6x10 Socket
RM-PAR05

x16




Connect Bolt M6x50mm
RM-BLT05

x8




Adjustable Foot Dia 38mm
RM-FRL20

x6

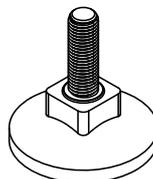


Wood Screw 8 x 57mm
RM-SCR30

x4




1

Step 1
Place your desktop face down onto a clean dry surface and knock the nylon inserts into the pre drilled holes on the underside of the desktop.
Repeat for both tops.

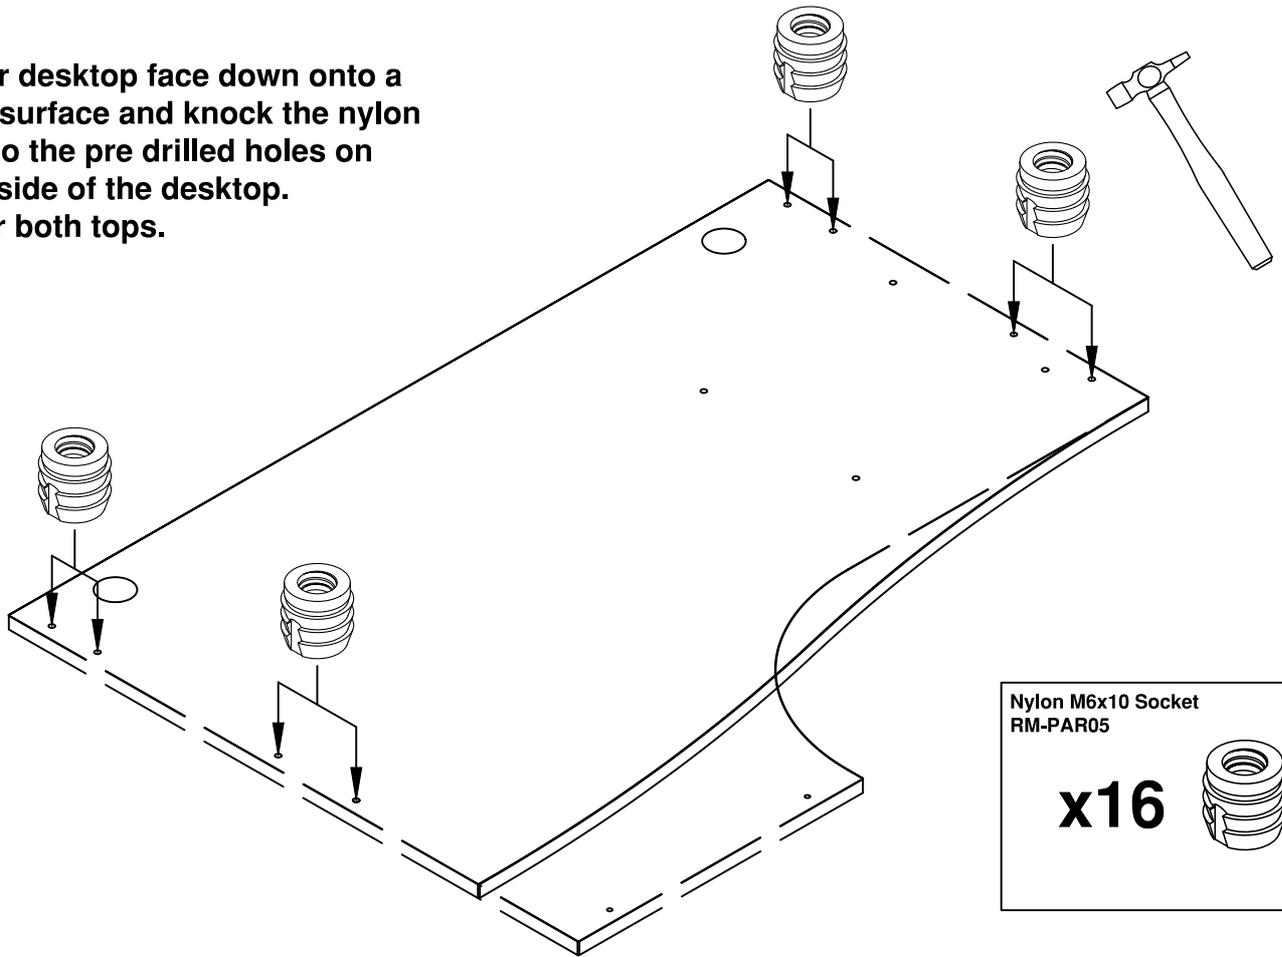


2

Step 2
Screw the 38mm adjustable feet into the bottom of each leg.

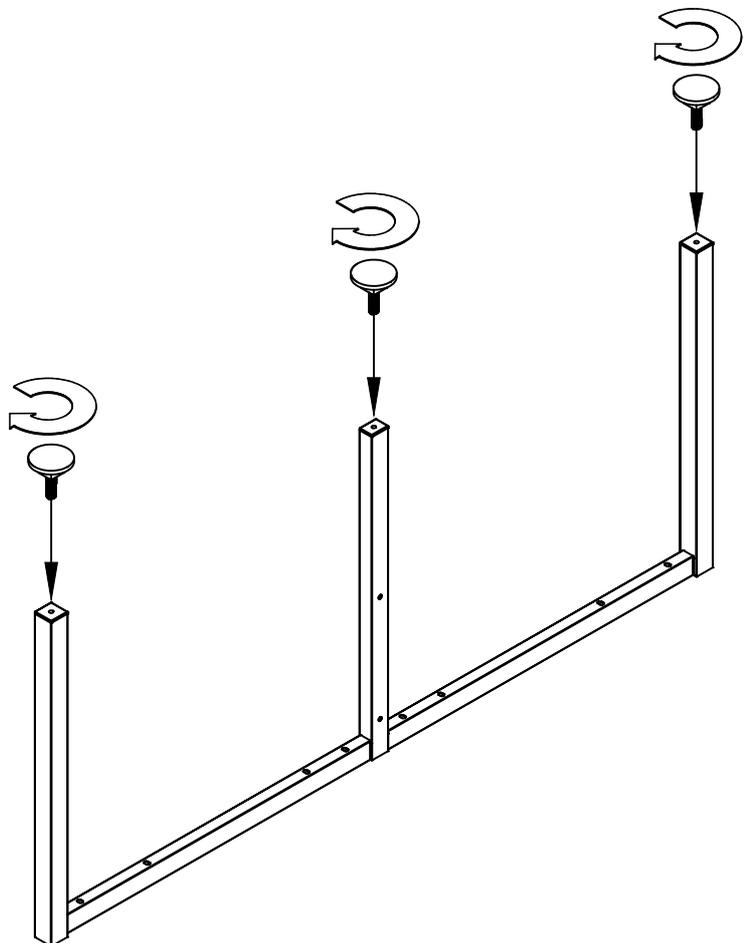


Adjustable Foot Dia 38mm
RM-FRL20

x6

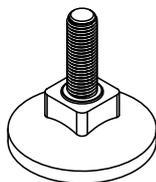

3

Step 3
Attach the 1600mm leg to the modesty panel using the 70mm confirmat screws.

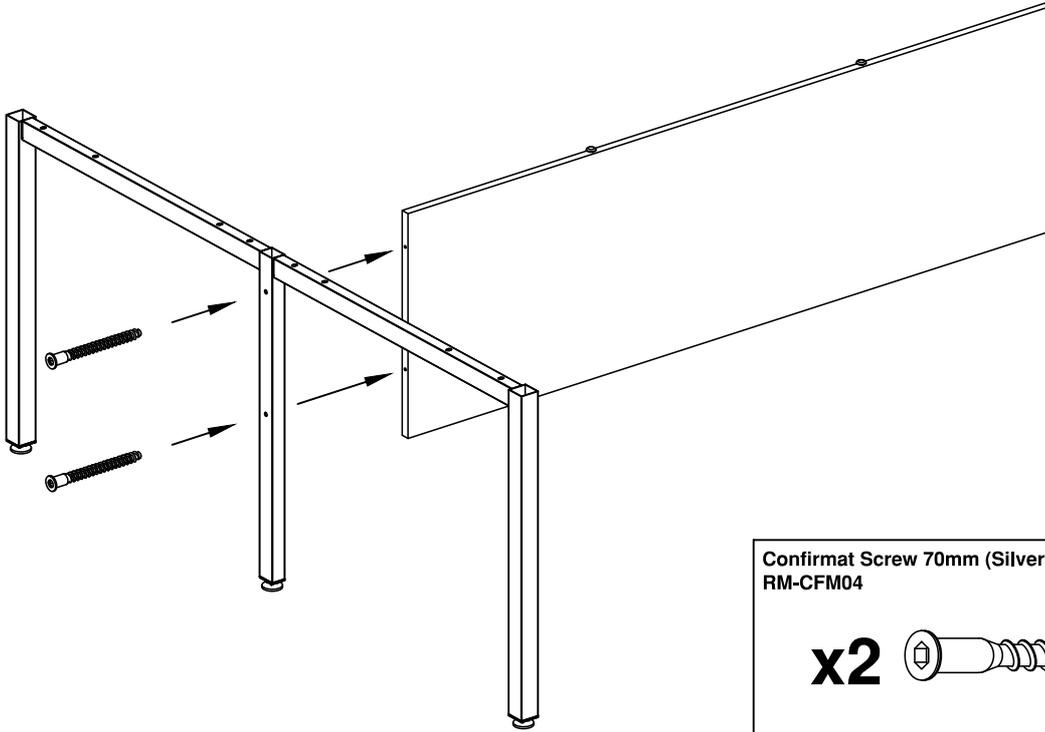


Confirmat Screw 70mm (Silver)
RM-CFM04



4

Step 4
Attach the 2000mm leg to the opposite end of the modesty panel using the 70mm confirmat screws.

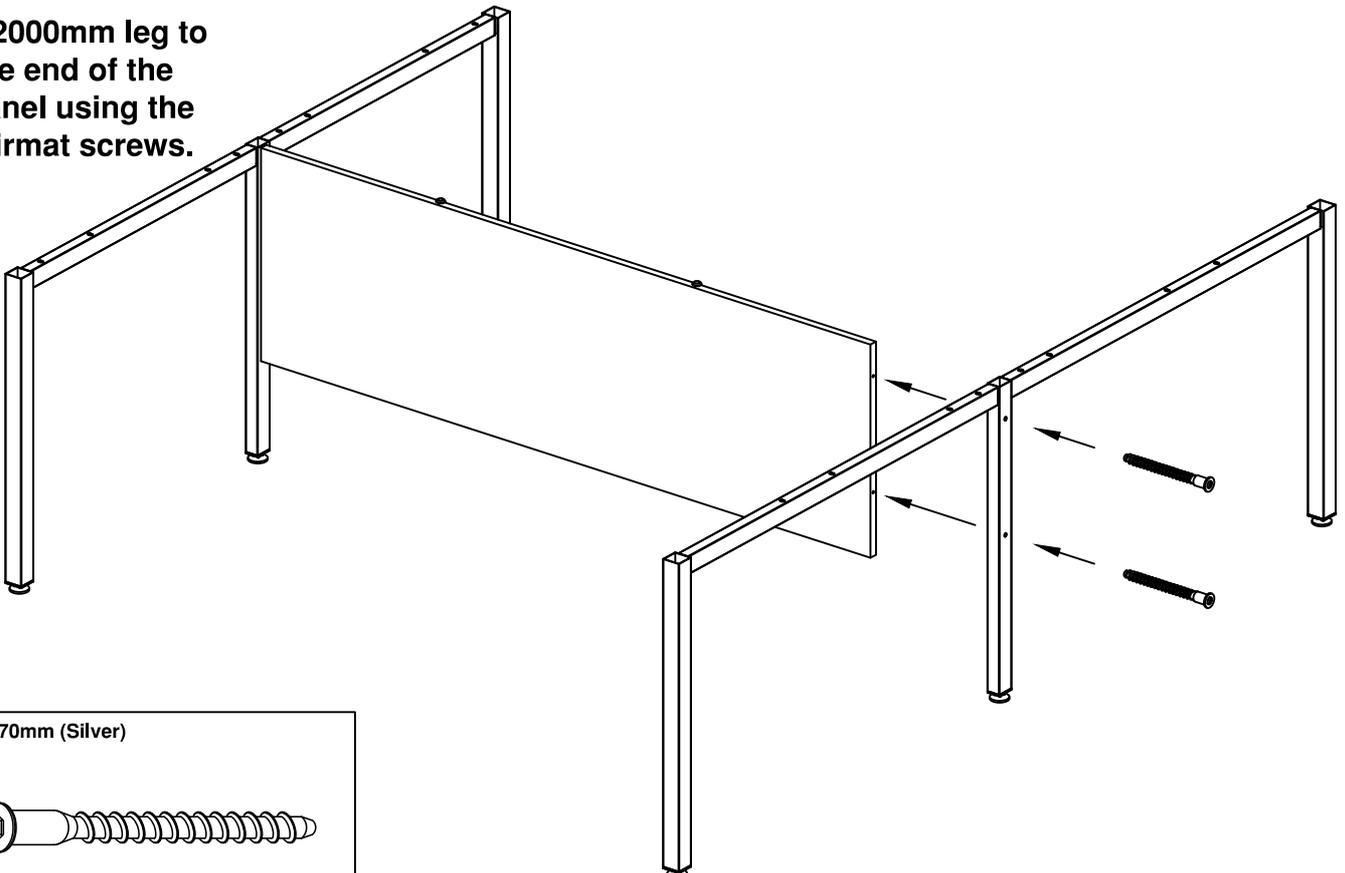

Confirmat Screw 70mm (Silver)
RM-CFM04




If desks screens are being installed please proceed to step 6.

5


Step 5

Attach both desktops to the frame using the M6x50mm connect bolts, use the outer fixing points on the leg frame, this will ensure there is no gap between the desktops.

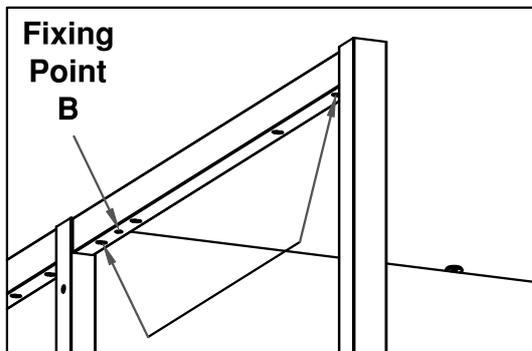

Connect Bolt M6x50mm
RM-BLT05

x8

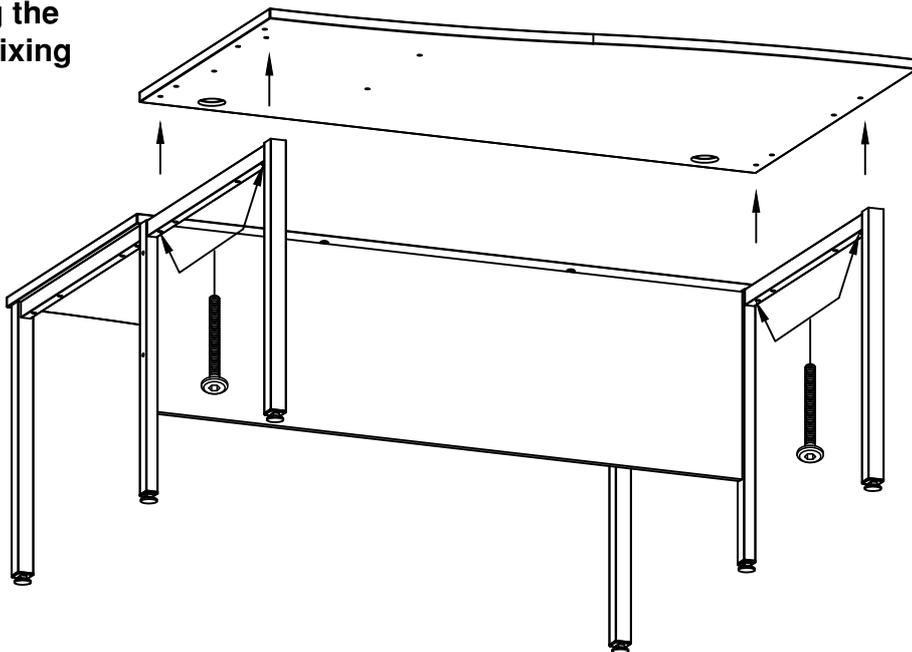

Please Note

Fixing point B is only to be used if the desk top is old style (pre 2020) and there is no drilled hole for the rear fixing insert.
Use the 57mm wood screws in this instance.

Wood Screw 8 x 57mm
RM-SCR30


x4

All stock manufactured after 01.01.2020 will have a pre drilled hole to accept a knock in nylon insert.

6


Step 6

Attach both desktops to the frame using the M6x50mm connect bolts, use the inner fixing points on the leg frame, this will ensure there is a gap between the desktops suitable for a standard screen clamp.

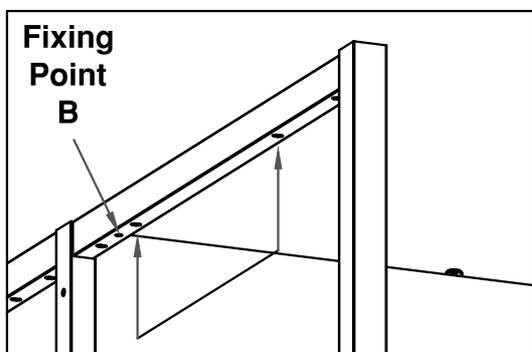

Connect Bolt M6x50mm
RM-BLT05

x8

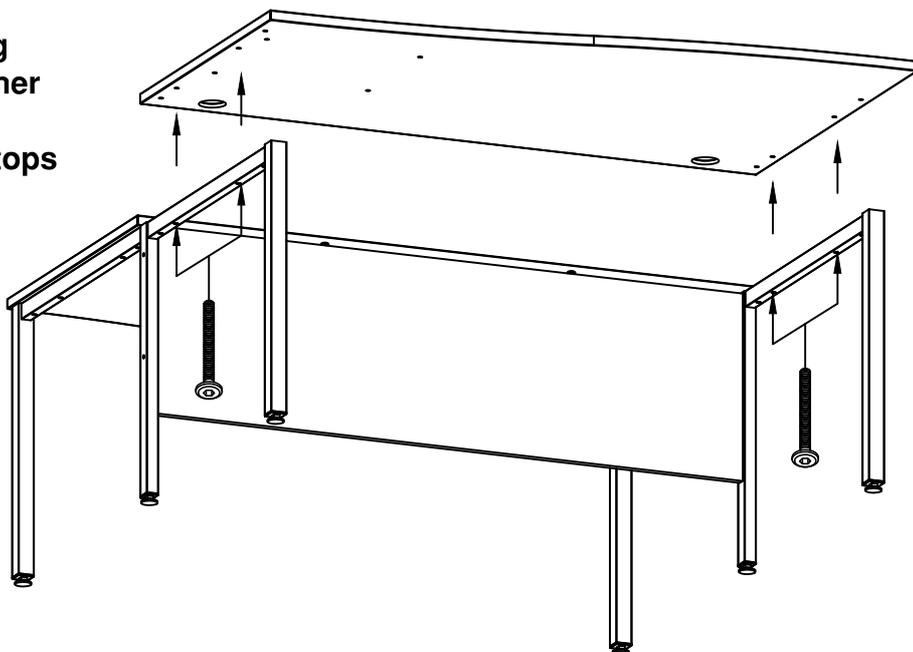

Please Note

Fixing point B is only to be used if the desk top is old style (pre 2020) and there is no drilled hole for the rear fixing insert.
Use the 57mm wood screws in this instance.

Wood Screw 8 x 57mm
RM-SCR30

x4

All stock manufactured after 01.01.2020 will have a pre drilled hole to accept a knock in nylon insert.