

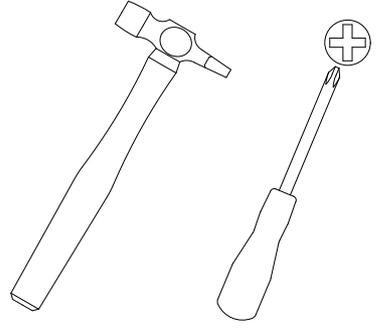
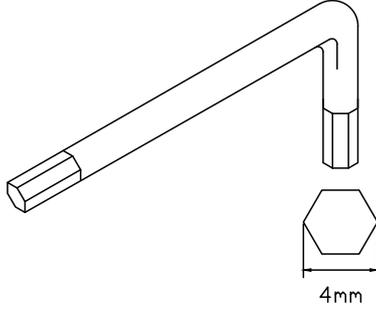



**TOOLS REQUIRED  
FOR ASSEMBLY**

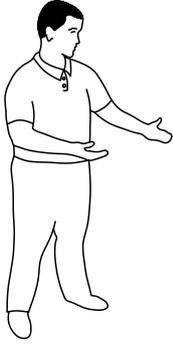


**DON'T STRUGGLE  
2 MAN LIFT**

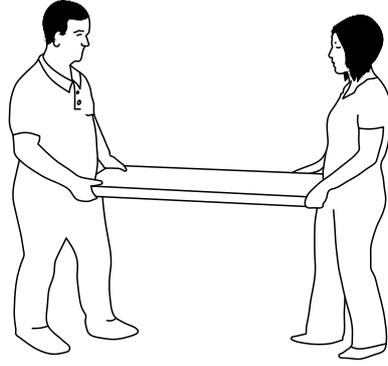

**ALWAYS HANDLE  
ITEMS WITH CARE**

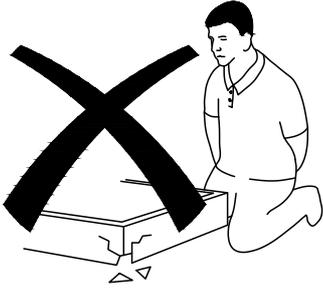

**IF UNSURE CALL  
FOR ASSISTANCE**






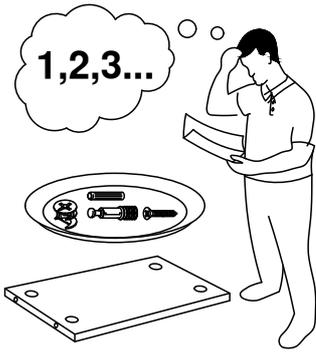


**KEEP FITTINGS AWAY  
FROM CHILDREN**






Please check that you have all the components!

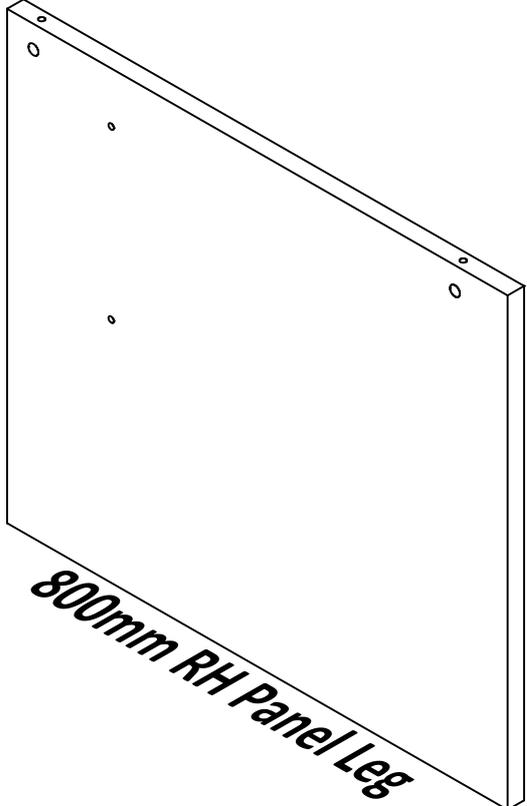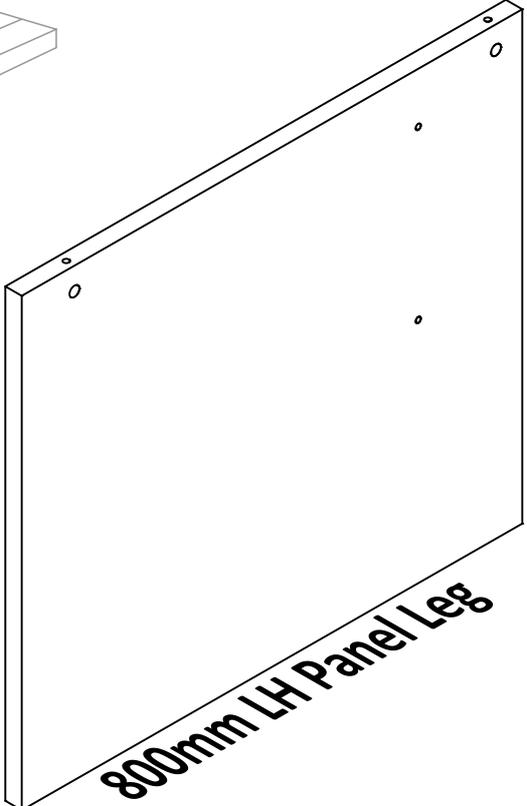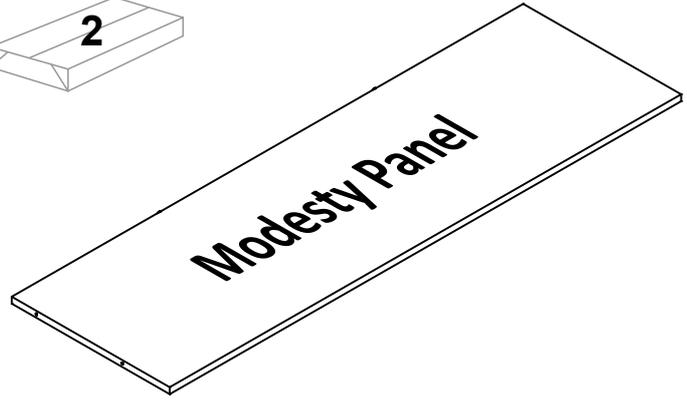

Please check that you have all the hardware!

4mm Allen Key  
RM-ALK01

x1

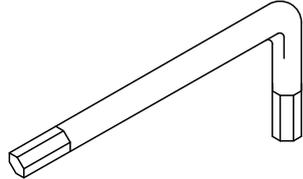


Confirmat Screw 70mm (Silver)  
RM-CFM04

x4




Adjustable Foot Dia 25mm  
RM-FRL19

x4

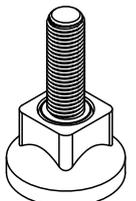

M6x34mm Minifix Bolt  
RM-BLT07

x4



Nylon M6x10 Socket  
RM-PAR05

x4




15mm Minifix Cam  
RM-CAM03

x4




M8 Gesipa Insert  
RM-NUT04

x4




1

**Step 1**  
Place your desktop face down onto a clean dry surface and knock the nylon inserts into the pre drilled holes on the underside of the desktop.

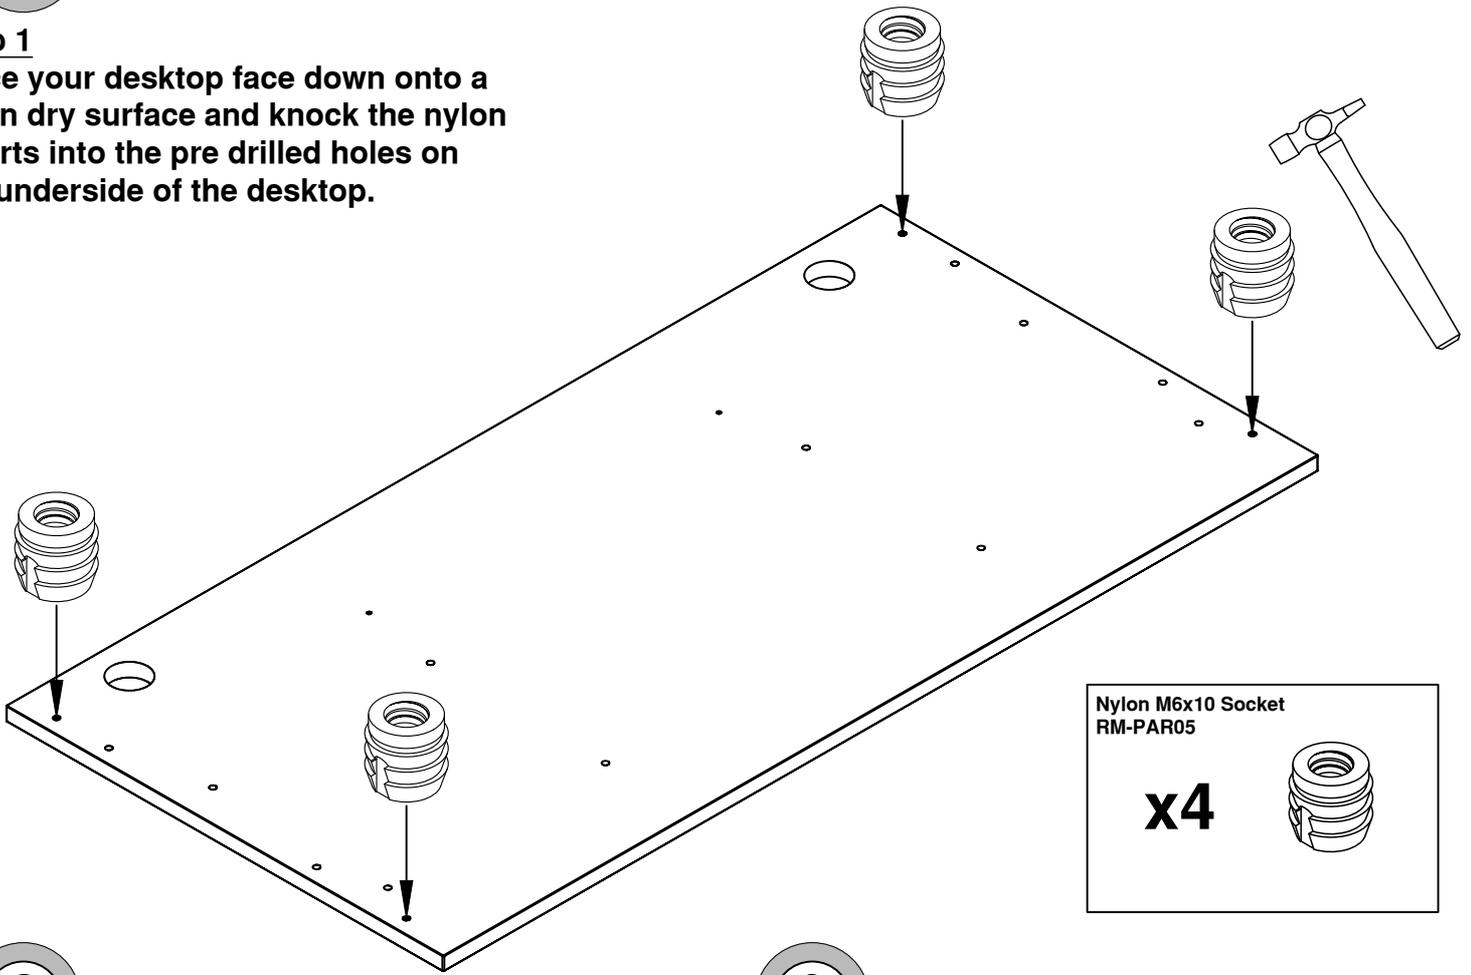


2

**Step 2**  
Knock in the gesipa inserts into the holes on the bottom edge of the panel end leg. Repeat for both legs.

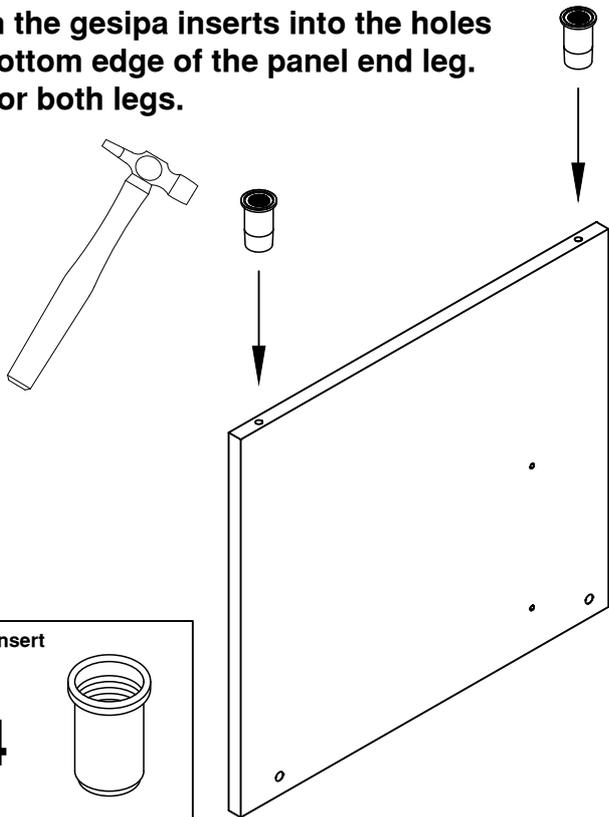


3

**Step 3**  
Screw the 25mm adjustable feet into the bottom of the panel end leg. Repeat for both legs.

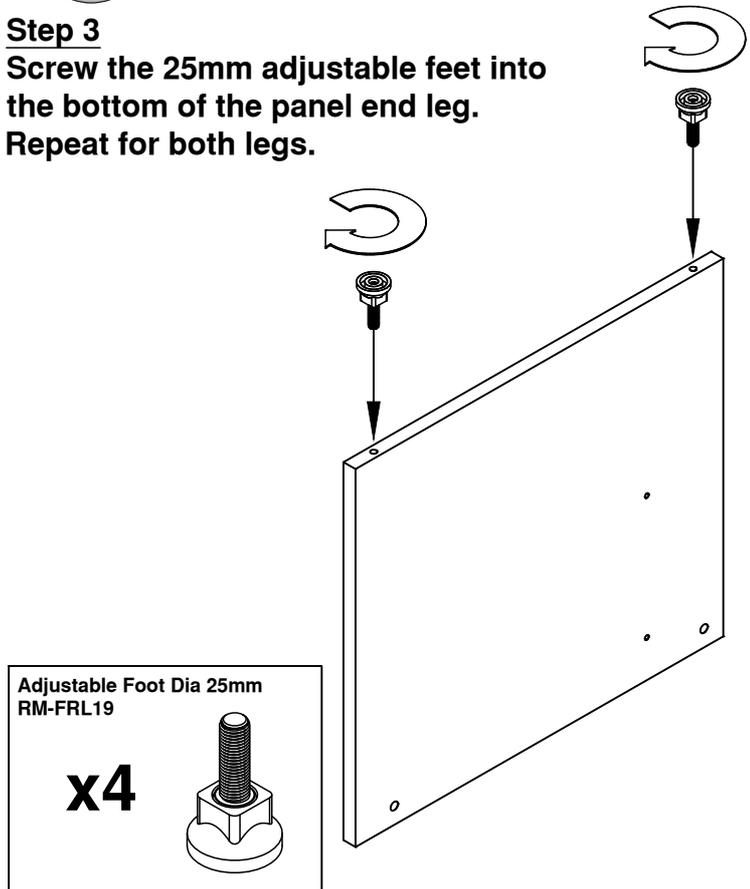

4

**Step 4**  
Insert the minifix cams into the panel end leg. Ensure the fitting is pushed all the way down and that the arrow guideline is aligned with the hole in the edge of the panel. Repeat for both legs.

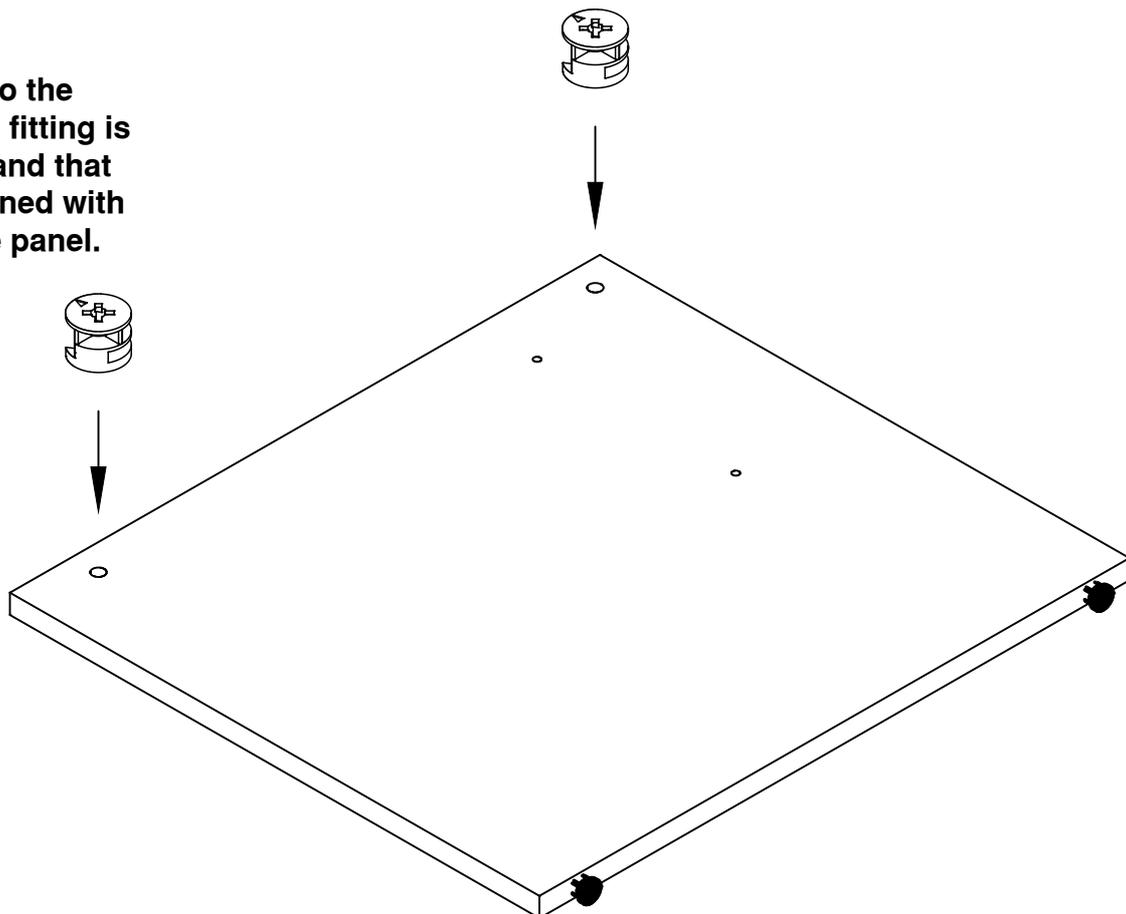


15mm Minifix Cam  
RM-CAM03

x4



5

**Step 5**  
Screw the M6x34mm minifix bolts into the nylon inserts that you inserted in step 1.

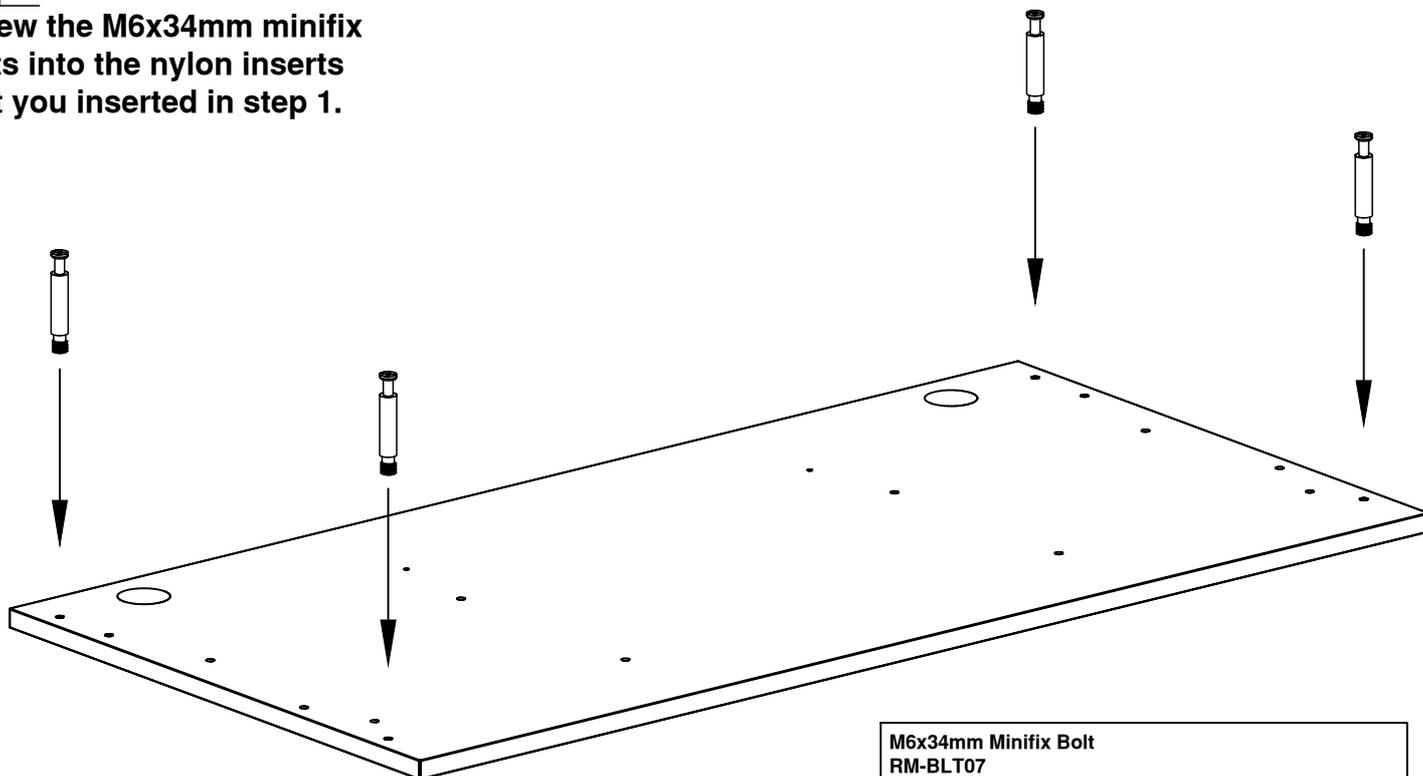


M6x34mm Minifix Bolt  
RM-BLT07

x4




6

**Step 6**  
Place the LH Leg onto the desktop ensuring that the cam fittings engage over the minifix bolts. Once in place tighten the cams to lock the panel end leg into place.

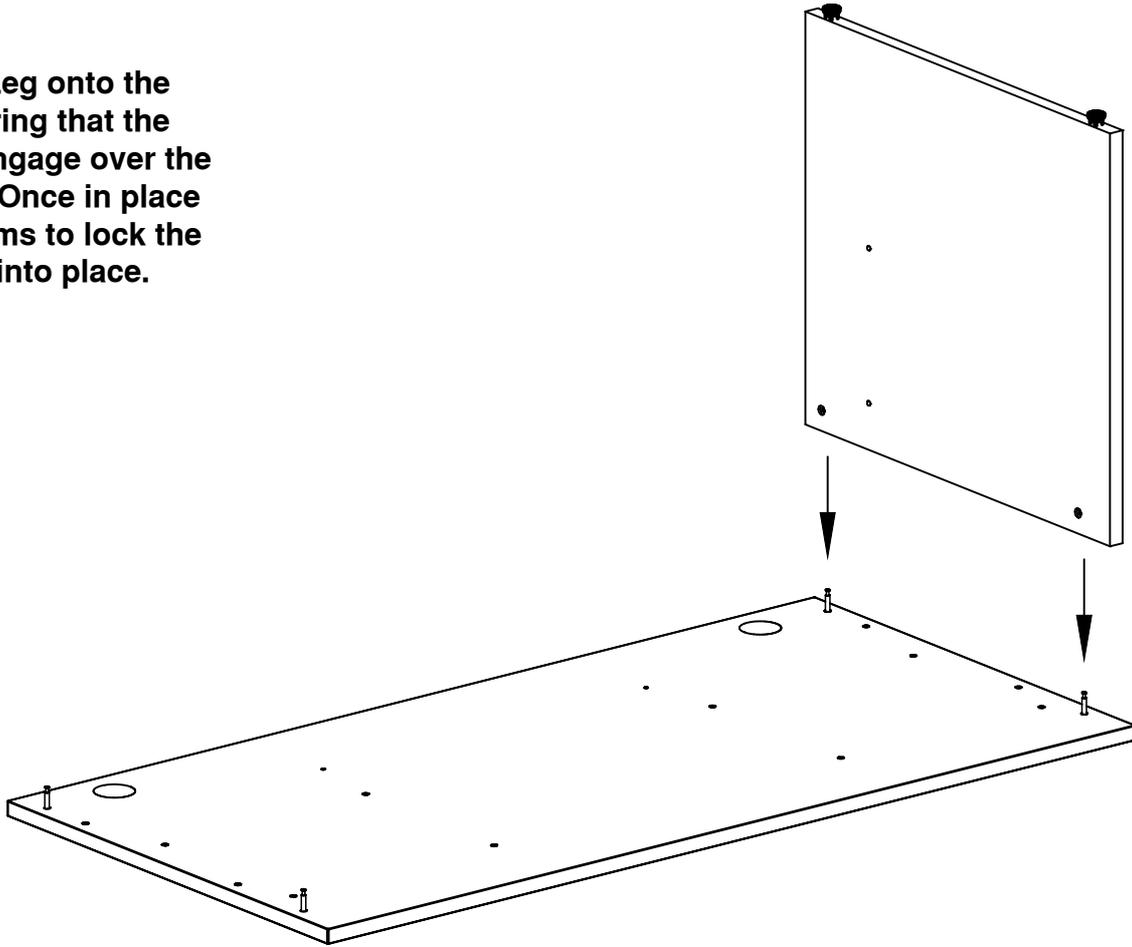


7

**Step 7**  
Line the back panel up with the panel end leg ensuring the pre drilled holes are in aligned.

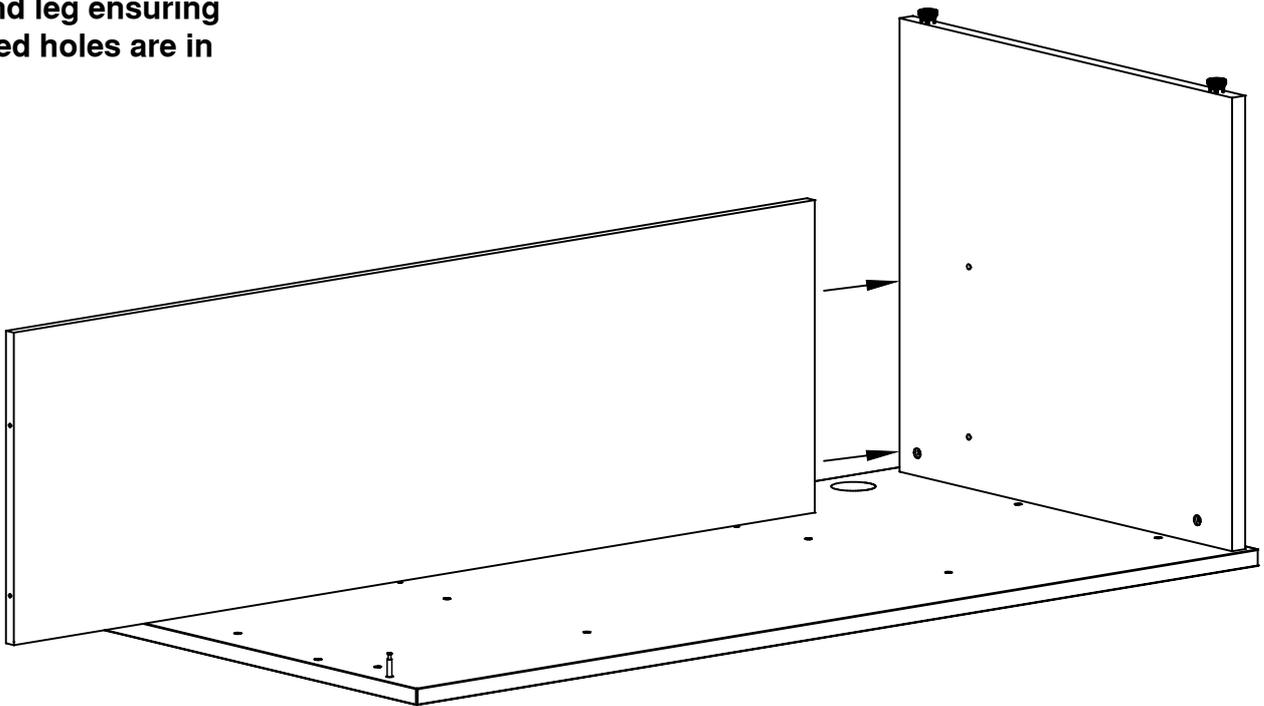

8

**Step 8**  
Attach the leg panel to the back panel using the 70mm confirmat screws.

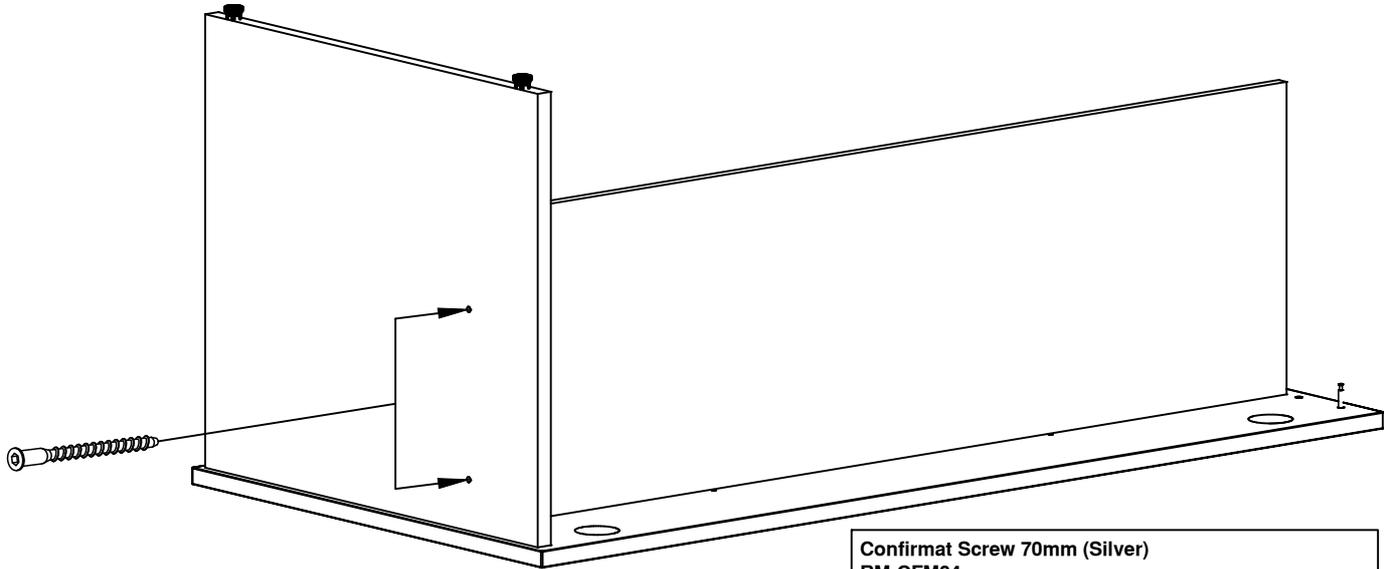


Confirmat Screw 70mm (Silver)  
RM-CFM04


x2 

9


**Step 9**  
Place the remaining leg onto the desktop ensuring that the cam fittings engage over the minifix bolts. Once in place tighten the cams to lock the panel end leg into place.

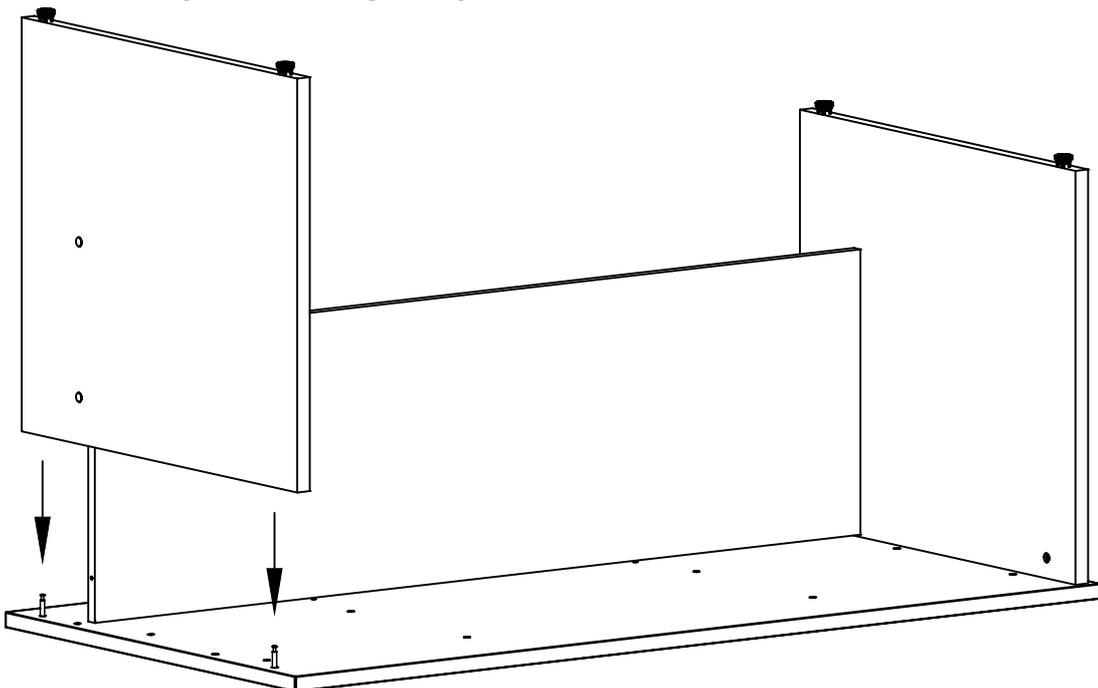

**Step 10**  
Attach the leg panel to the back panel using the 70mm confirmat screws.

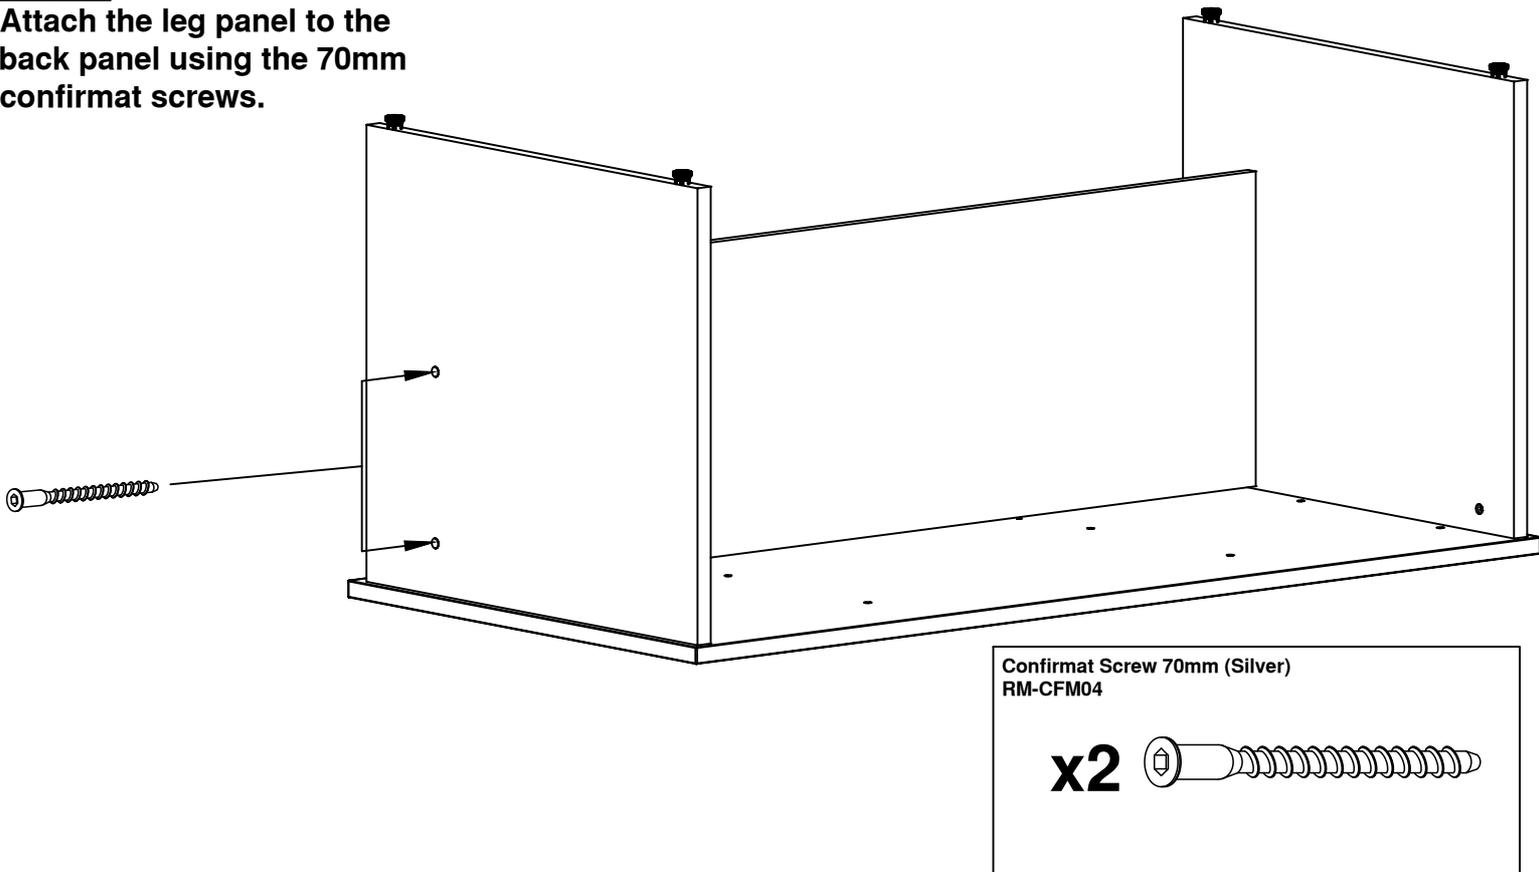







Matching adhesive caps are provided to cover any visible screw heads or cam fittings.

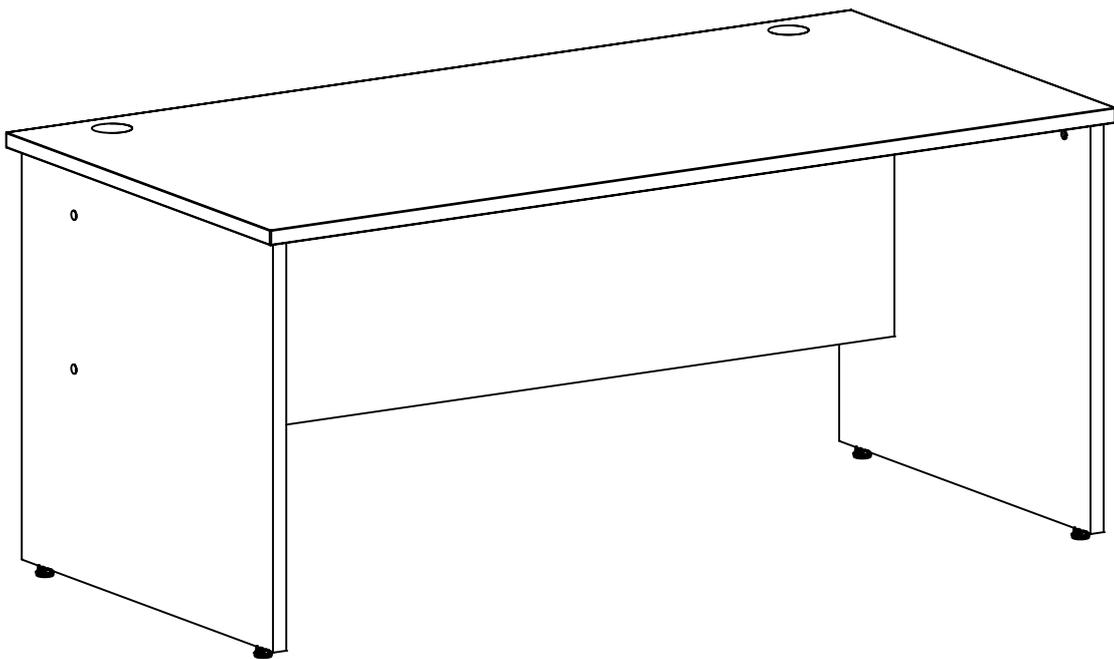

# S2F

## Shallow Desk Pedestal

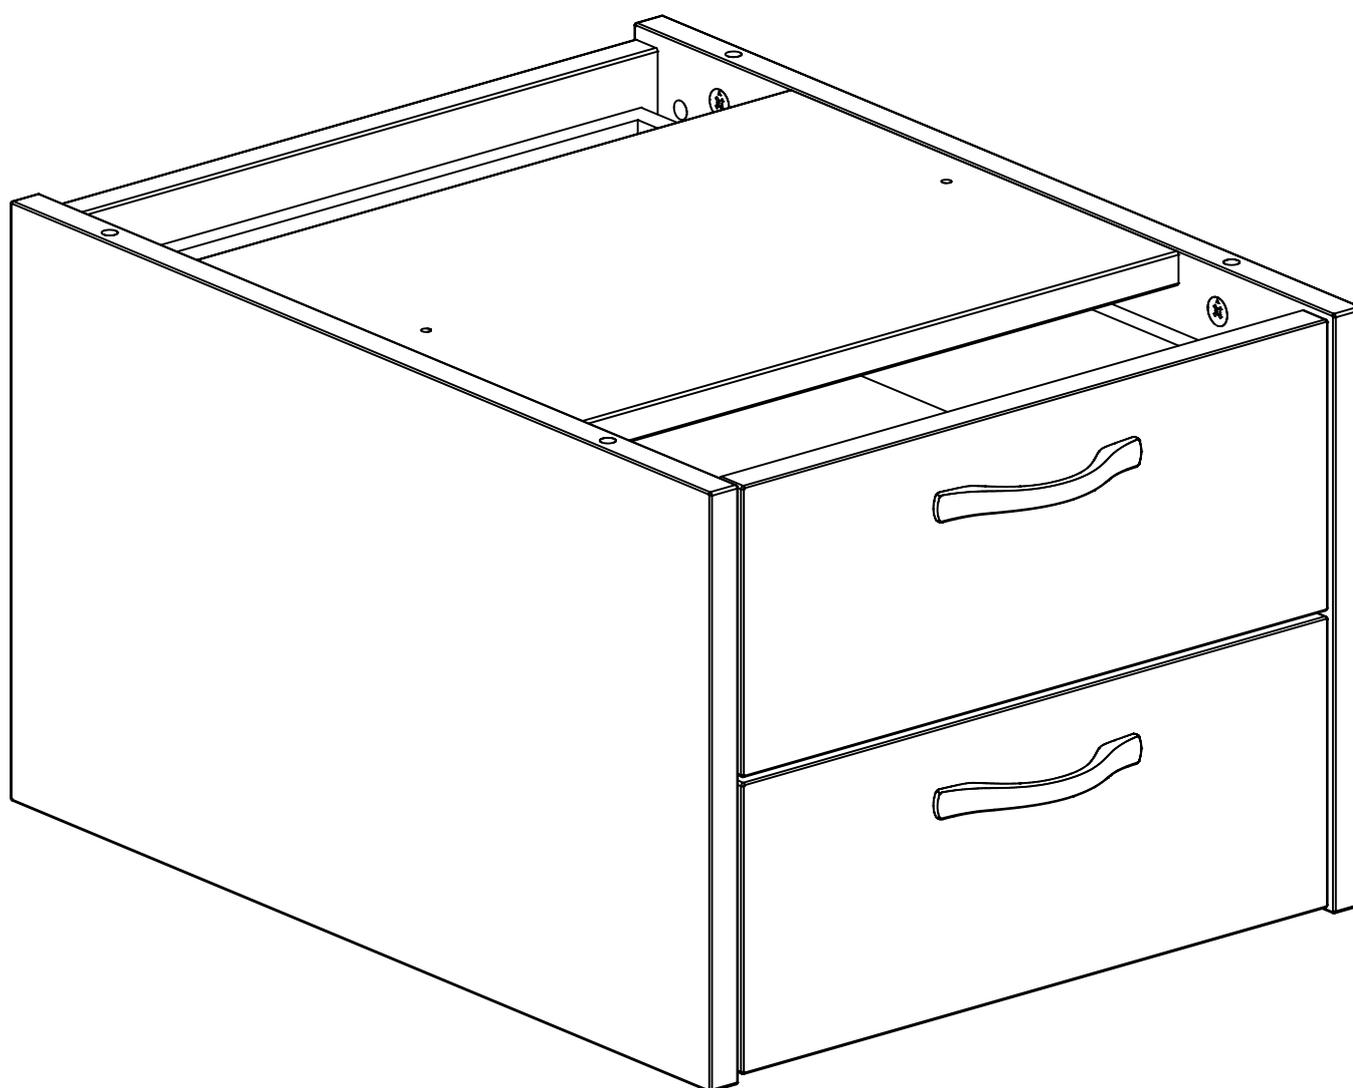

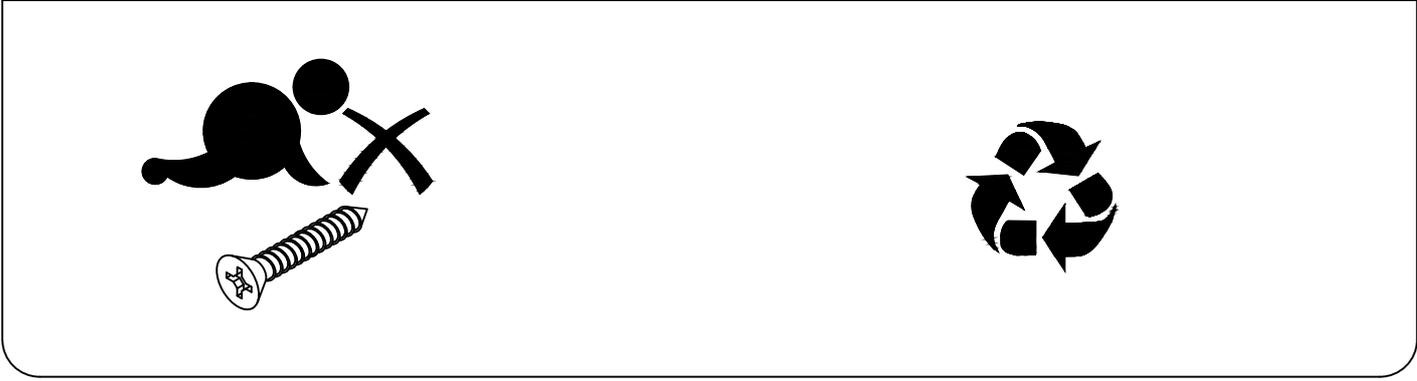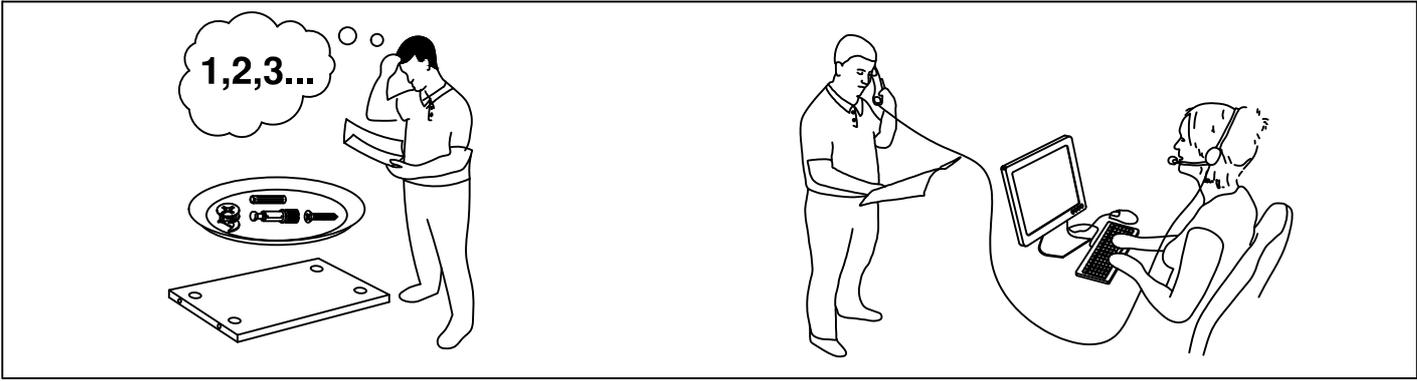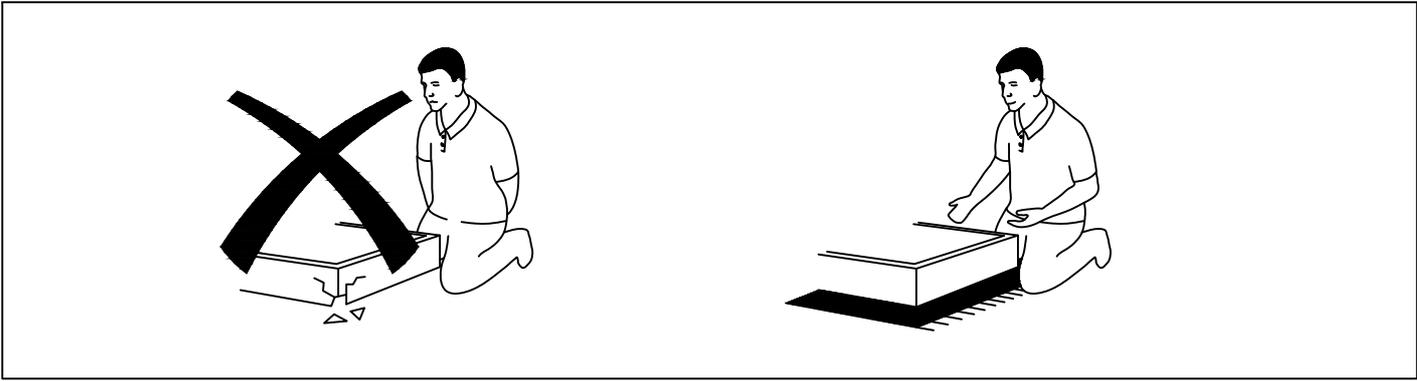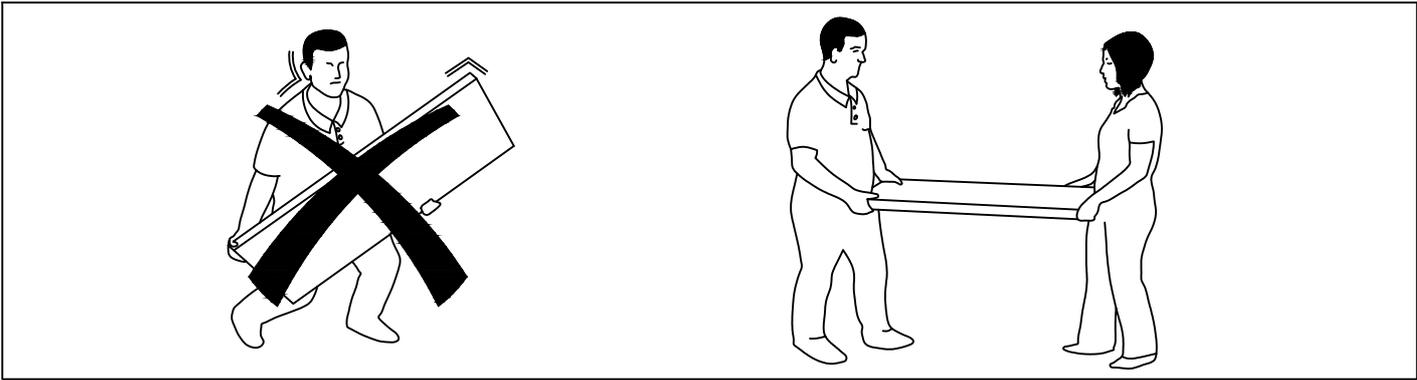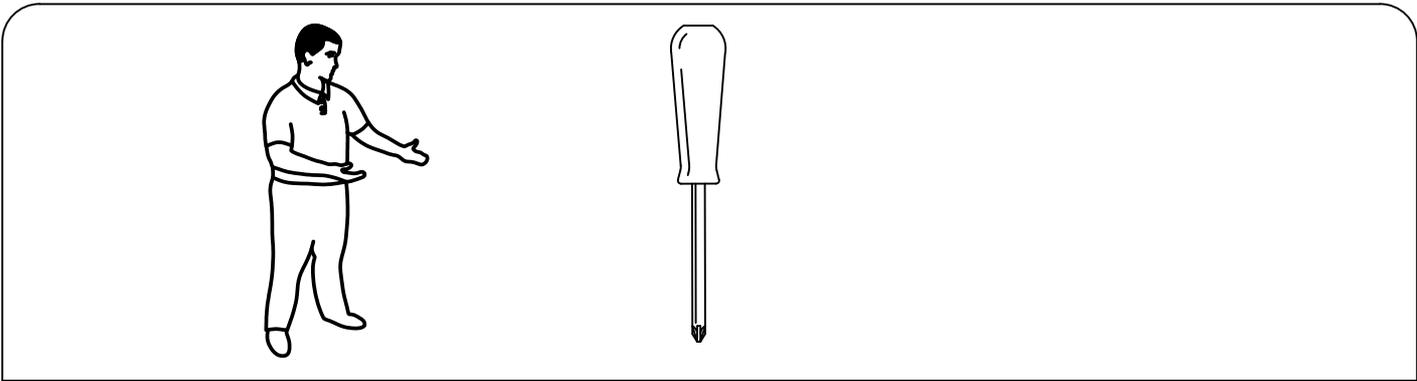




Please check that you have all the fittings

**S2F**



**4** Minifix cam 15N  
CAM03




**4** Quickfix spread bolt  
BLT06




**4** 1 1/4 x 8 screw  
SCR12




**4** M4x22 COMBI BOLT  
SCR25

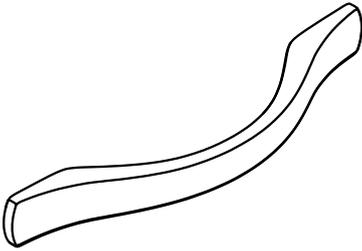


**4** 96mm CH Handle  
HDL009


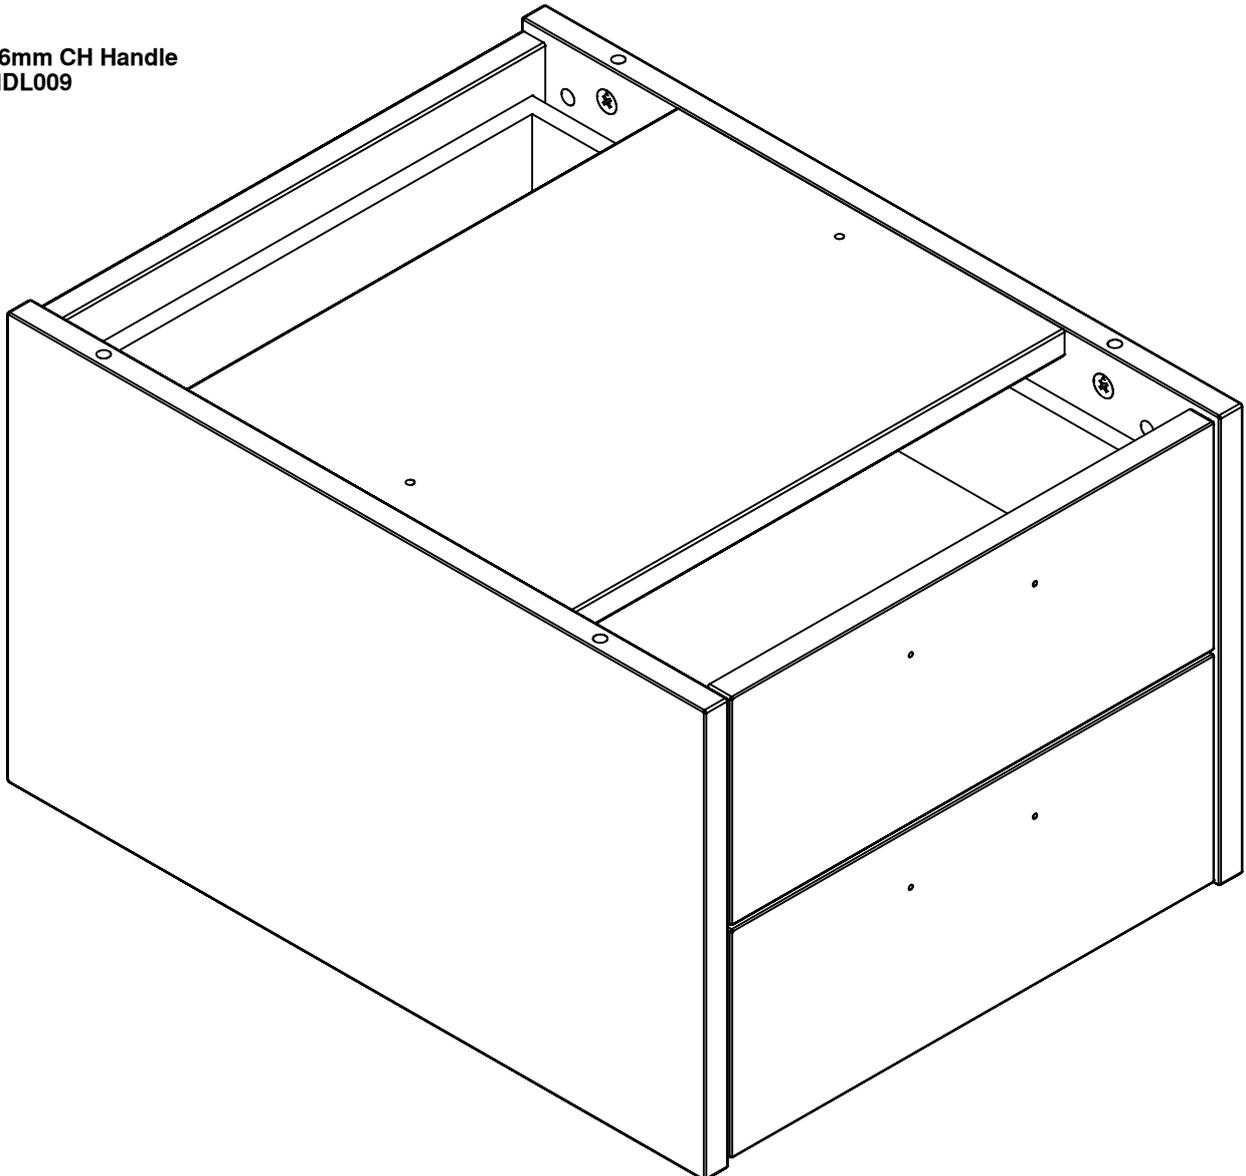


1



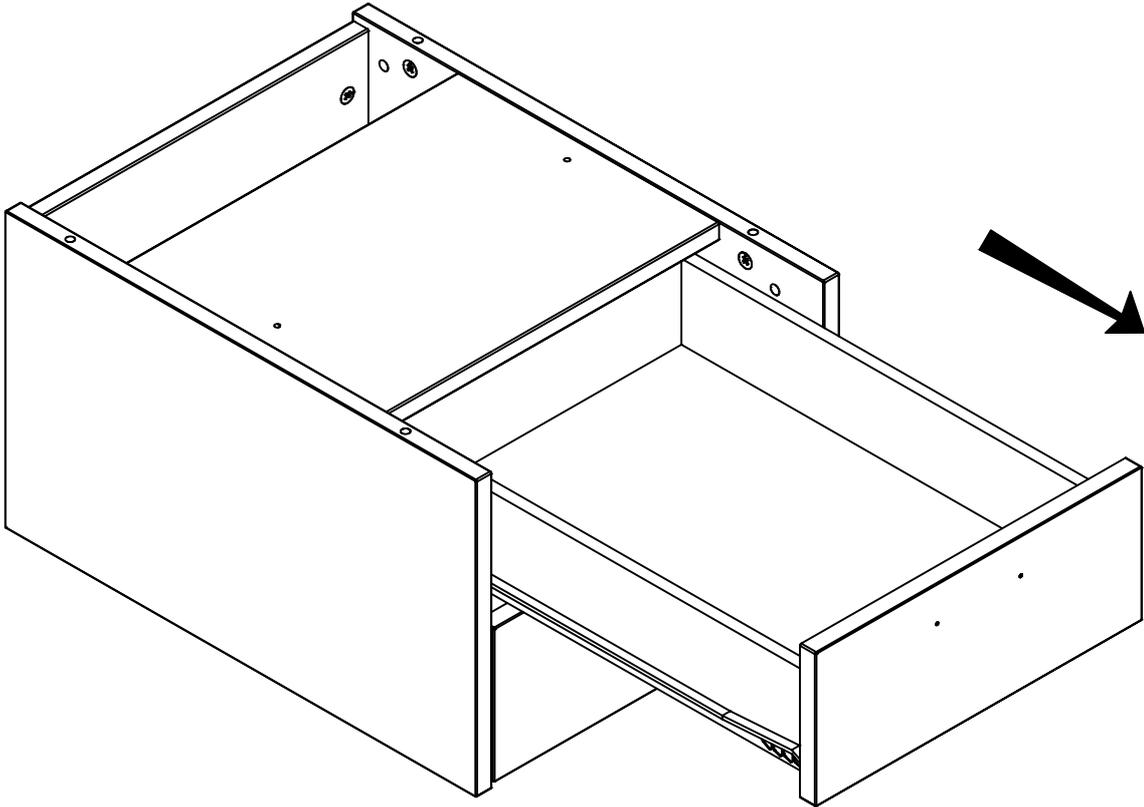


2


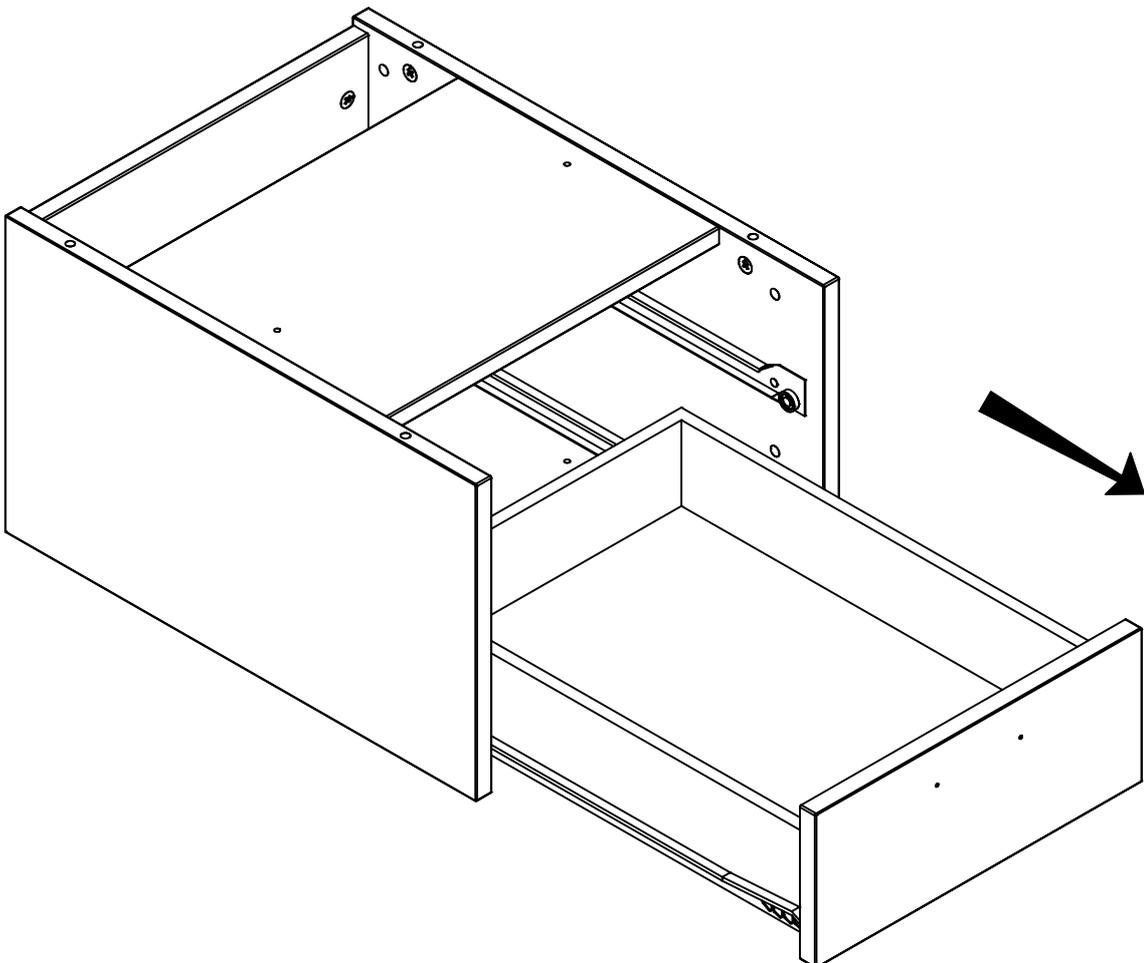


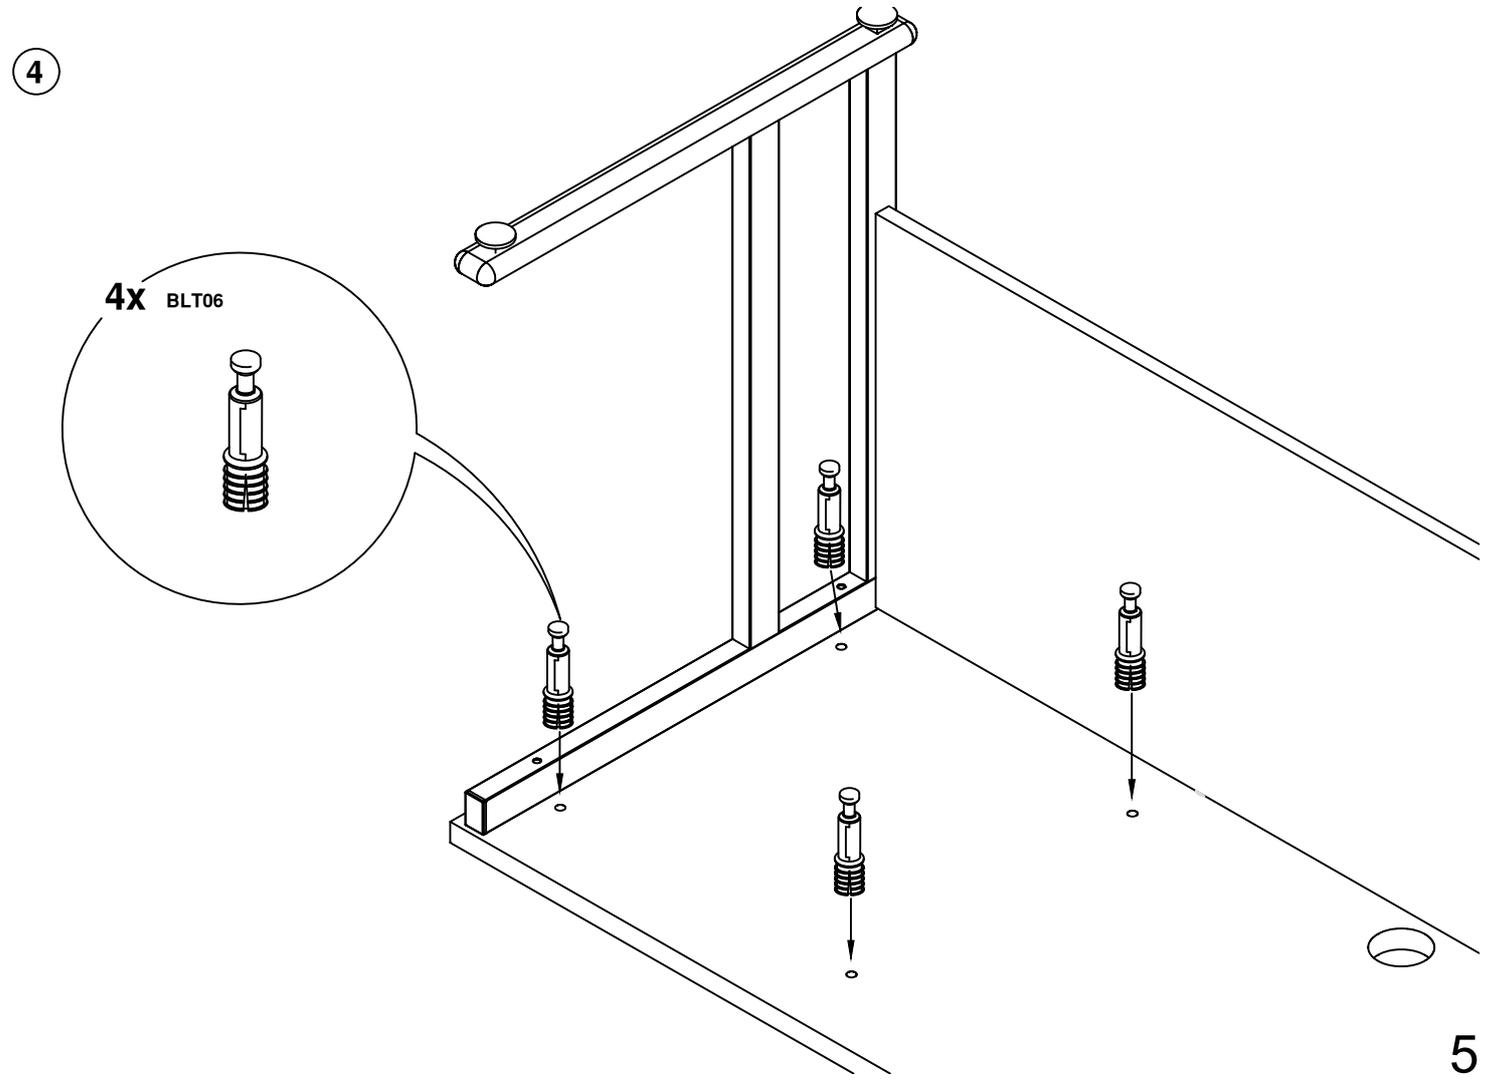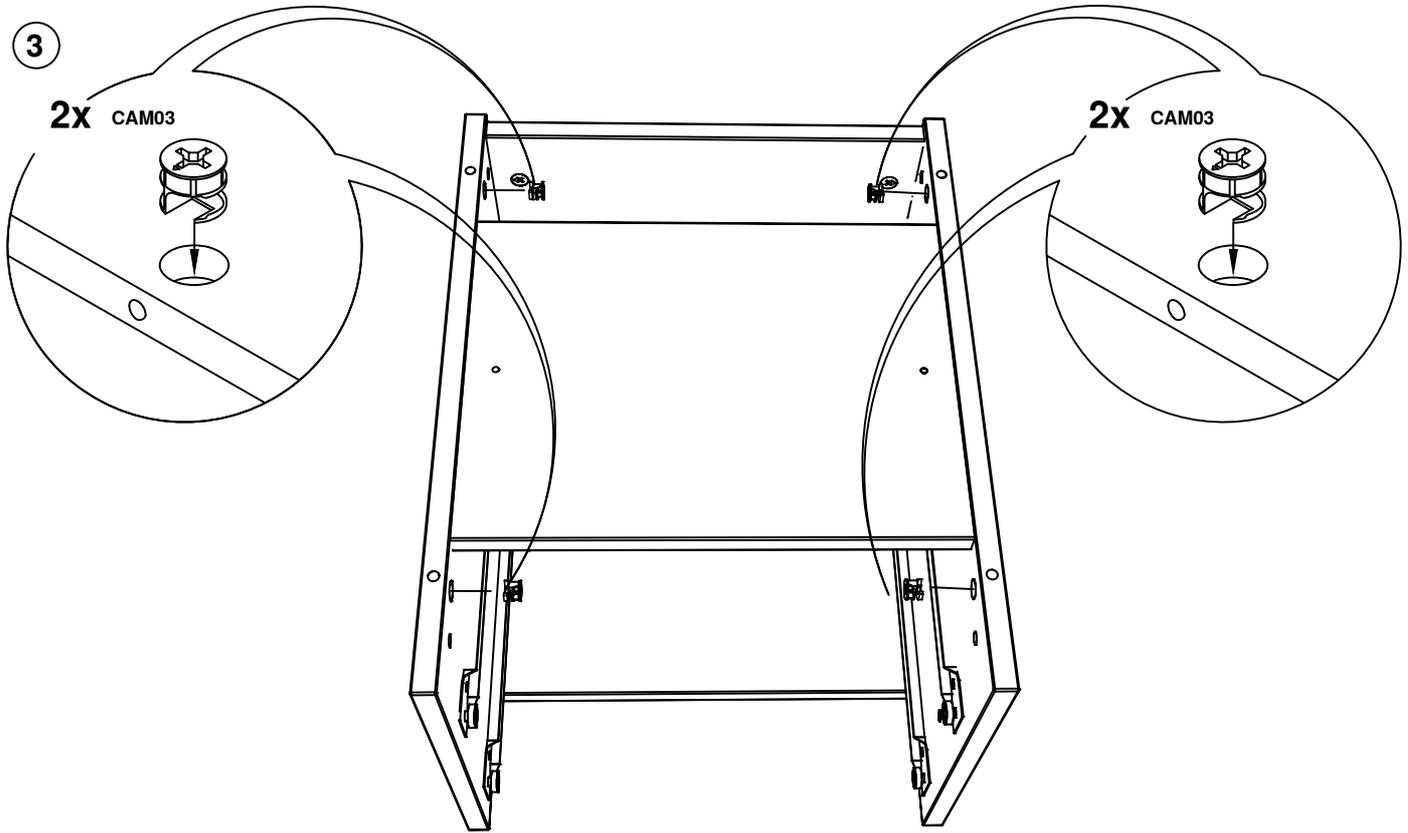

5

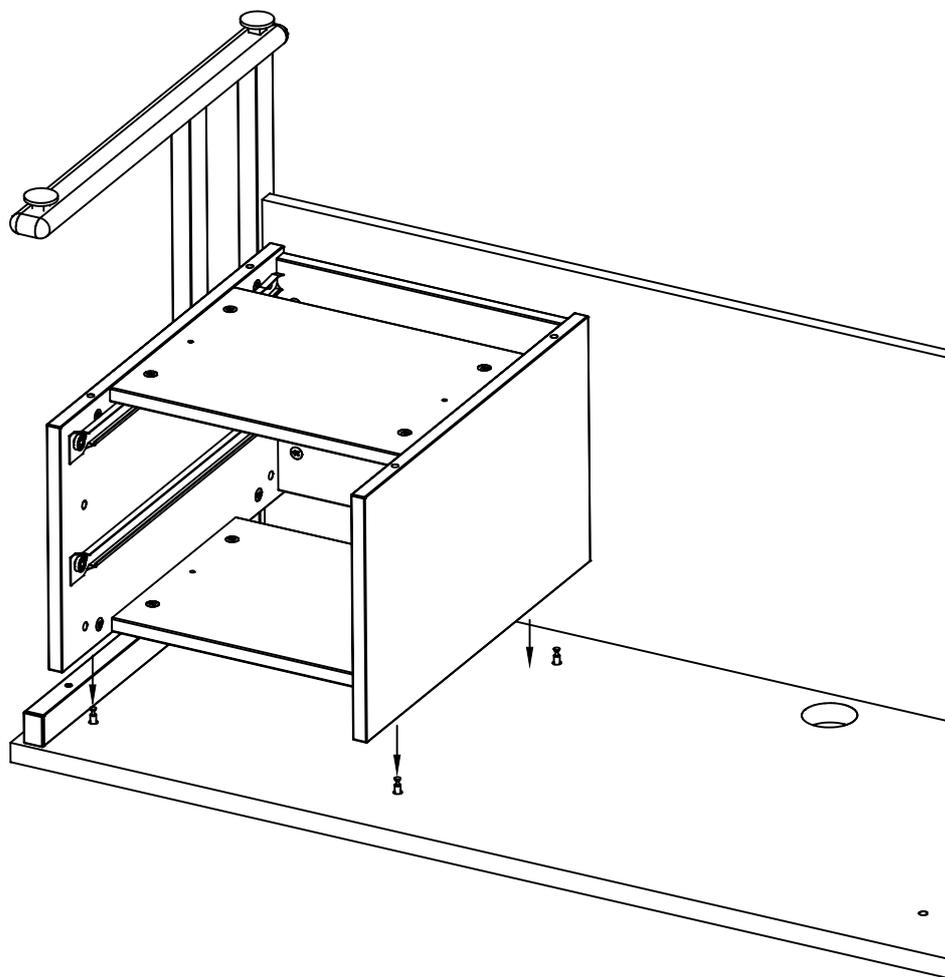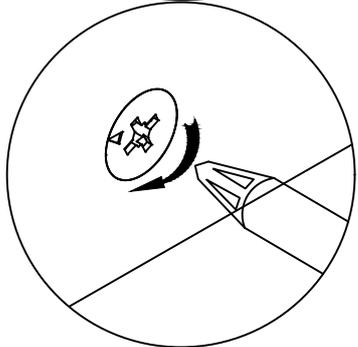
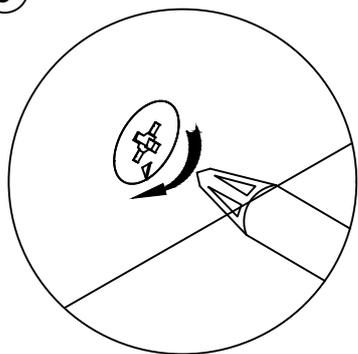


6

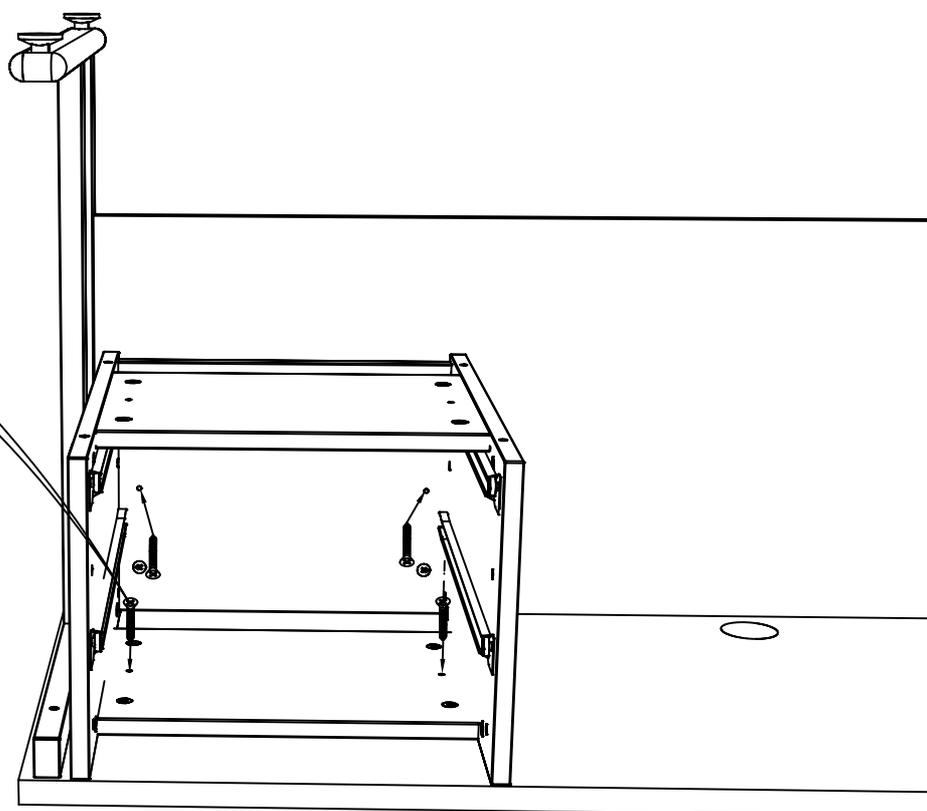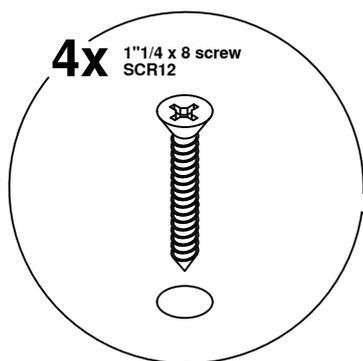


7


2x M4x22 COMBI BOLT  
SCR25

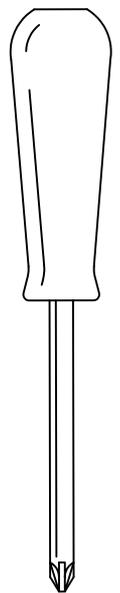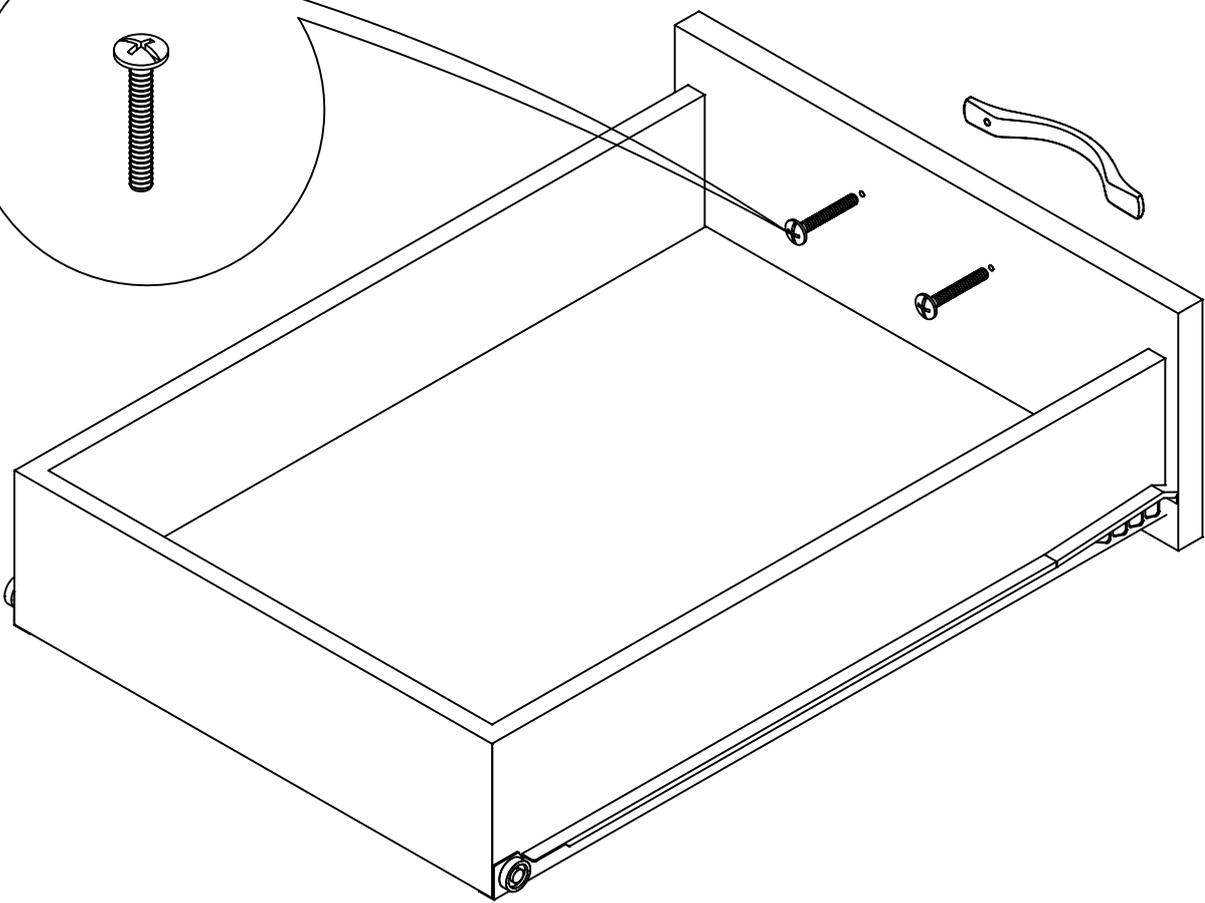

9

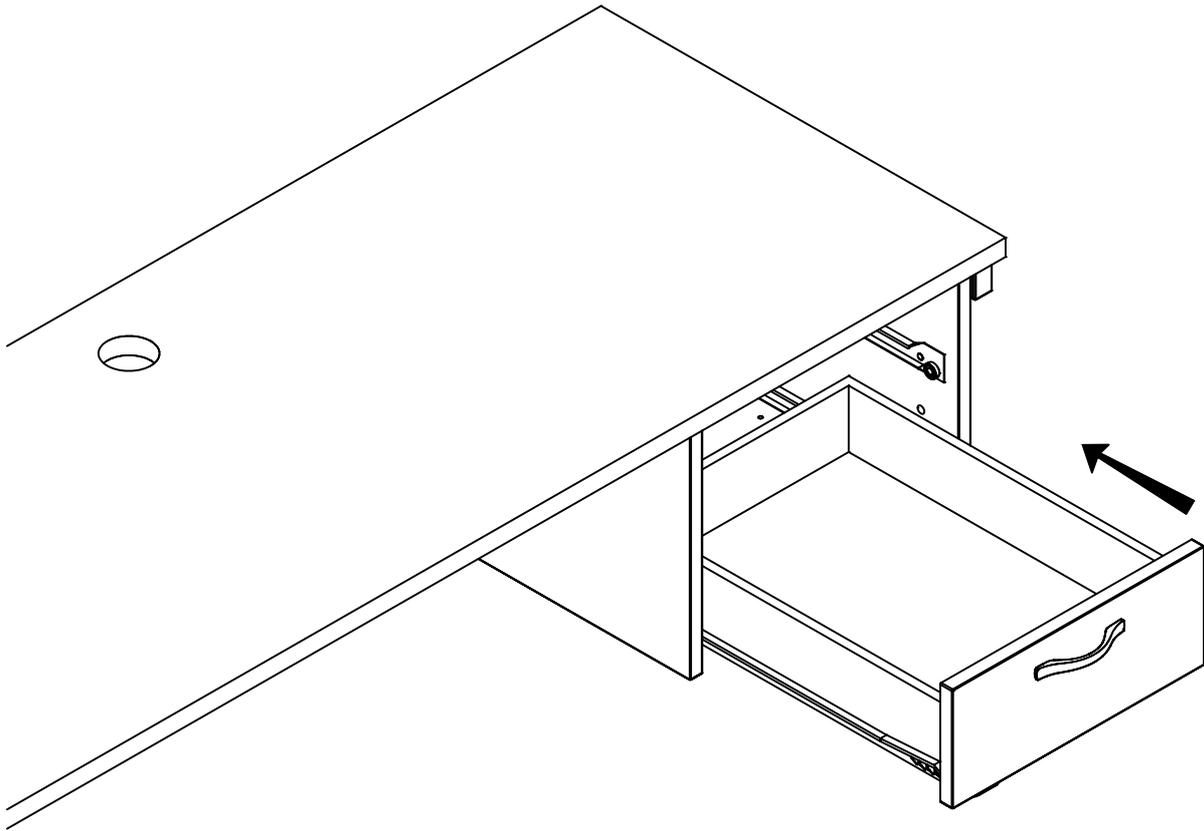

10

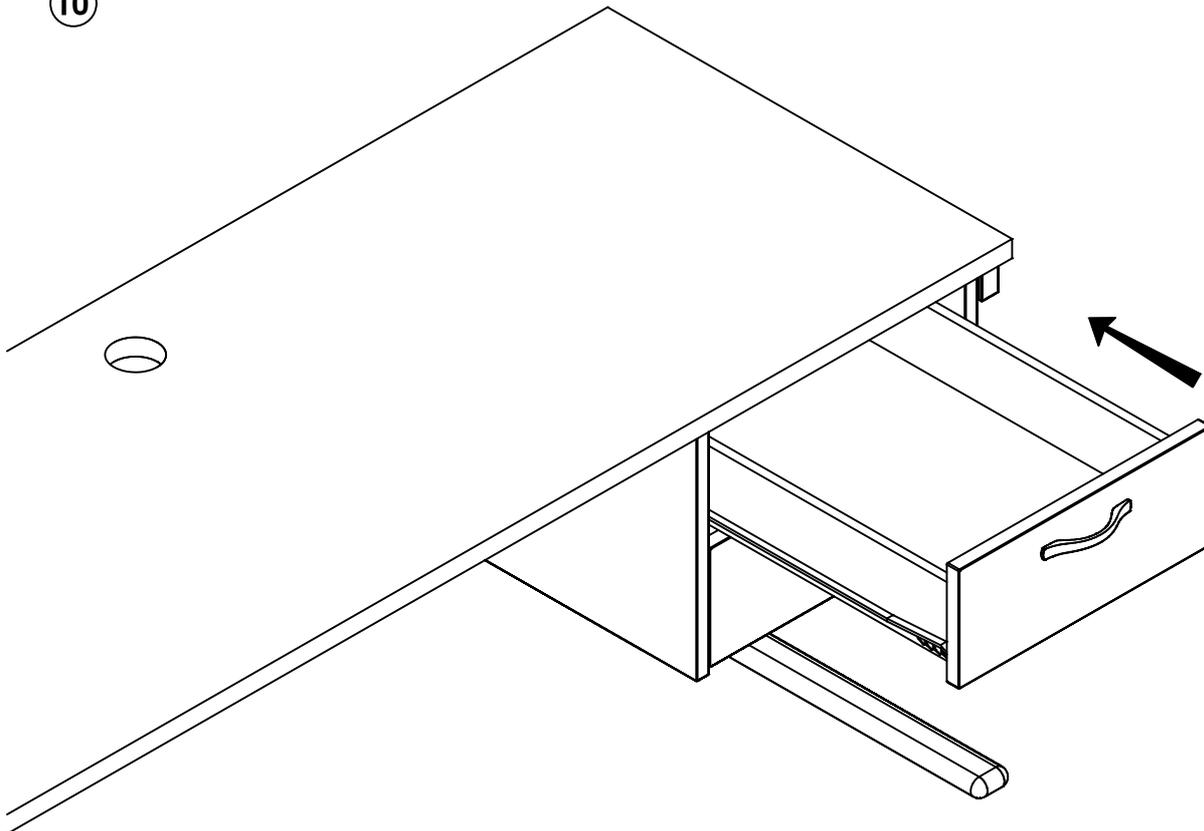

8