


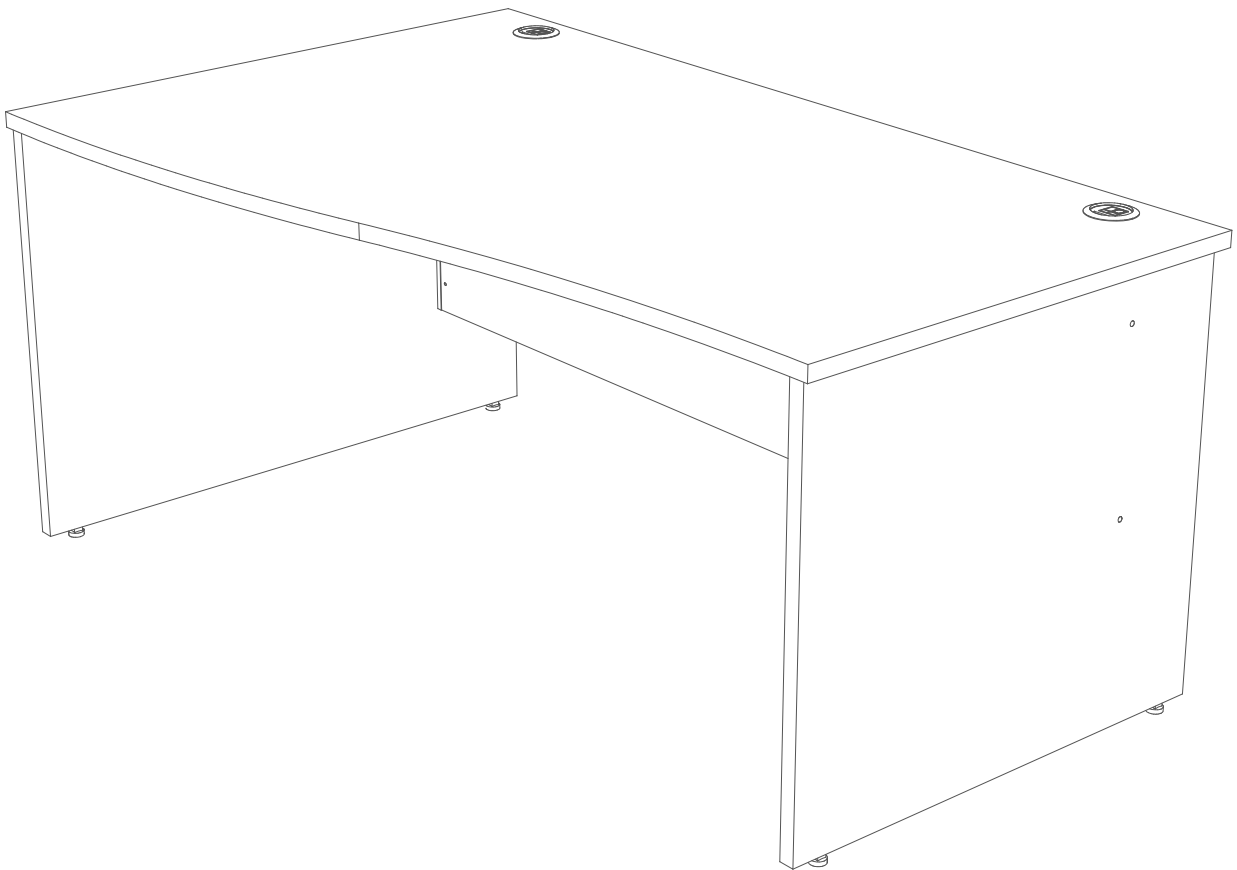
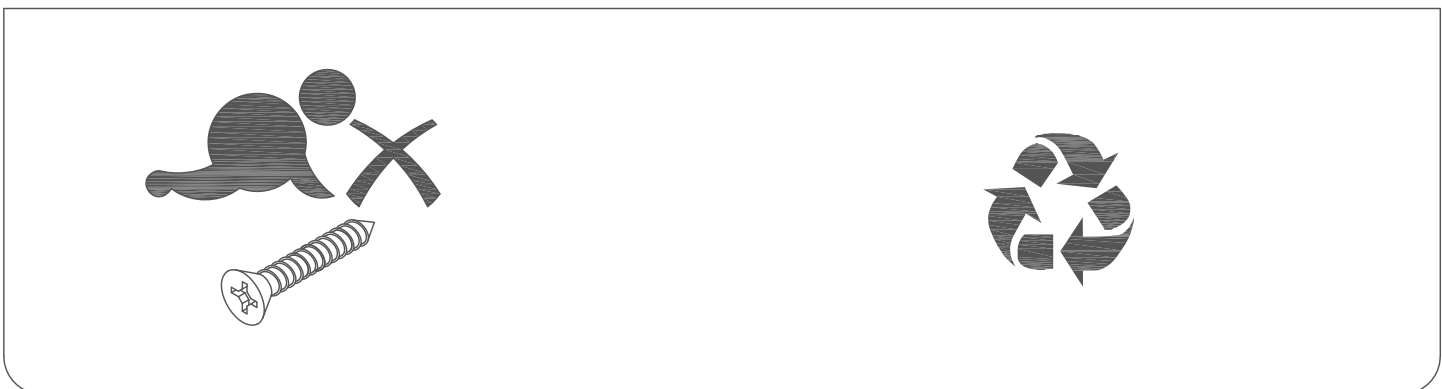
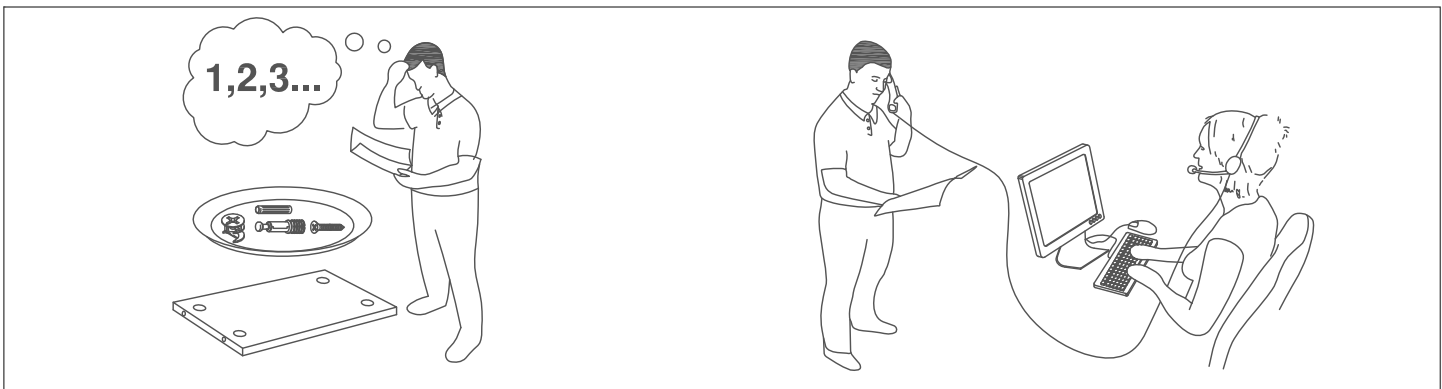



MSWL LH Wave Desk

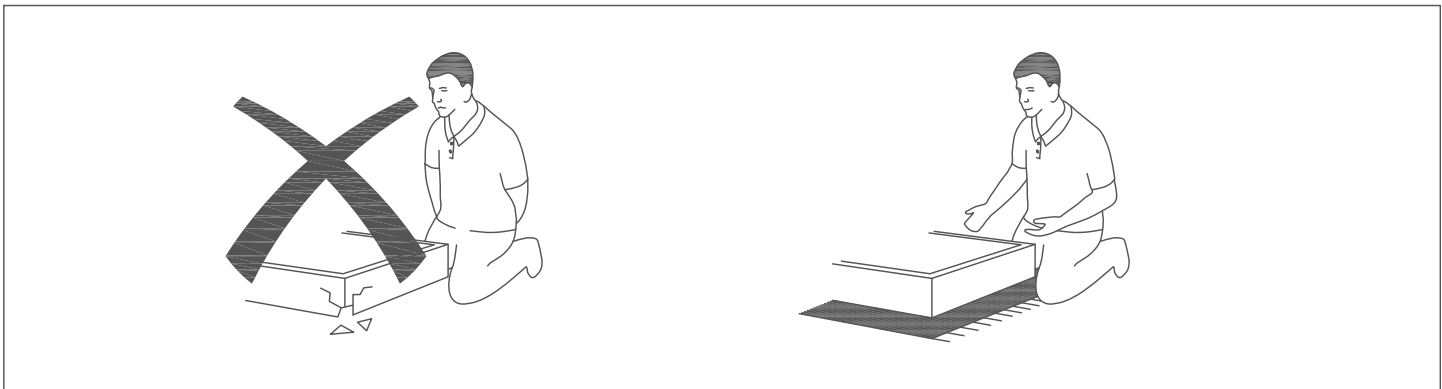


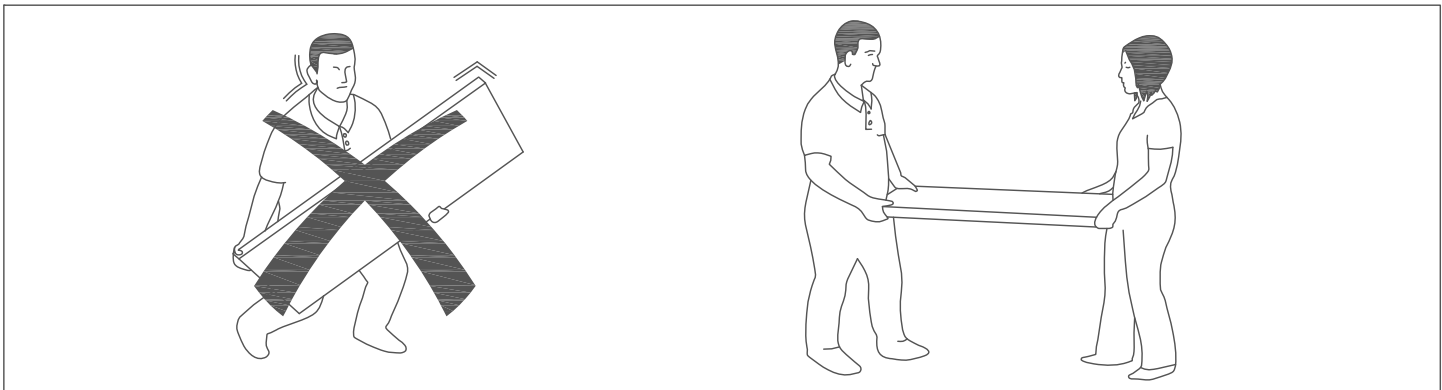


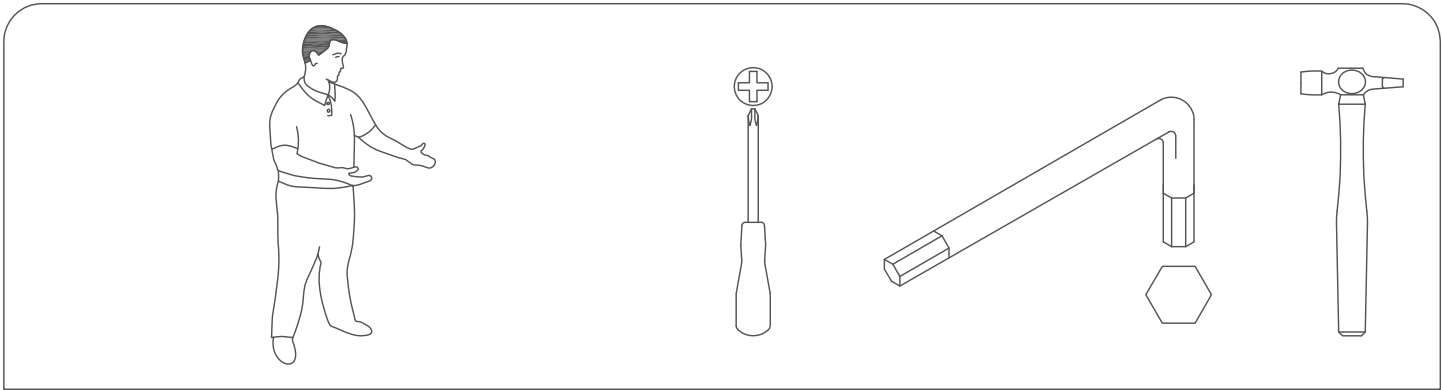

Please check that you have all the fittings



**MSWL
LH LEG**
RM-LGP030

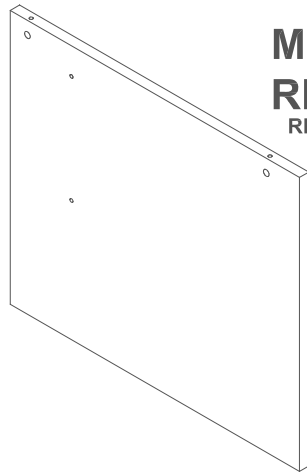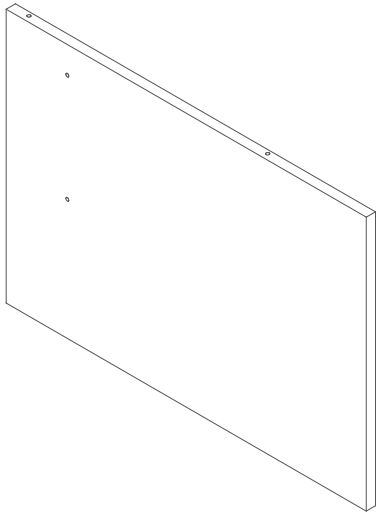


**MSWL
RH LEG**
RM-LGP027



**MS25
BARS**
RM-BARS28

4 Confirmat screw 50mm (Black)
RM-CFM01 

4 Connect Bolt M6x35mm
RM-BLT03 

4 Mini fix bolt B34
RM-BLT07 




1 4mm Allen key
RM-ALK01 

4 Geslpa M8 Blind Rivet Nut
RM-NUT04 


4 Adjustable Foot Dia 25mm
RM-FRL19 

4 Nylon M6x10 Socket
RM-PAR05 


4 Cam 15N
RM-CAM03 

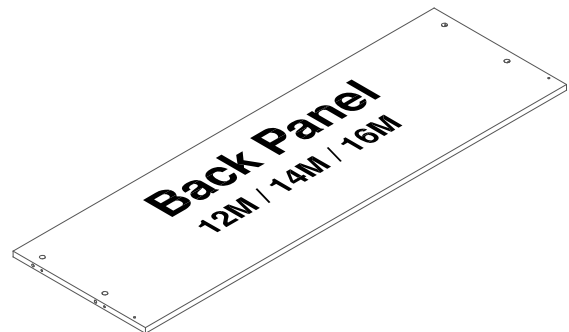


1

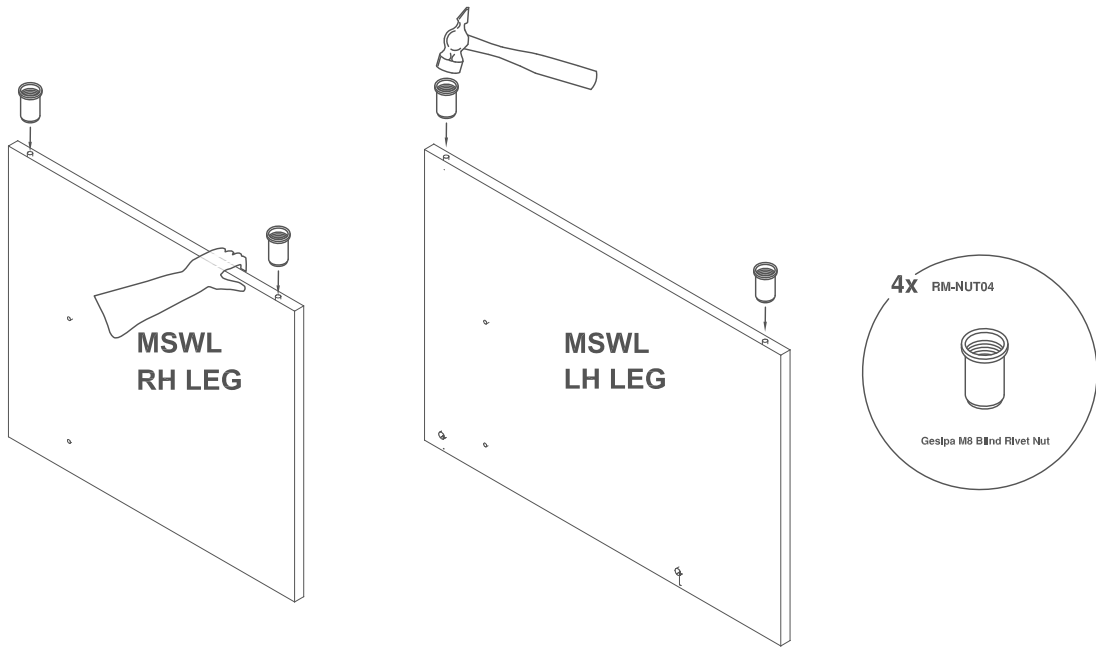


2

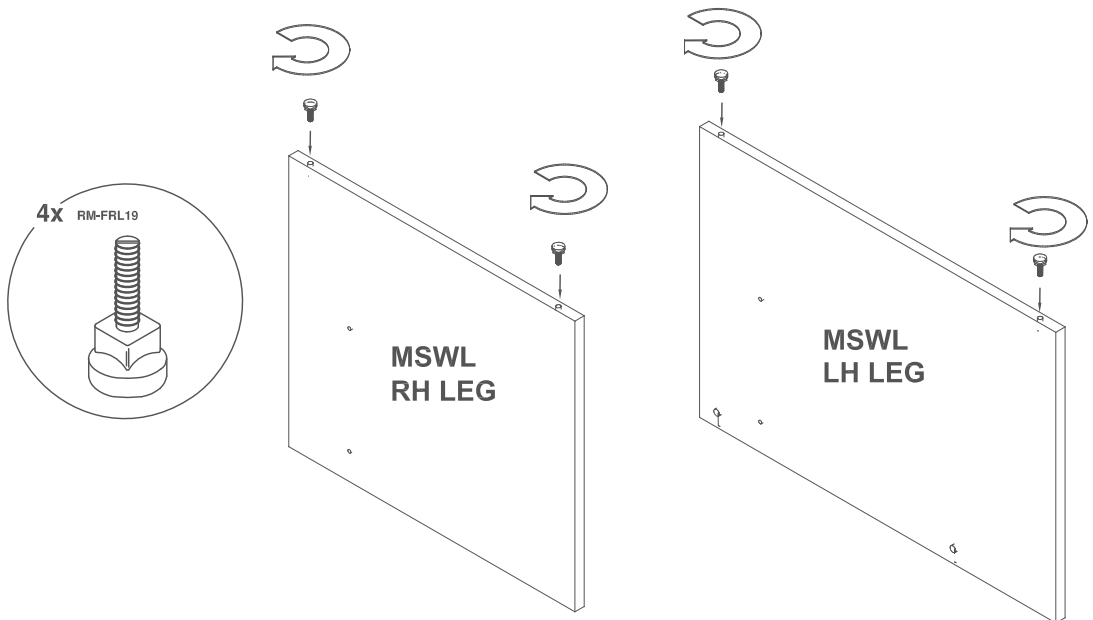

3

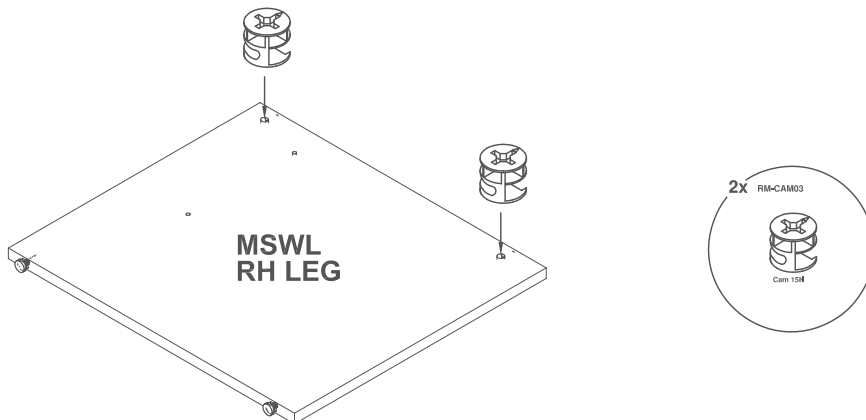


4

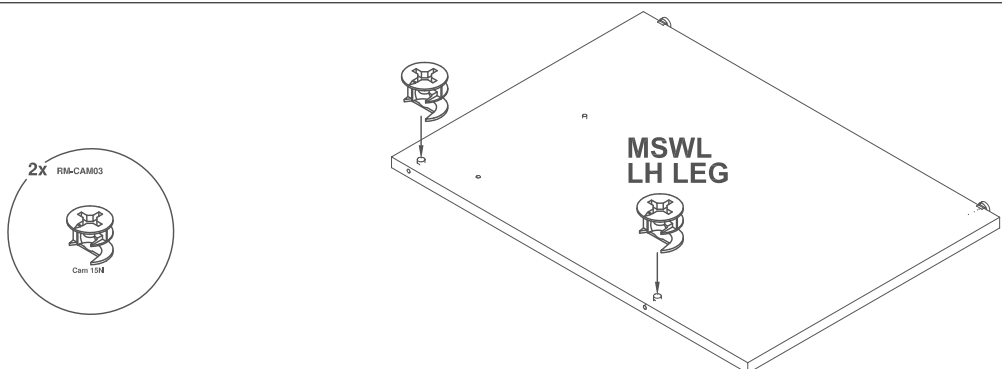

5

4x RM-PAR05

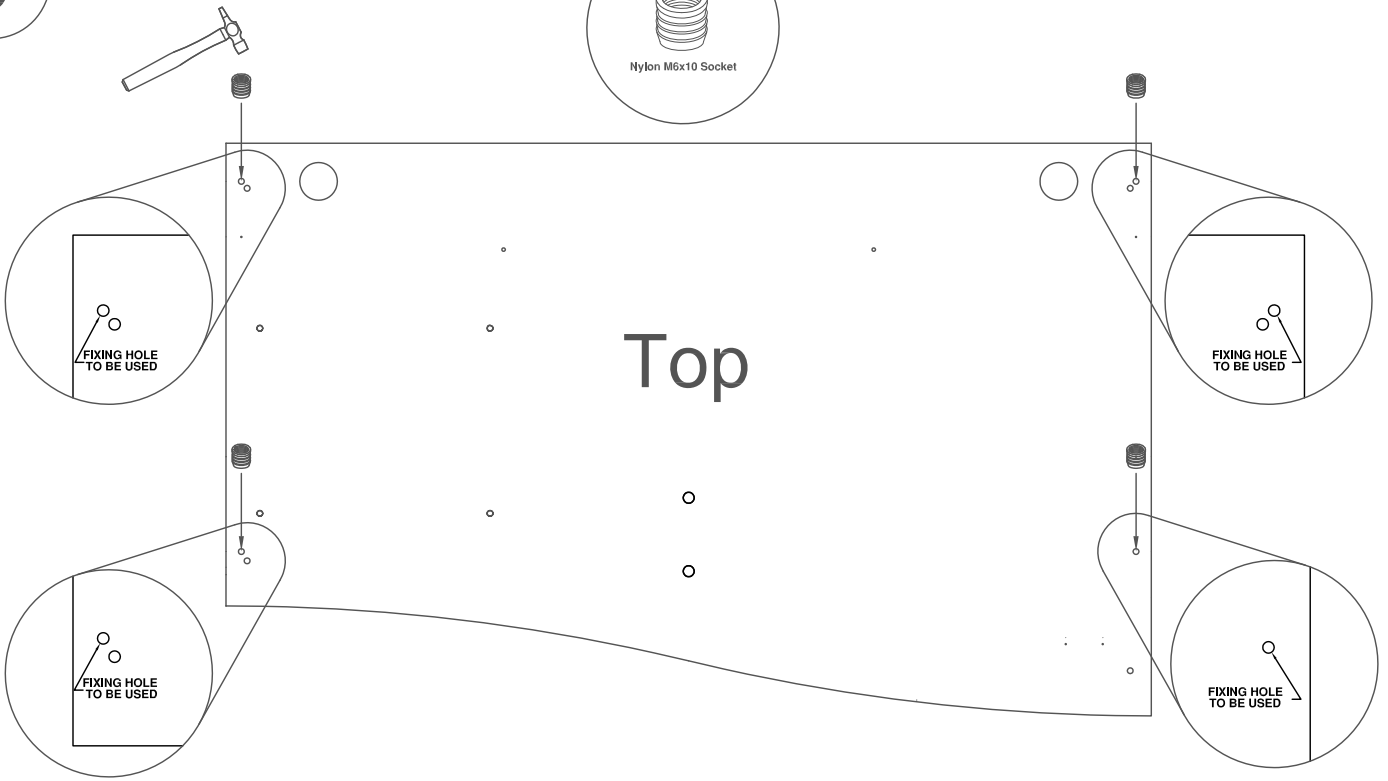


6


4x RM-BLT07




Mini fix bolt B34

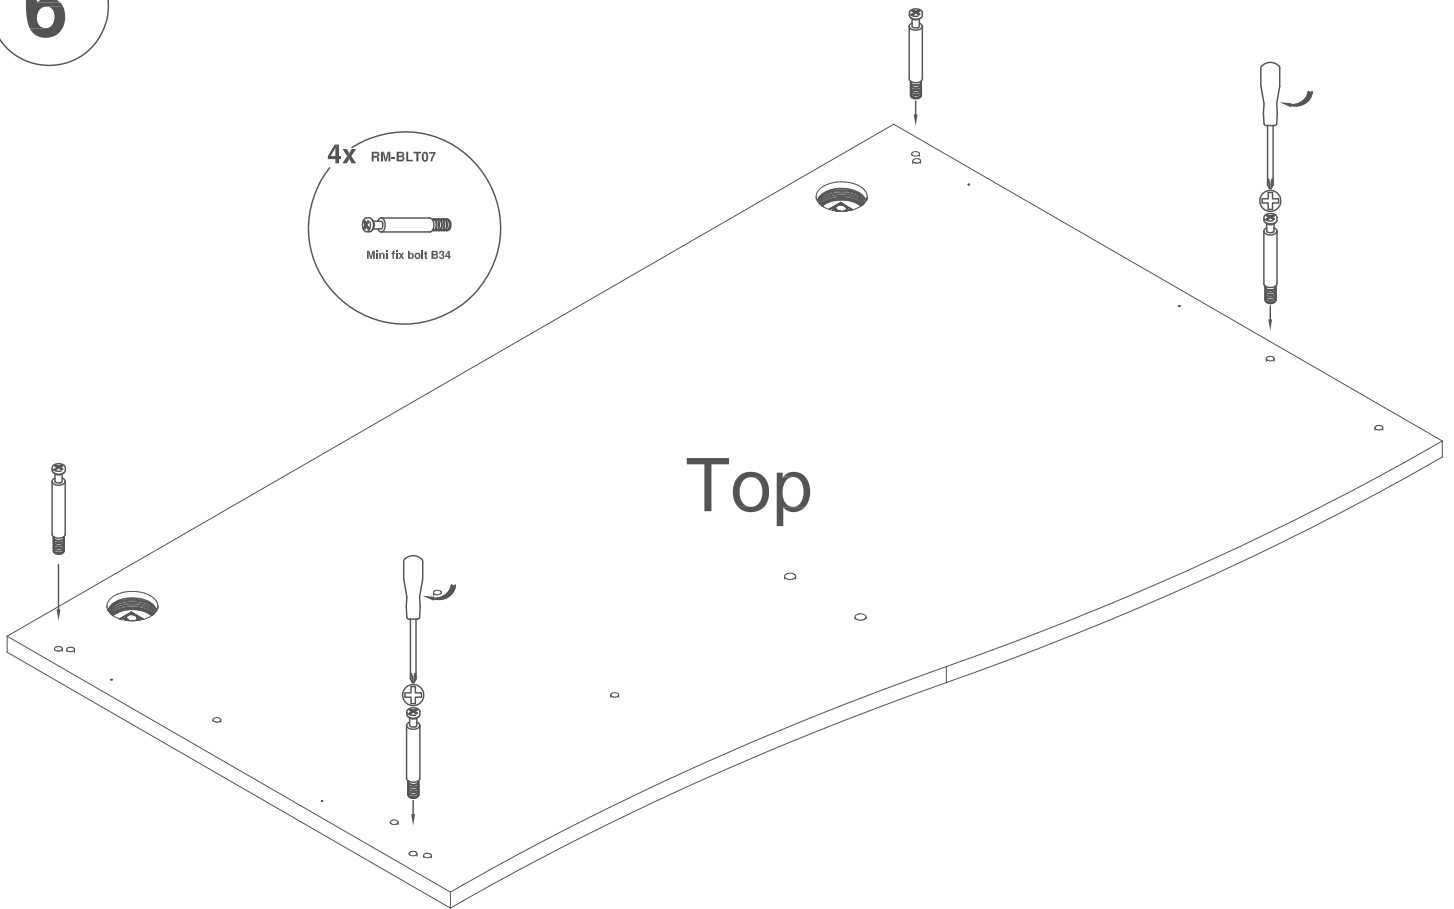



7

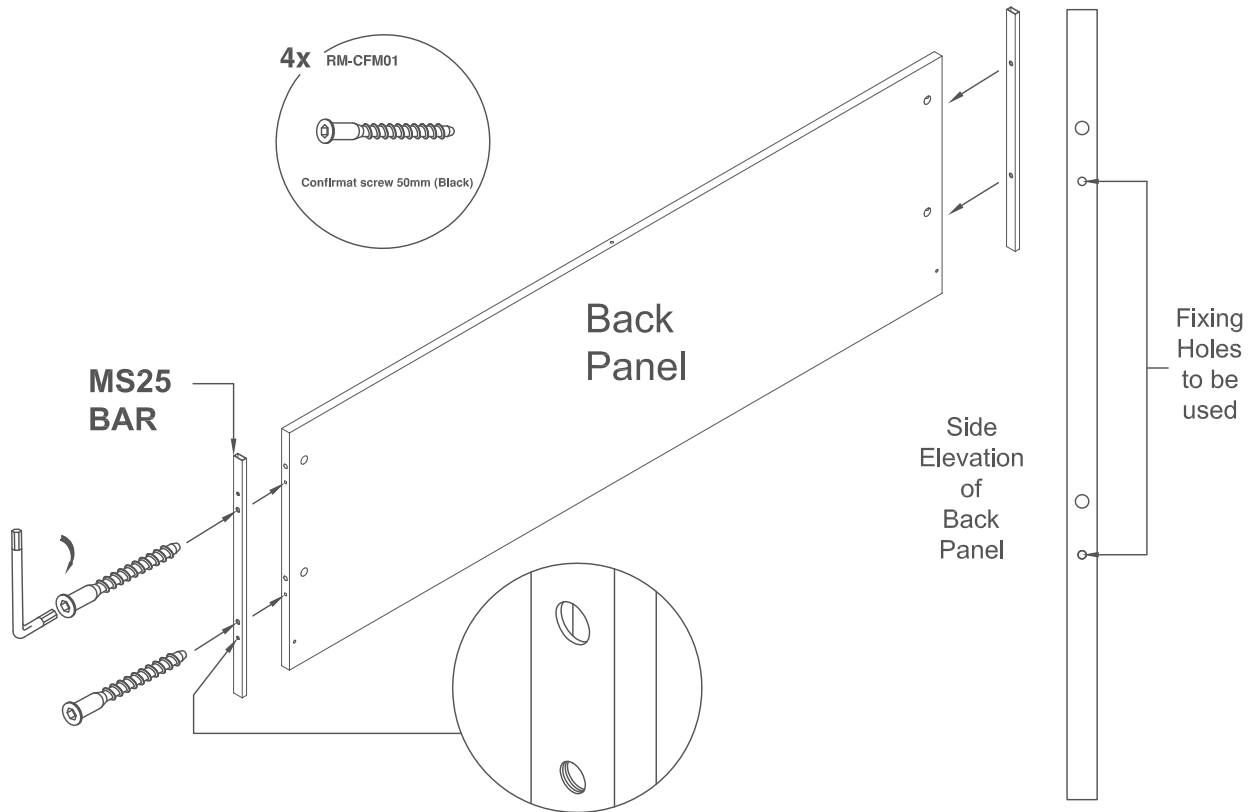


8

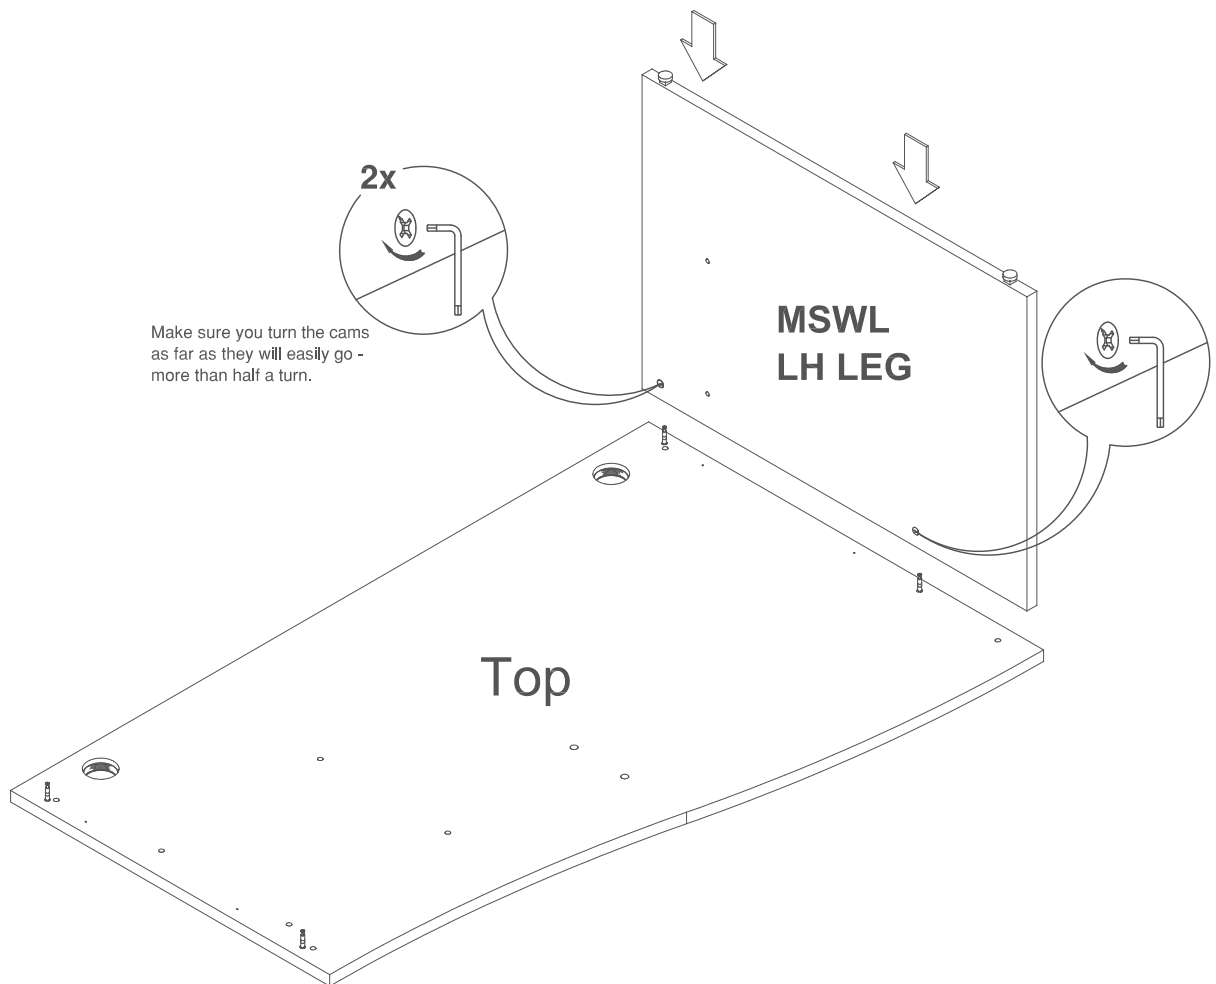

9

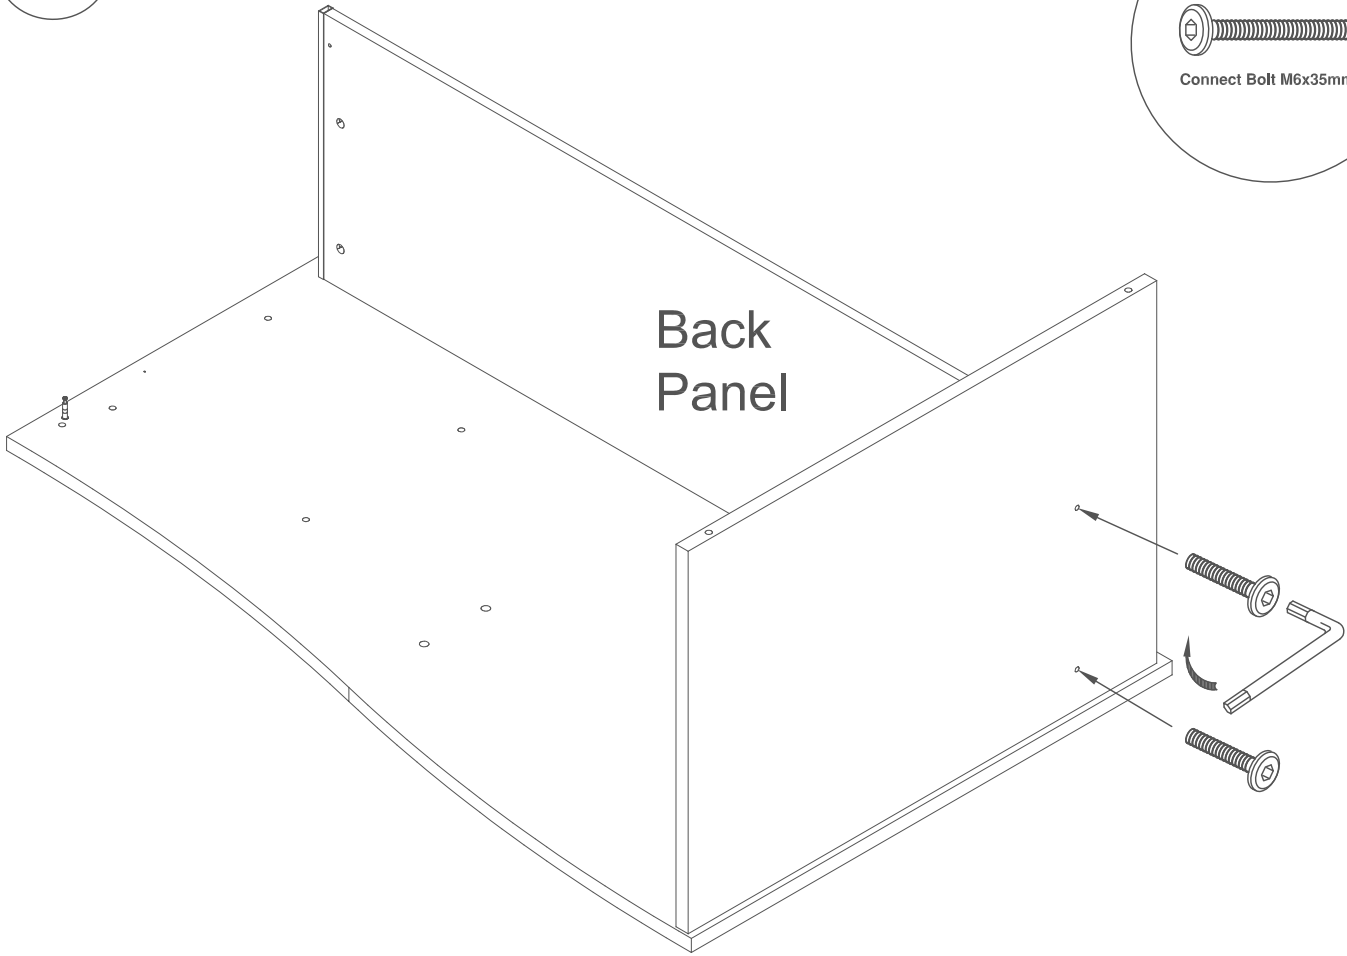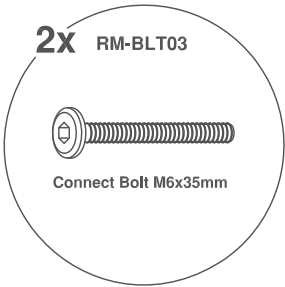

10

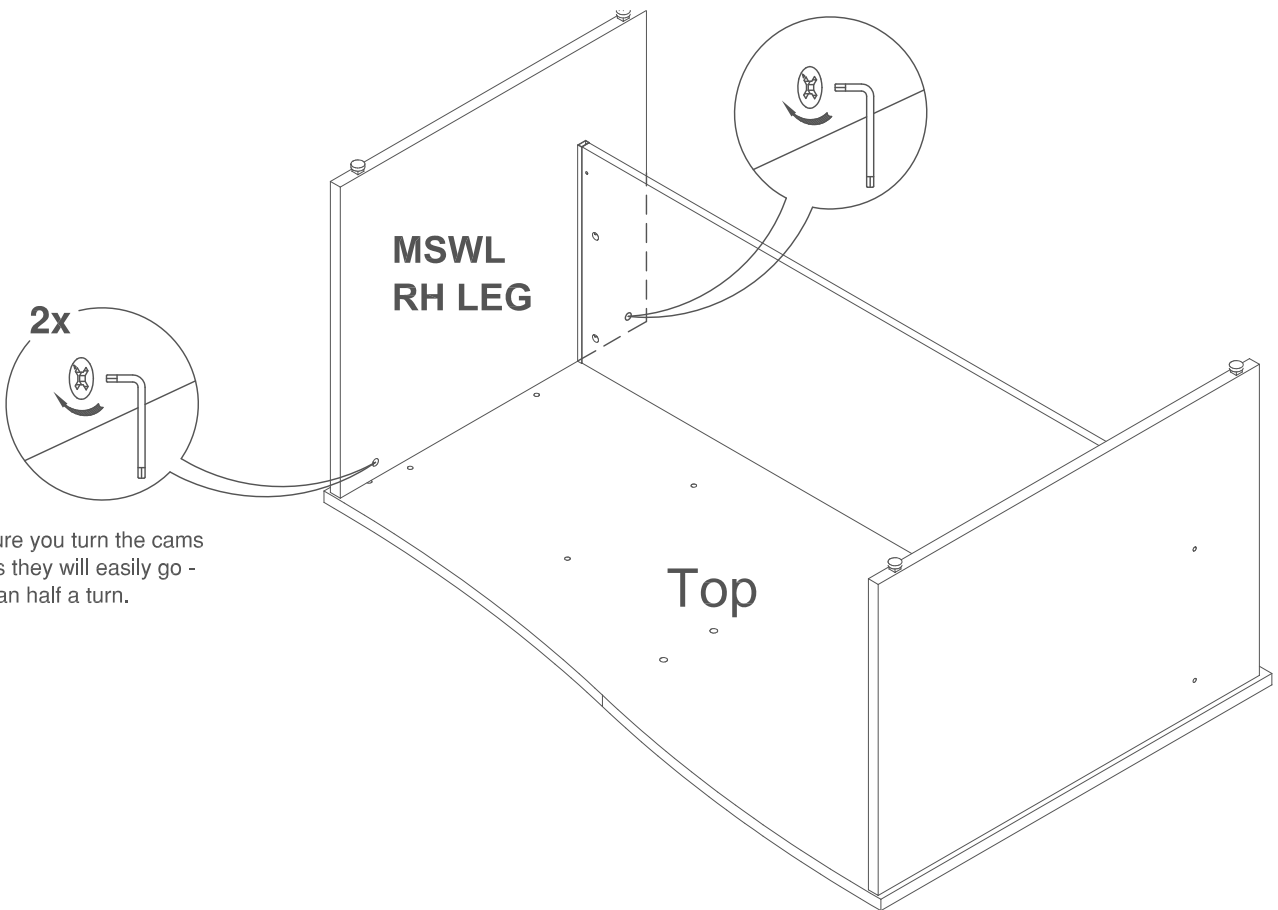

Make sure you turn the cams as far as they will easily go - more than half a turn.

11

2x RM-BLT03



Connect Bolt M6x35mm

