


Otto - Bench Seat Pads

LBSP1050 - LBSP1650 - HBSP1050 - HBSP1650





ASSEMBLY INSTRUCTIONS

Otto
Seat Bench Seat Pad


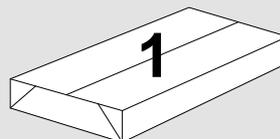


Pack 1:
1x Seat Pad


TOOLS REQUIRED
FOR ASSEMBLY

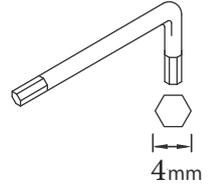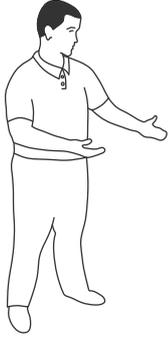


DONT STRUGGLE
2 MAN LIFT

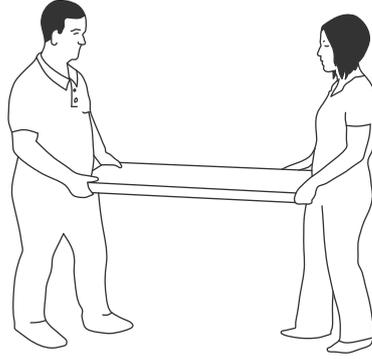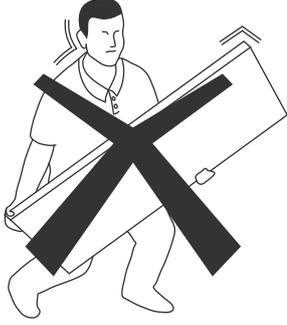


ALWAYS HANDLE
ITEMS WITH CARE

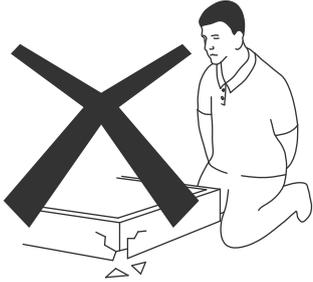

IF UNSURE CALL
FOR ASSISTANCE

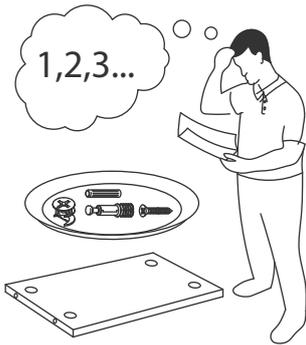


KEEP FITTINGS AWAY
FROM CHILDREN

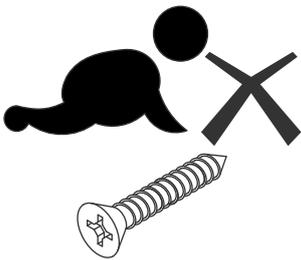




Please check that you have all the panels

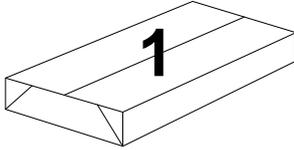

PACK 1:
1 x Seat Pad

1050 x 350mm = OT-10-3-SPAD
1650 x 350mm = OT-16-3-SPAD

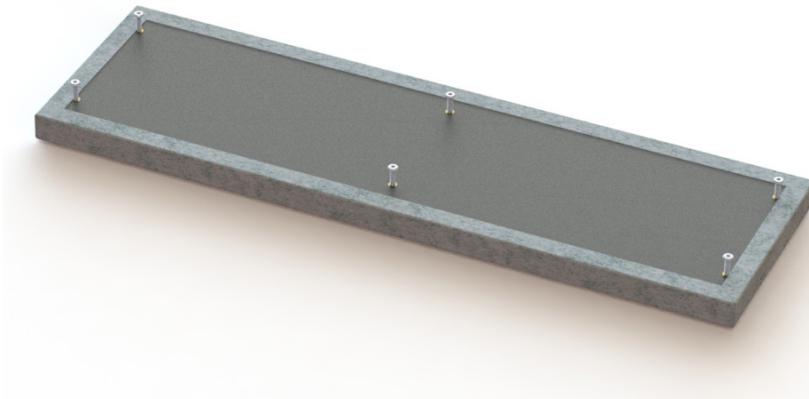

Please check that you have all the fittings

FITTINGS SUPPLIED



Connector Bolt - M6


Size **PCS**
35mm **4**

OTTO BENCH SEAT PAD ASSEMBLY

1

Step 1

Unpack your new Otto bench seat pad, removing the bolts as shown and please recycle all packaging.


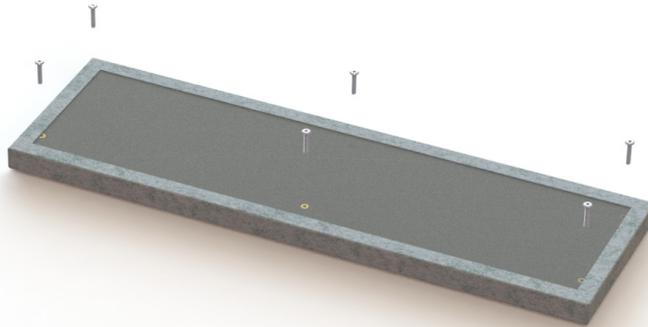


2

Step 2

Drill out the part drilled 8mm holes located on the underside of the bench top panel.



Please ensure the top is on a workable surface or a block so not to damage the top nor anything underneath.

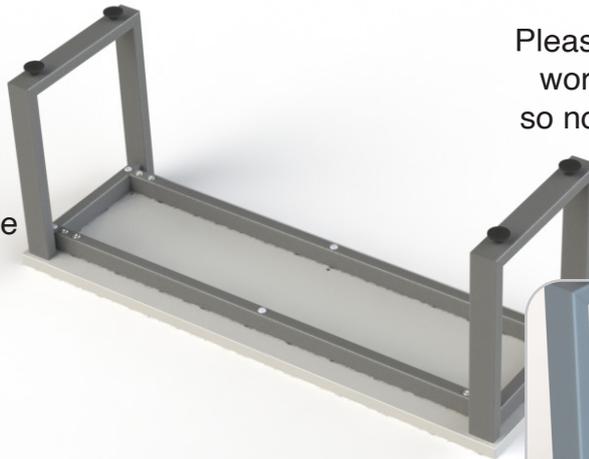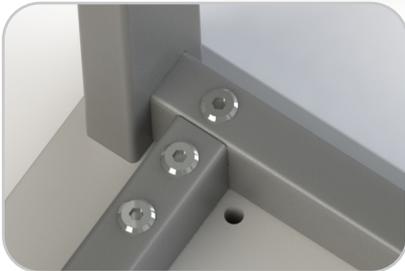

3

Step 3



Position the seat pad to the bench top and attach using the M6 x 35mm bolts as shown.

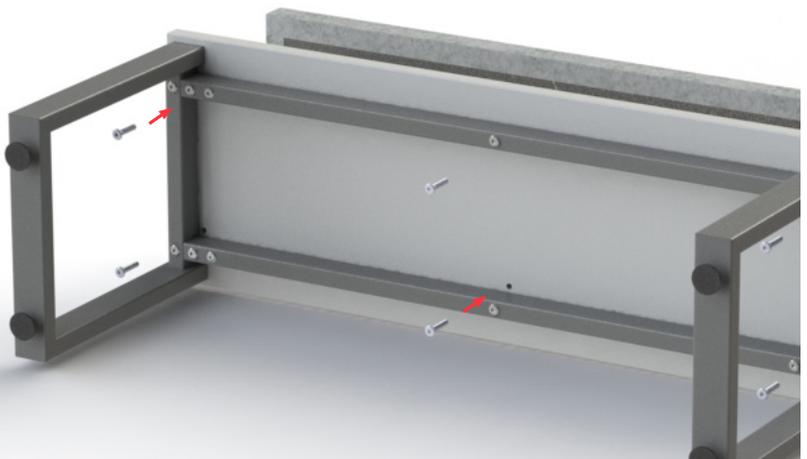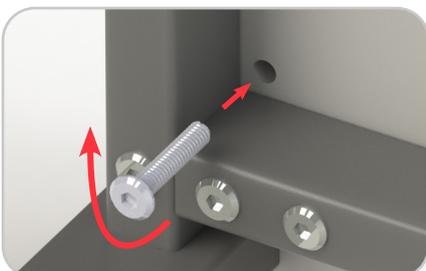

4

Step 4

Tighten the M6 x 35mm bolts as shown turning clockwise.

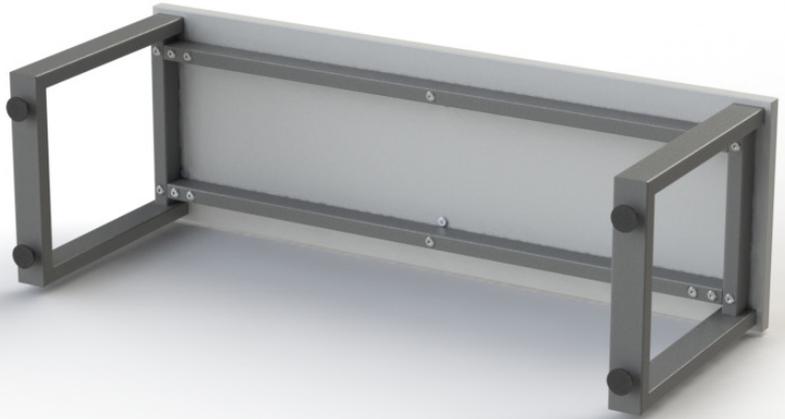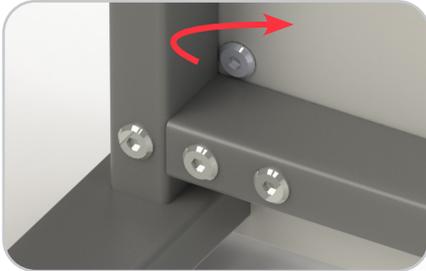

5

Step 5

Turn over and make sure the levelling feet are set.

