

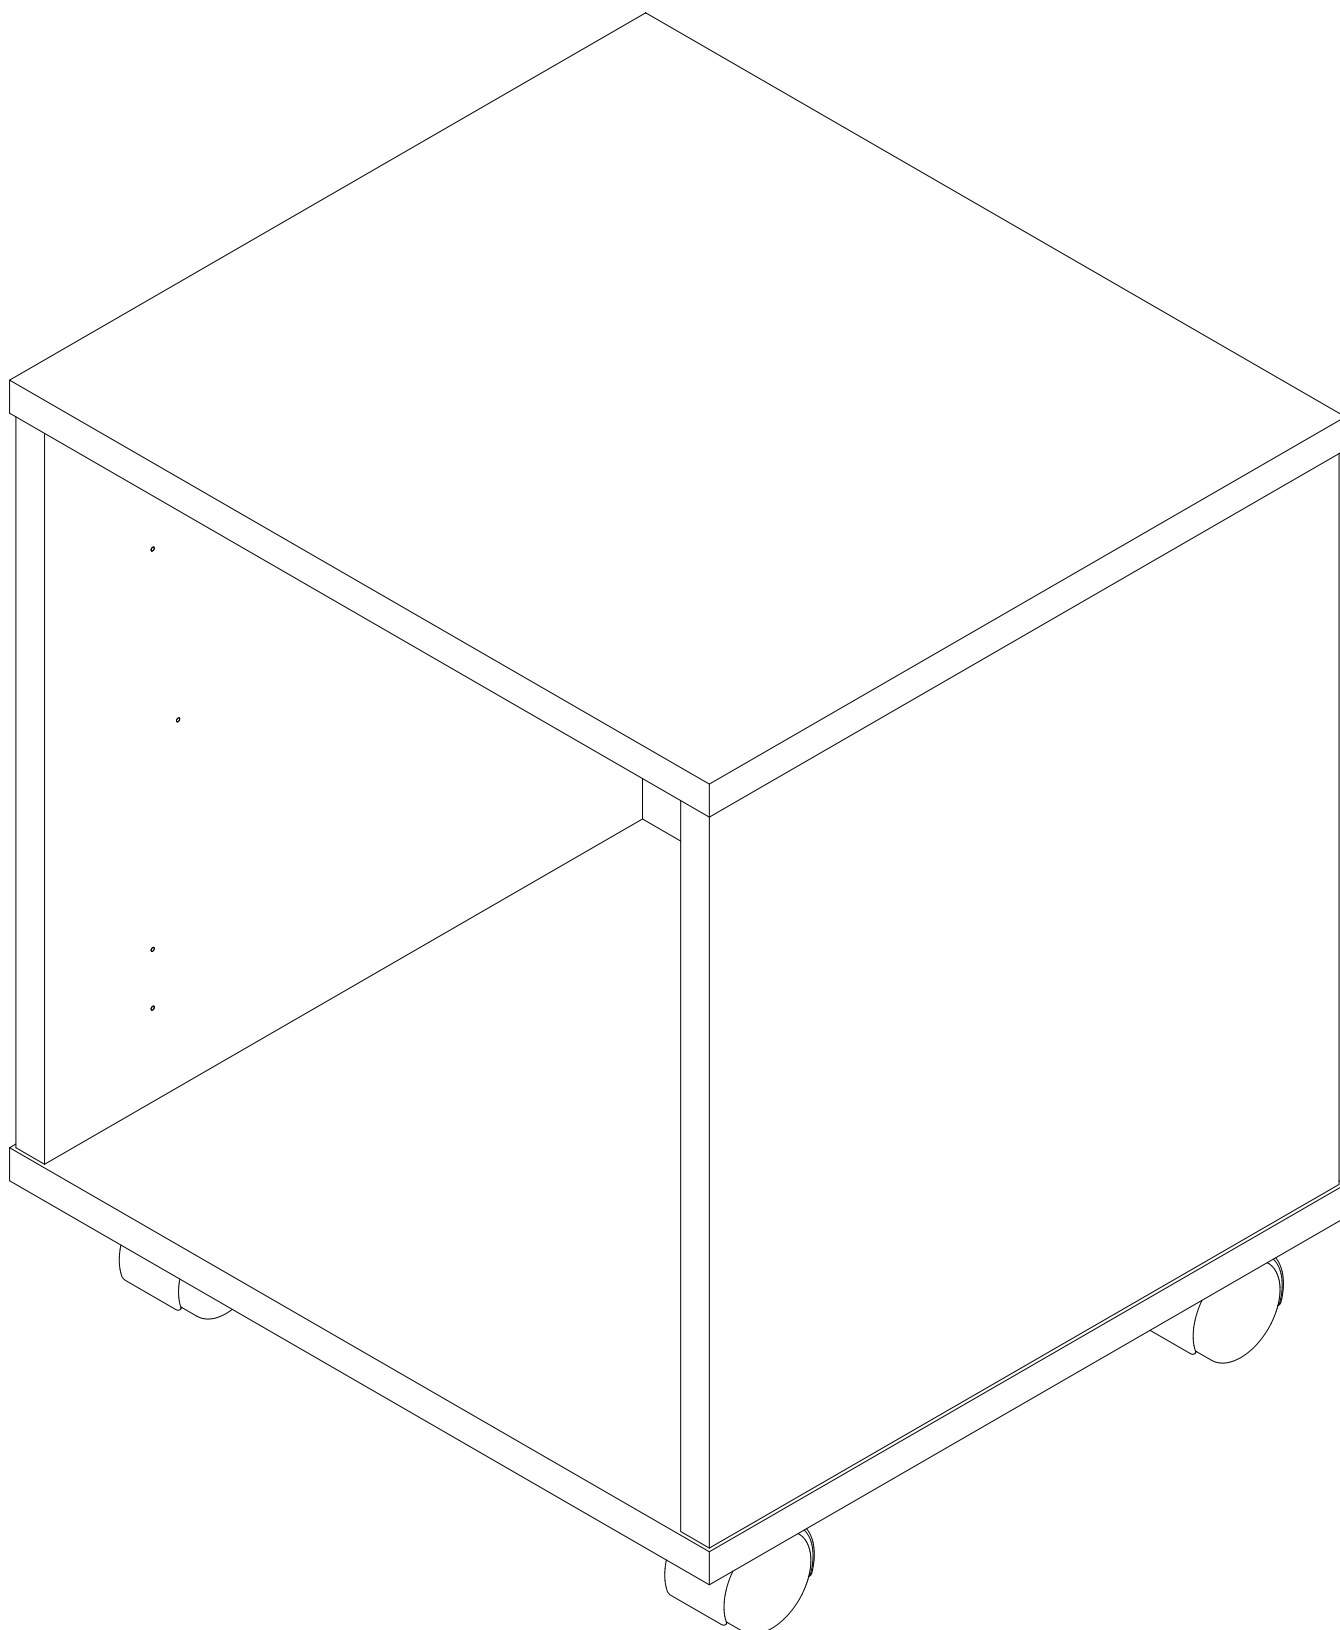




# UMP1





**TOOLS REQUIRED  
FOR ASSEMBLY**

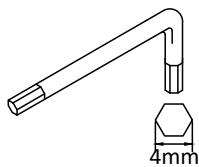


**DONT STRUGGLE  
2 MAN LIFT**

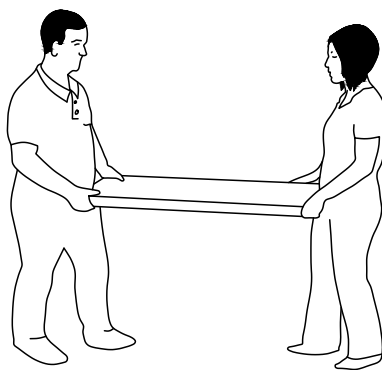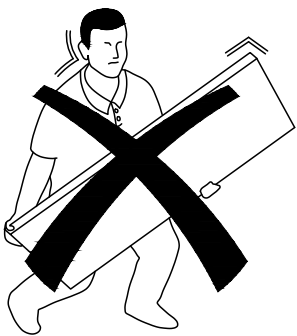



**ALWAYS HANDLE  
ITEMS WITH CARE**

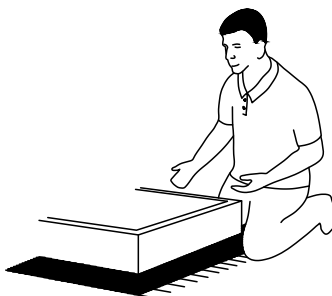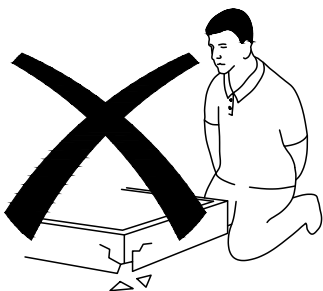

**IF UNSURE CALL  
FOR ASSISTANCE**

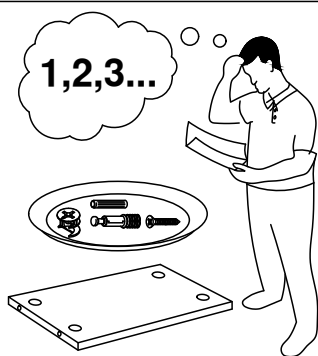

**KEEP FITTINGS AWAY  
FROM CHILDREN**

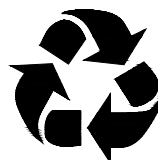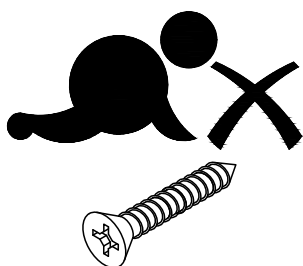





## Please check that you have all the panels




SINGLE MOBILE PEDESTAL

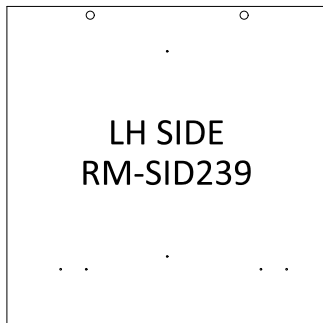


LH SIDE  
RM-SID239

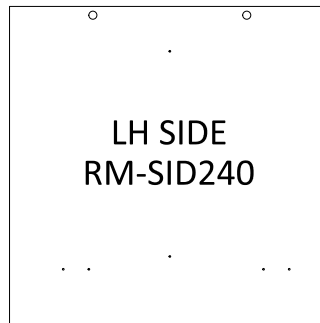


LH SIDE  
RM-SID240

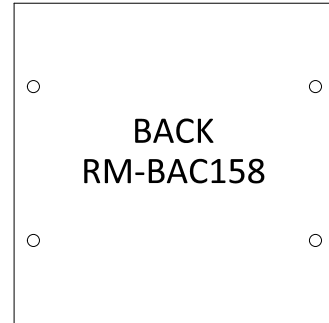

BACK  
RM-BAC158

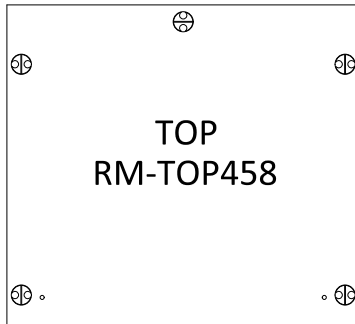

TOP  
RM-TOP458

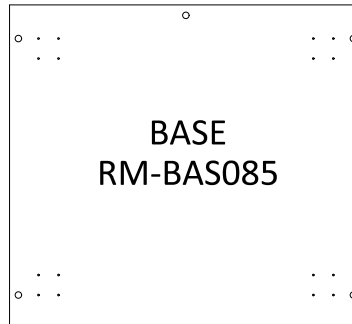


BASE  
RM-BAS085



## Please check that you have all the hardware

QUANTITY - 4




24mm QUICKFIX PIN  
RM-BLT006

QUANTITY - 4




15mm QUICKFIX CAM  
RM-CAM03

QUANTITY - 5

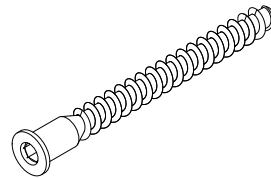


70mm CONFIRMAT SCREW  
RM-CFM02

QUANTITY - 5

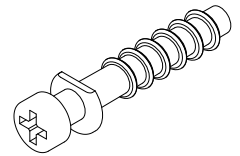


CONNECTOR SCREW  
RM-PIN01

QUANTITY - 4

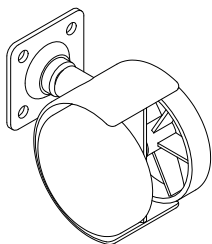


50mm CASTOR WITH PLATE

QUANTITY - 16

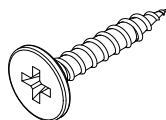

4 x 20mm WOOD SCREW  
RM-SCR37

QUANTITY - 1

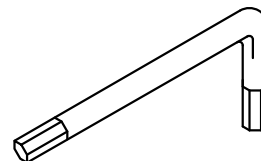



ALLEN KEY 4MM  
RM-ALK01

Prepare all the panels by inserting the listed fittings into the corresponding holes.

1

**Step 1**



Insert pins into the pre drilled holes on the LH side panel.

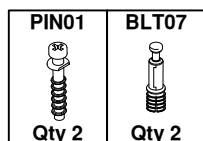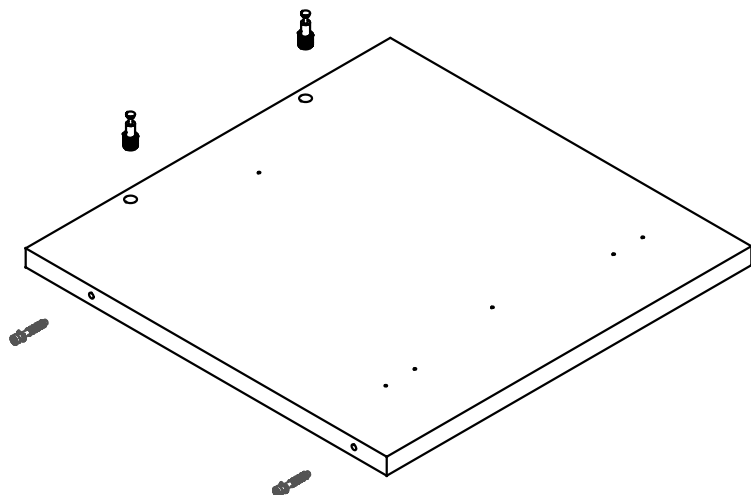

2

**Step 2**



Insert pins into the pre drilled holes on the RH side panel.

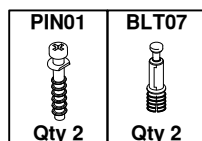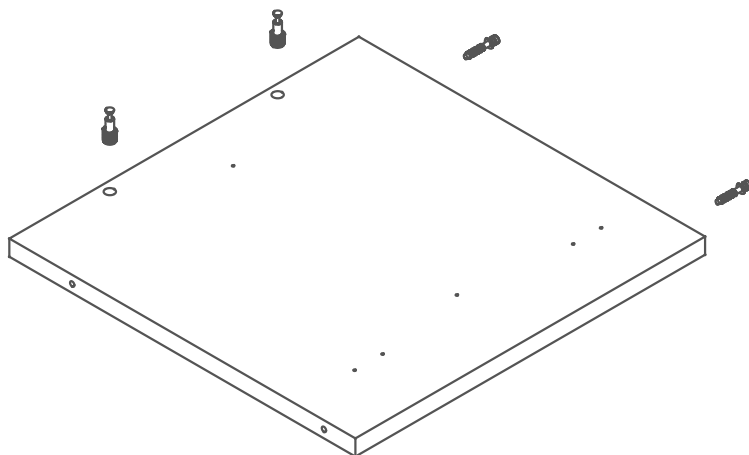

3

**Step 3**


Insert cams & pins into the pre drilled holes on the back panel.

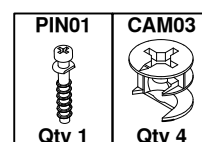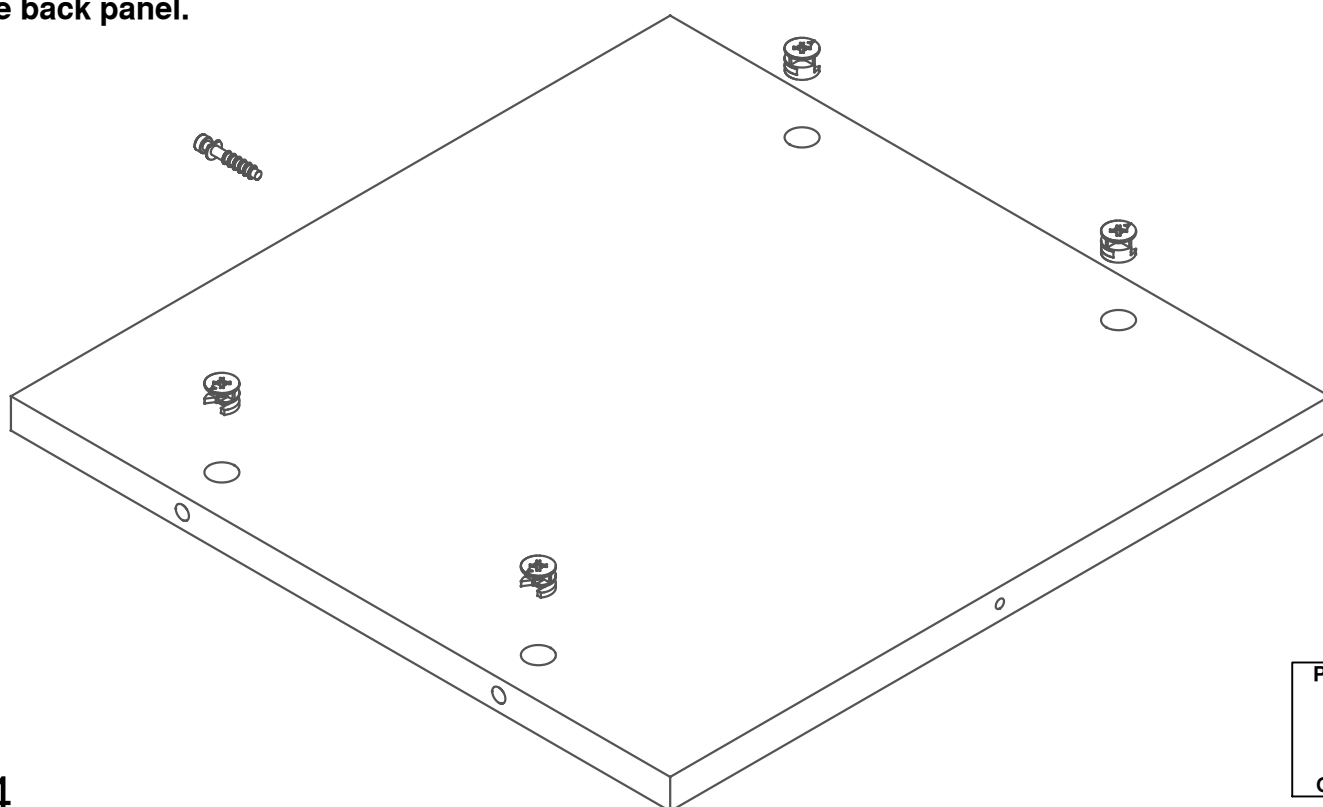

4

**Step 4**  
**Attach the sides to back panel.**


Once the cams and pins are engaged ensure that the cams are fully tightened.

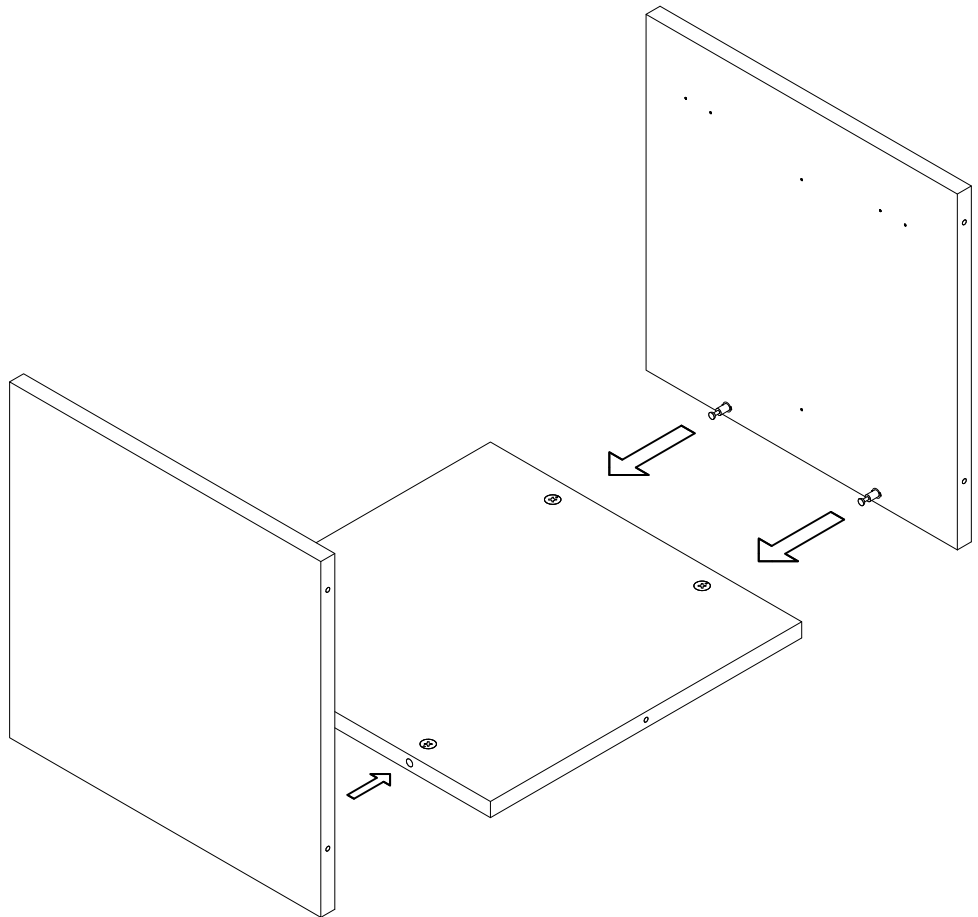

5

**Step 5**  
**Attach the top panel to unit.**

Once the cams and pins are engaged ensure that the cams are fully tightened.

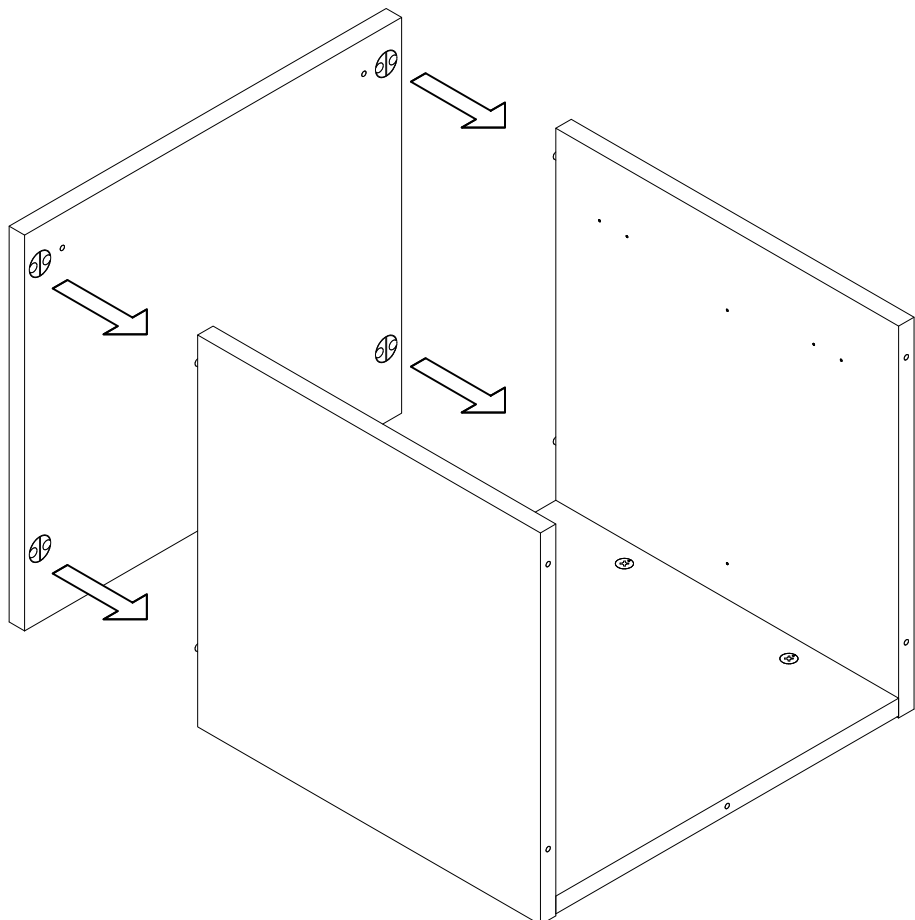


**Step 6**


**Attach the base to the unit using the confirmat screws provided.**

**A 4mm Allen key is required to insert the screws.**

**Ensure they are fully screwed in before attempting to attach the castors.**

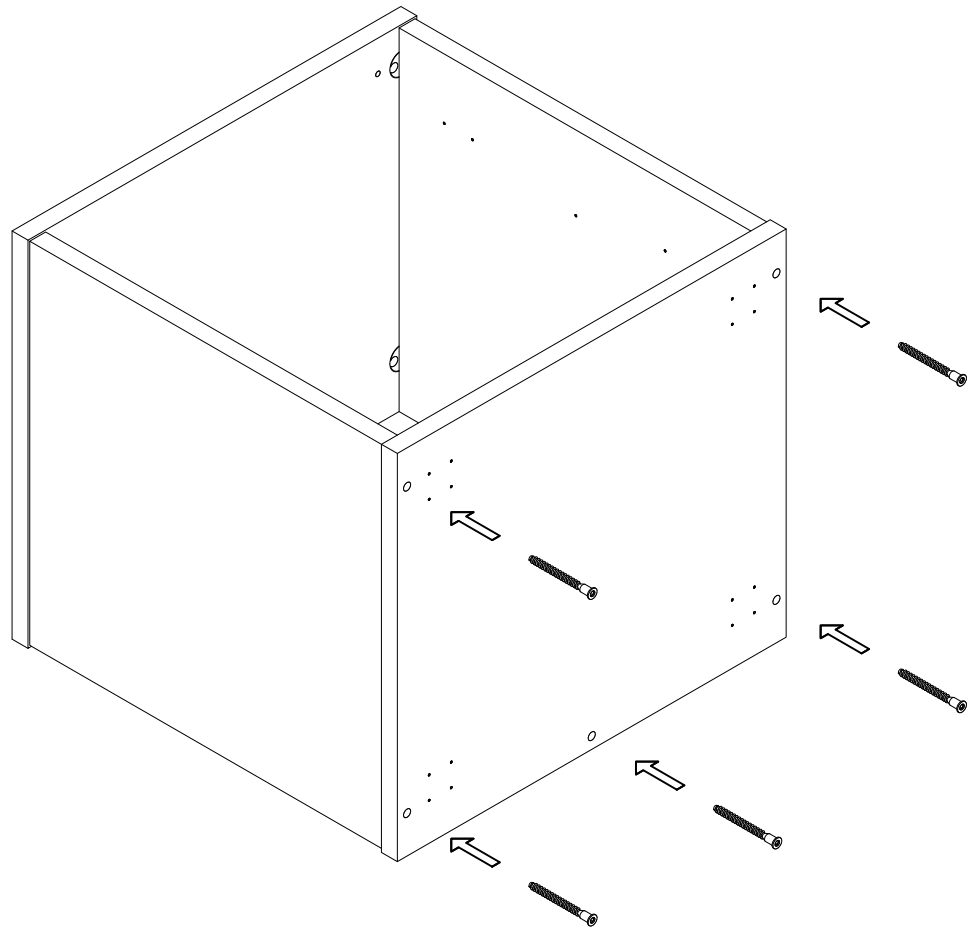

QUANTITY - 5

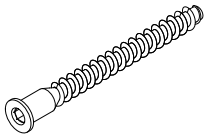


70mm CONFIRMAT SCREW  
RM-CFM02

**Step 7**


**Attach the 4 castor plates the base of the unit.**

**Each plate should be attached using 4 of the 4x20mm wood screws provided.**

**Once attached knock castors on the plate.**

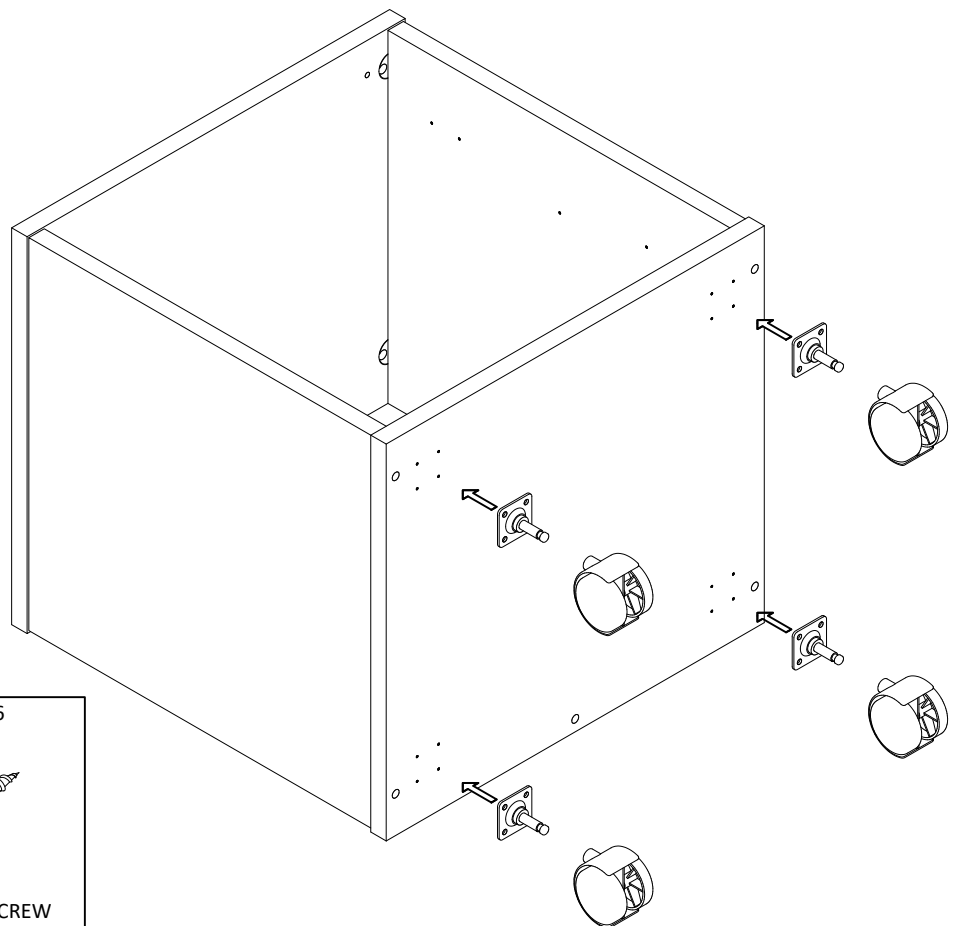


QUANTITY - 4

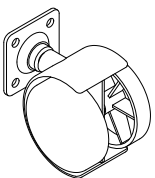



50mm CASTOR WITH PLATE



QUANTITY - 16

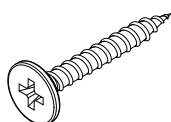

4 x 20mm WOOD SCREW  
RM-SCR37

**Step 8**  
**Stand the unit upright and**  
**position in your desired**  
**location.**

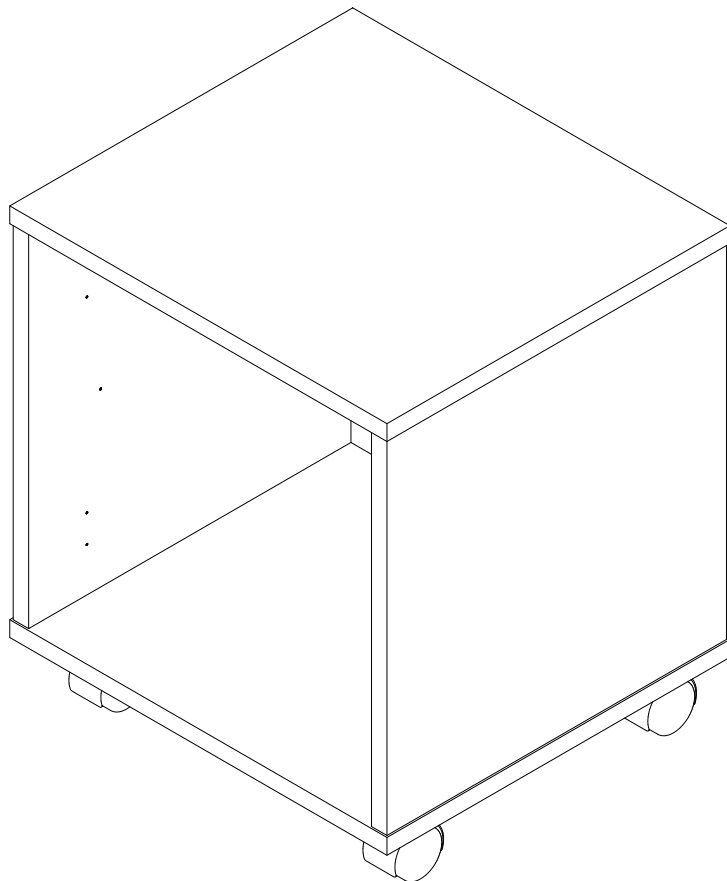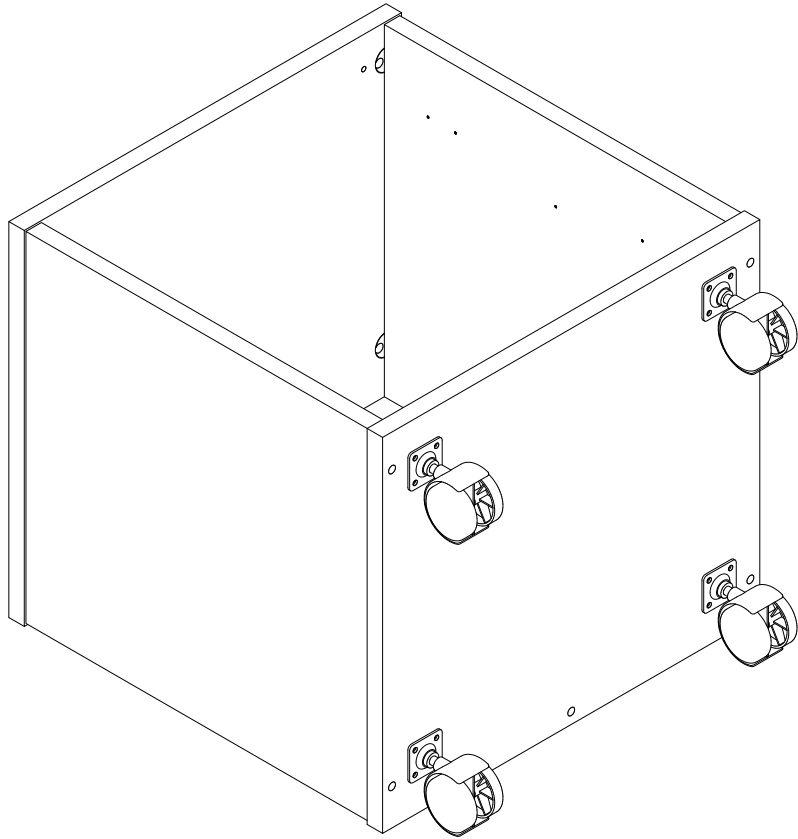

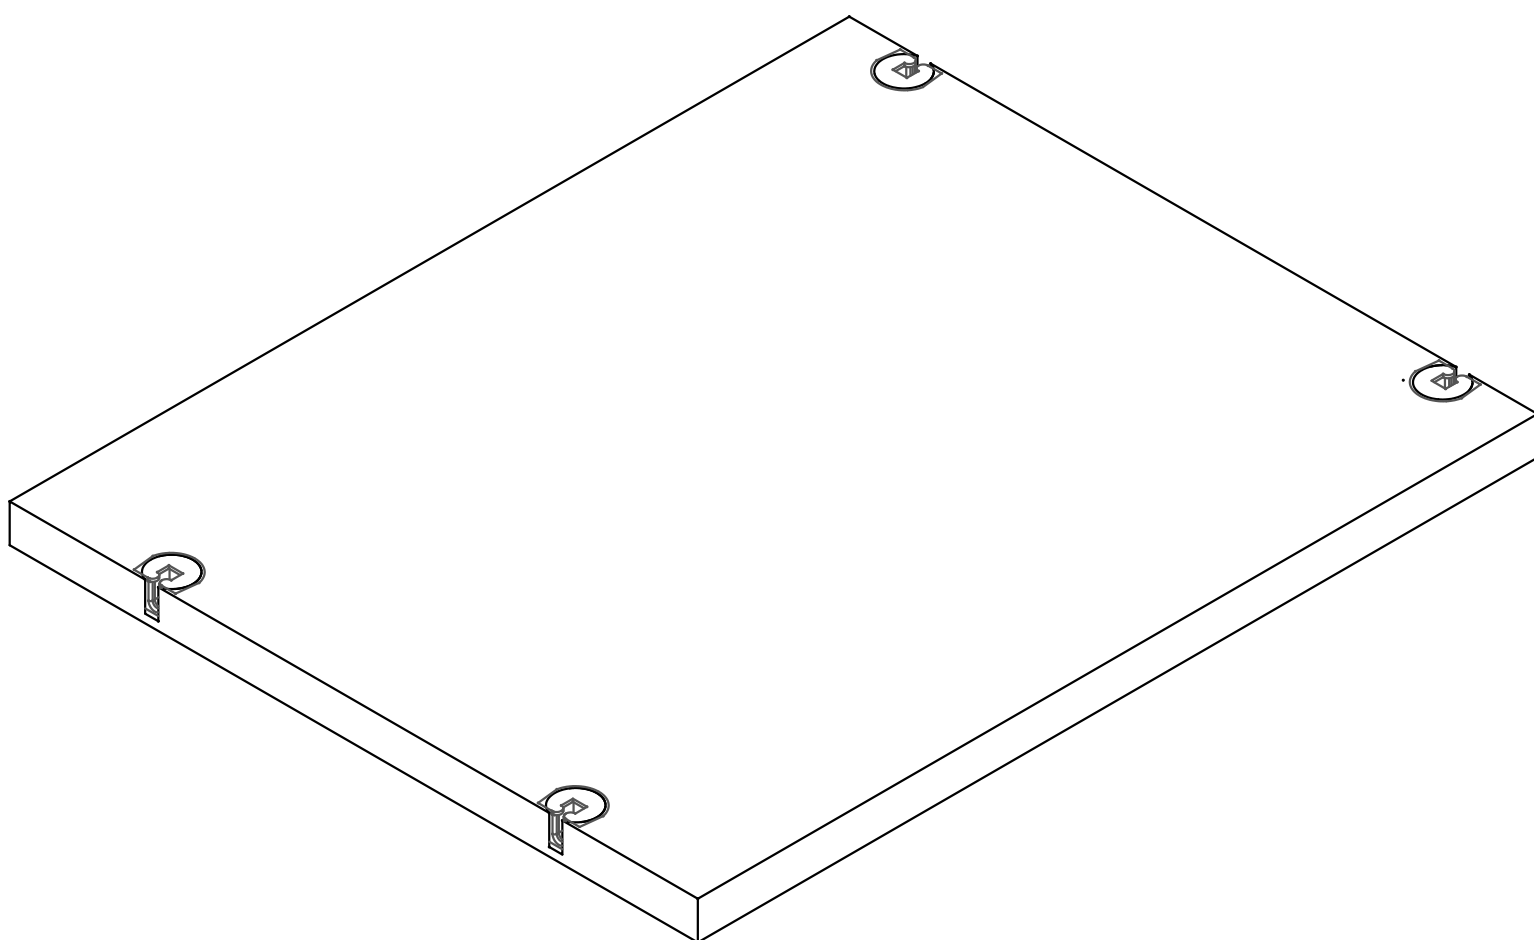






Please check that you have all components




SHELF  
RM-SHE040

QUANTITY - 4

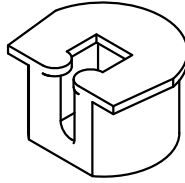

EXPANDING WEDGEFIX  
SY3151

QUANTITY - 4




QUICKFIX DOWELS  
SY3152

Prepare all the panels by inserting the listed fittings into the corresponding holes.


1

**Step 1**  
Insert shelf fittings into the pre drilled holes on the shelf panel.

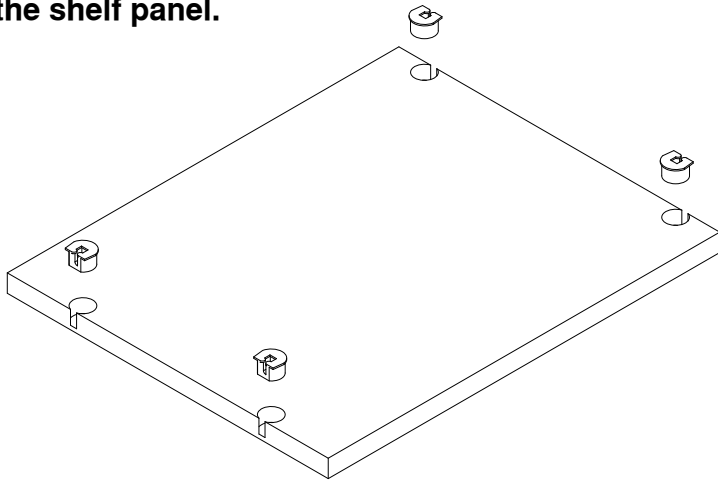



2



**Step 2**  
Screw shelf fitting into the pre drilled holes on the RH and LH side panels.

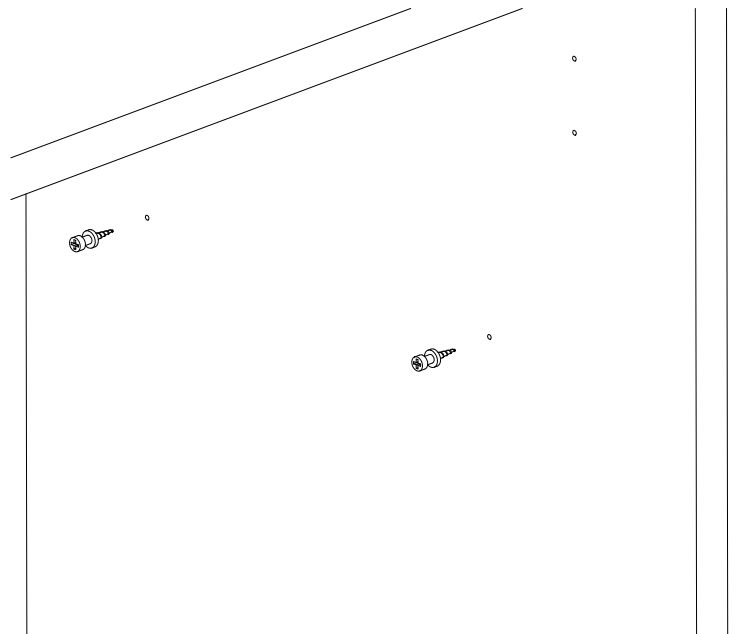

3


**Step 3**  
Insert shelf panel in the section to have shelf & drop onto pins making sure they are fully engaged.

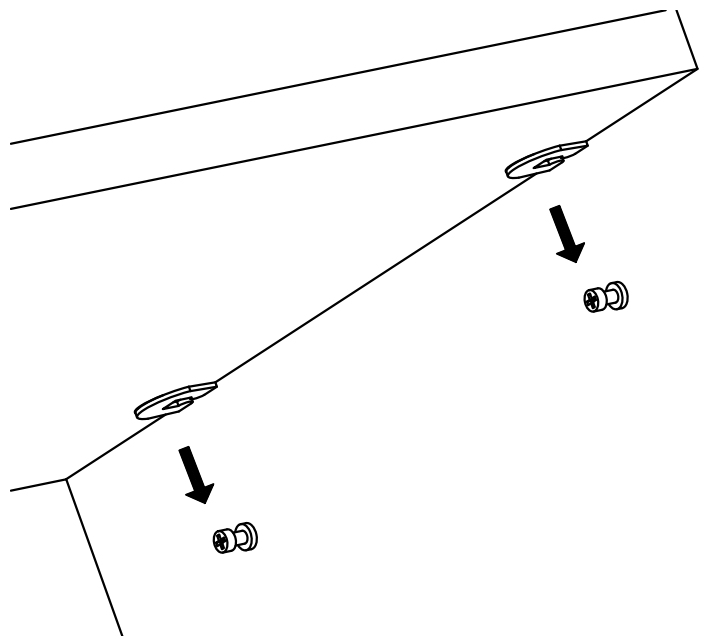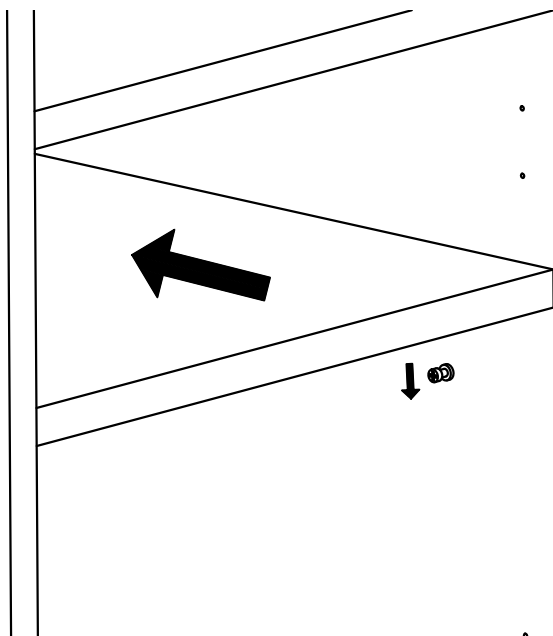

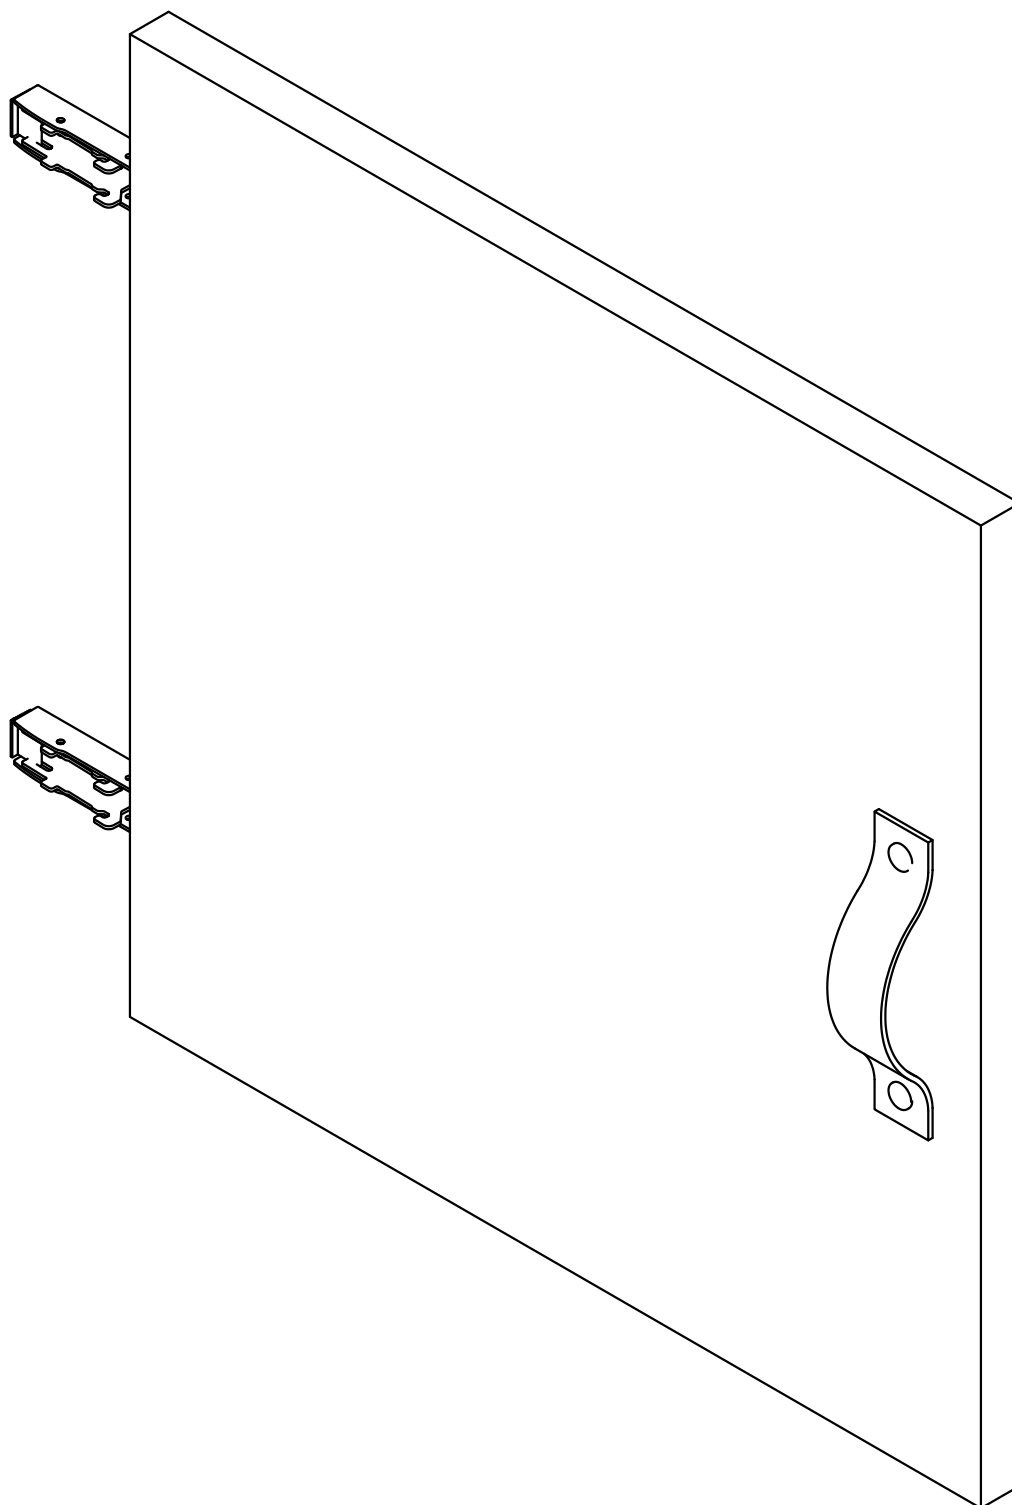



Please check that you have all the panels!

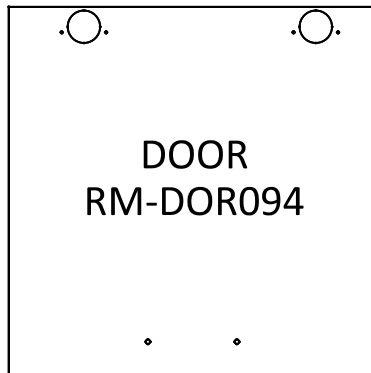

Please check that you have all the hardware!




QUANTITY - 2




M4 x 6mm SLOTTED SCREW  
RM-SCR27

QUANTITY - 2

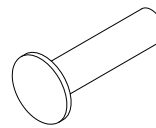


M4 x 20mm BOOK SCREW  
RM-SCR28

QUANTITY - 4

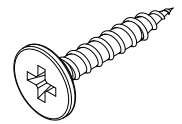


3.5 x 15mm WOOD SCREW  
RM-SCR26

QUANTITY - 1

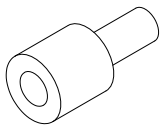


5mm Door Stop Peg

QUANTITY - 2

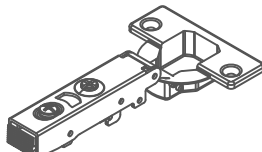


110' CLIP ON - SOFT CLOSE

QUANTITY - 2



CLIP ON HINGE PLATE

QUANTITY - 1

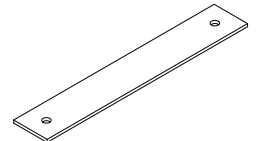




LEATHER STRAP HANDLE  
RM-HDL18

1


2

**Step 1**  
Place the hinges into the pre drilled holes on the inside face of the door panel.

**Step 2**  
Attach the hinges using the 3.5 x 15mm wood screws, 2 screws per hinge.

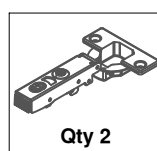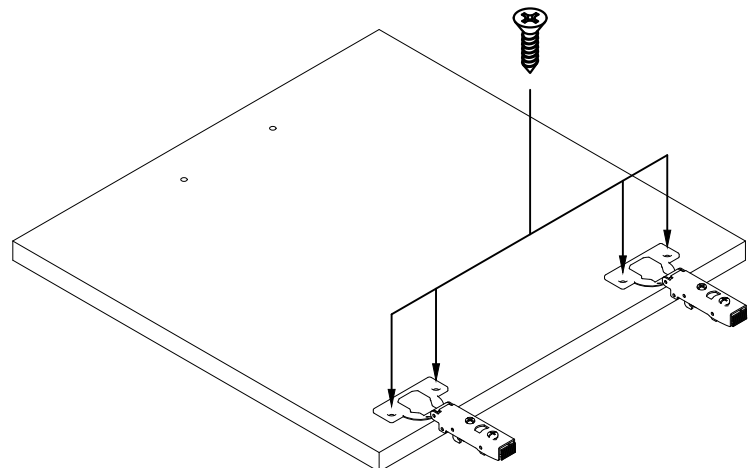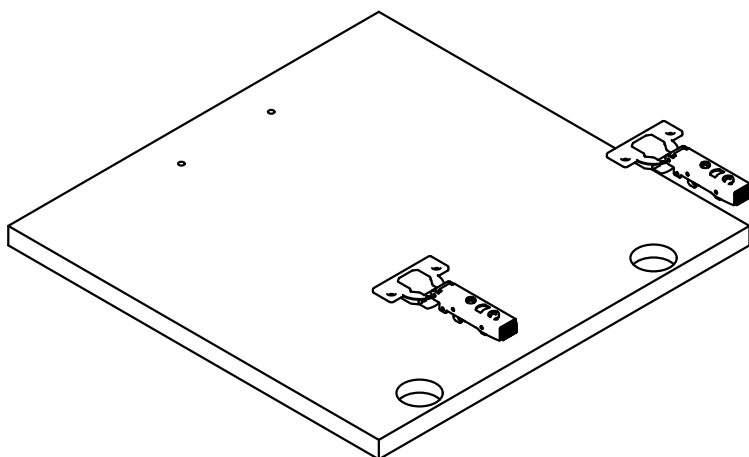

Qty 2

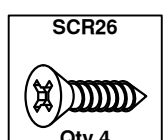

SCR26


Qty 4

3

**Step 3**

**Attach leather handle to door using binding screws provided.**

**Slotted part of screw to the inside of door.**

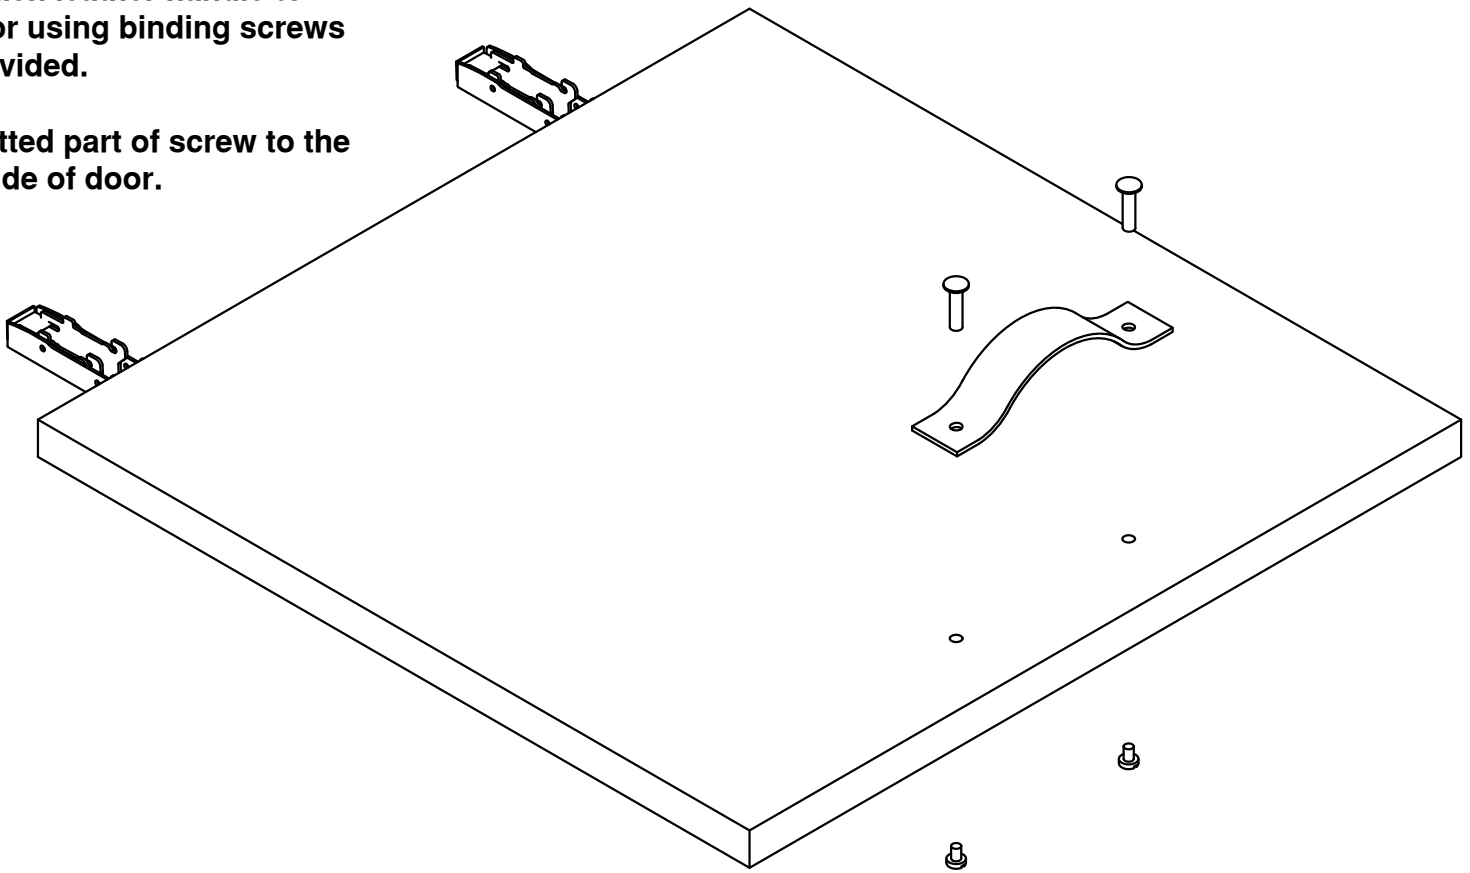


4


**Step 4**

**Attach the hinge plates to the pre drilled holes on the inside face of the bookcase side panels, these plates are fitted with pre attached screws.**


**Ensure the plate is fitted as per diagram 1.**

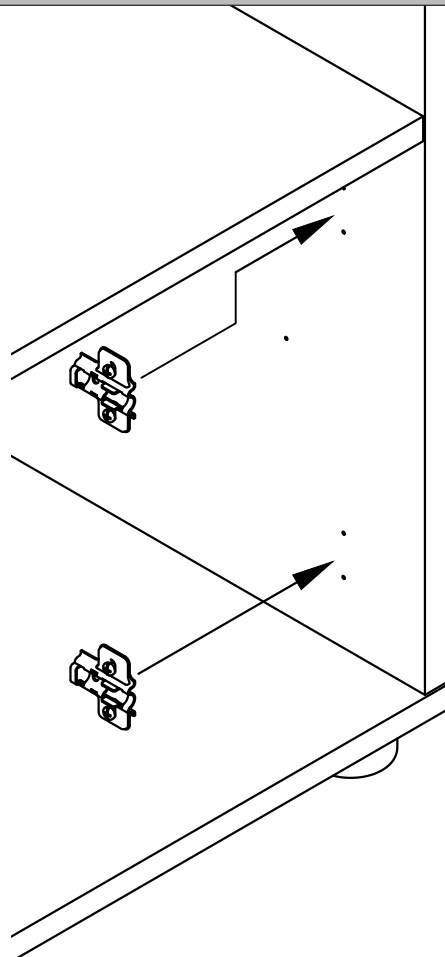

**Diagram 1**

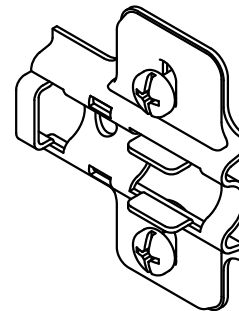

EDGE OF UNIT

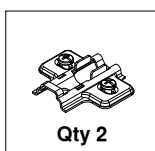


Qty 2


**Step 5**

**Attach door to the unit. Diagrams 2 & 3 show how to lock the hinge to the plate. Always lock the top hinge into place first before repeating for bottom hinge.**



**Once the door is attached insert the door stop peg to prevent the door from closing in too far.**

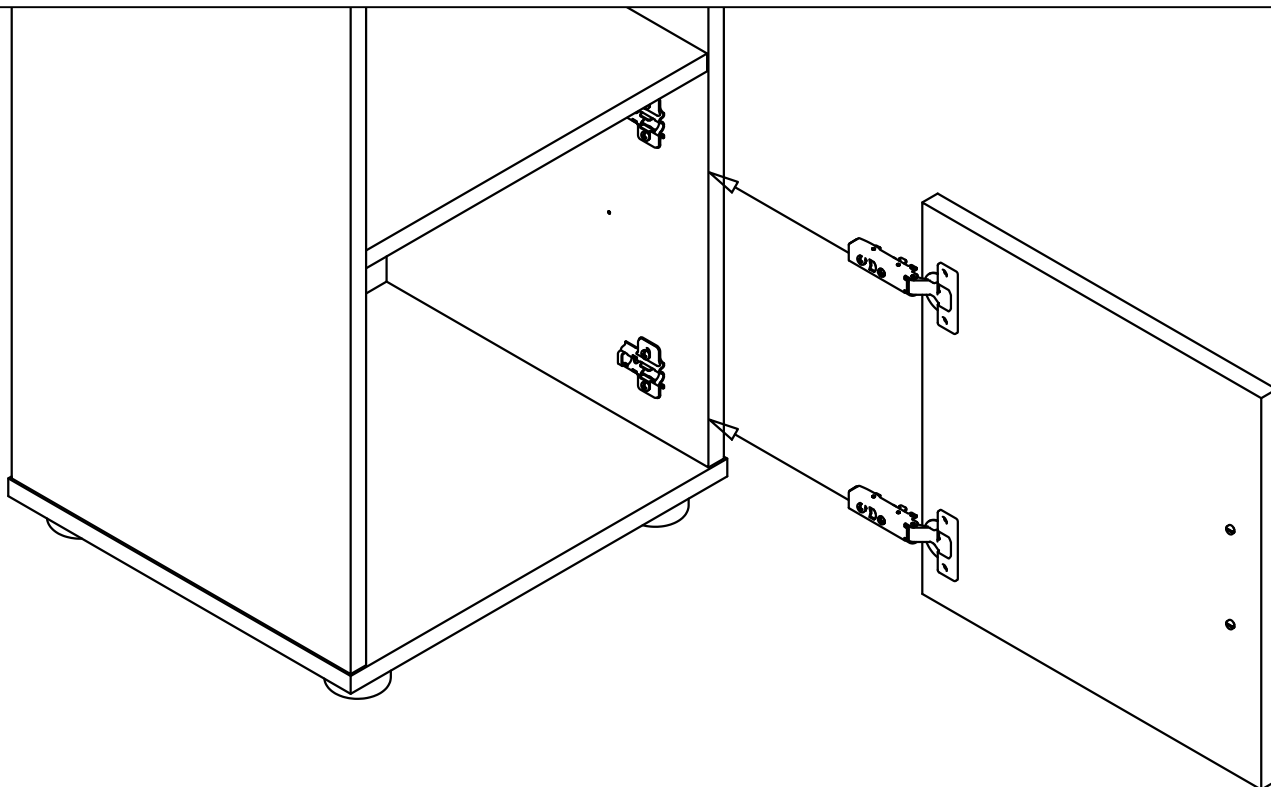


**Ensure the hook of the hinge locates into the hinge plate.**

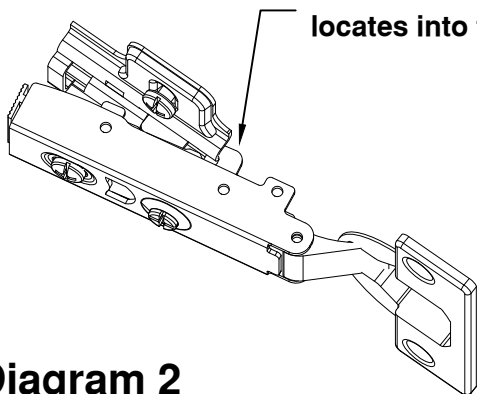
**Diagram 2**

**Fasten the hinge to the plate by applying pressure here.**

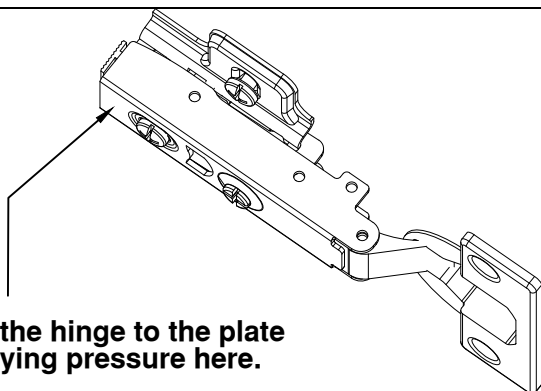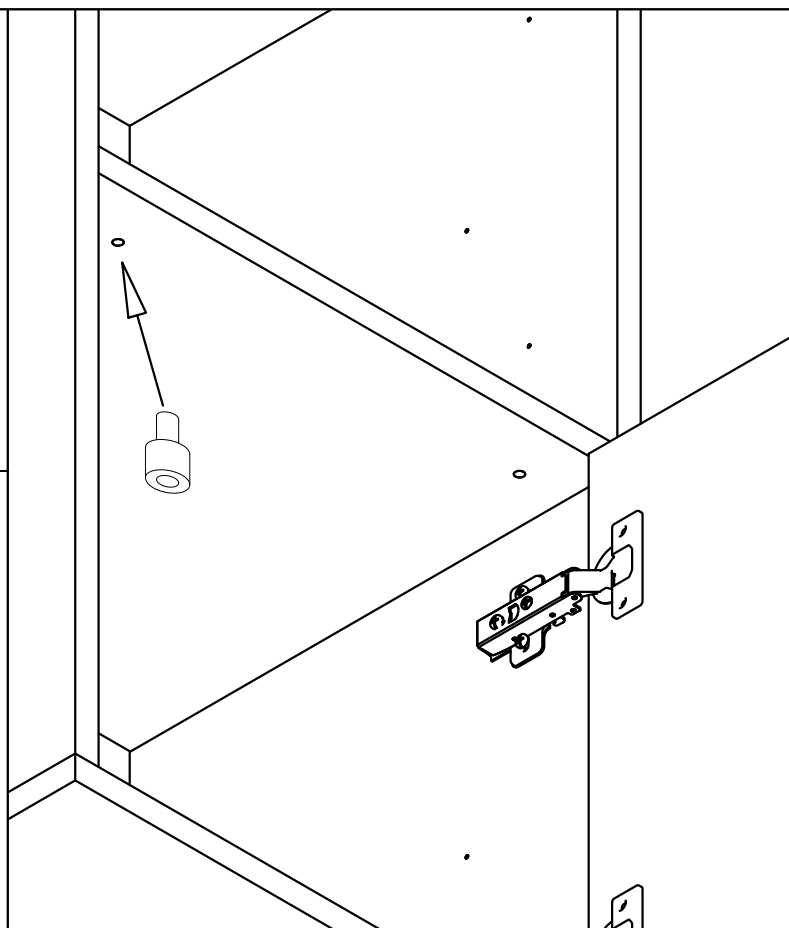**Diagram 3**




# CSI-D

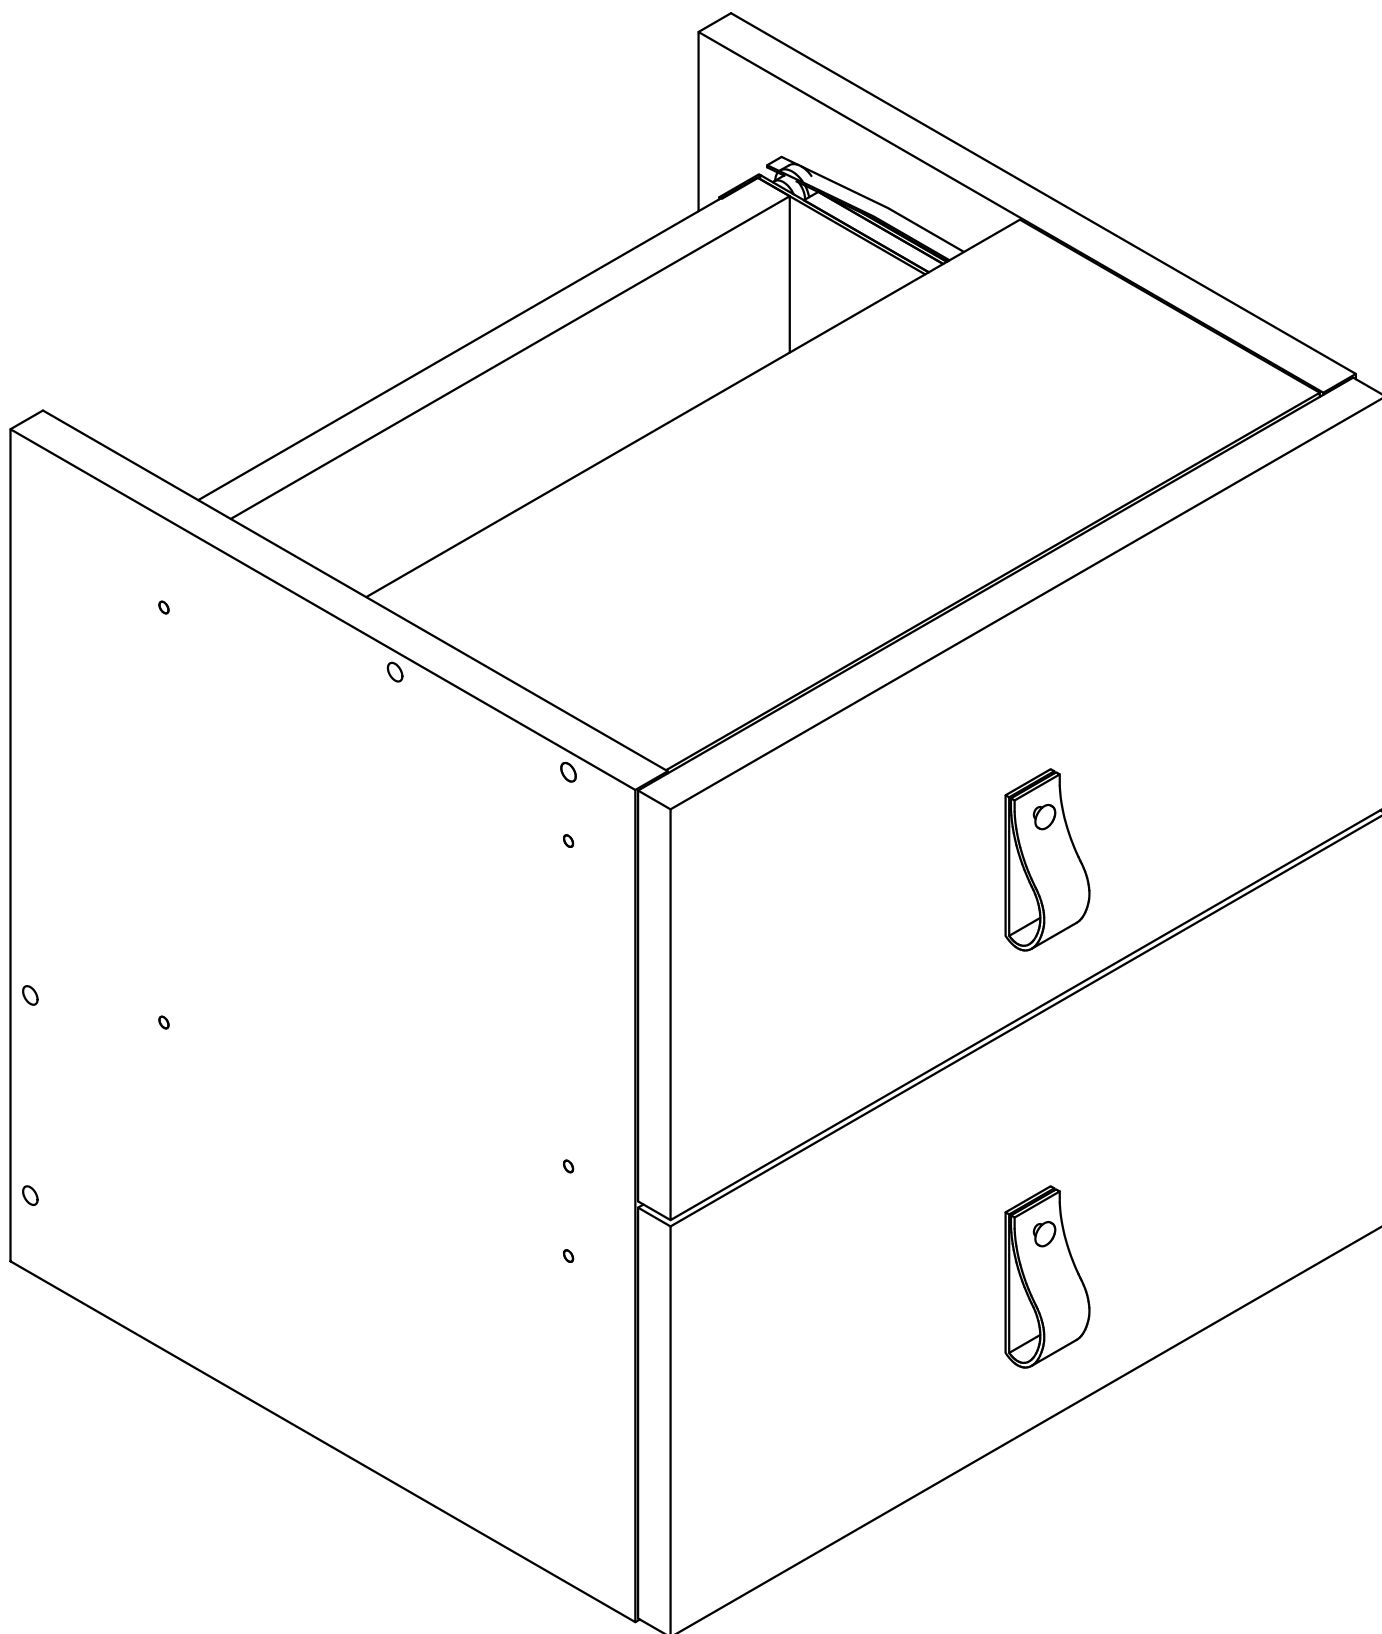




Please check that you have all the components

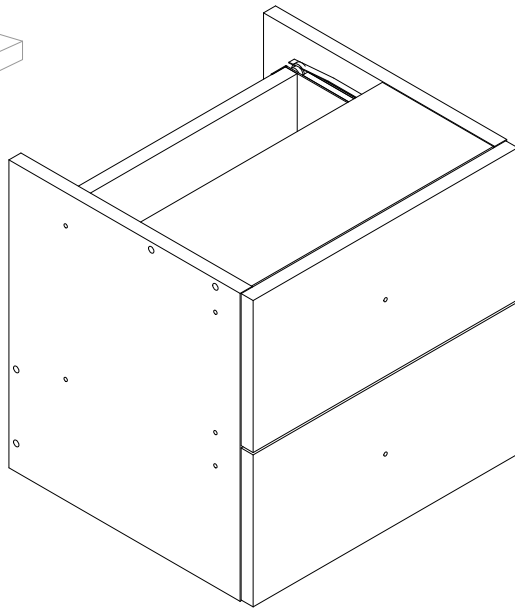


QUANTITY - 2




8 x 1  $\frac{1}{4}$  WOOD SCREW  
RM-SCR12

QUANTITY - 2

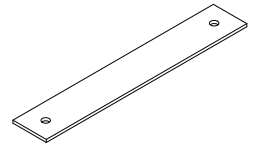

LEATHER STRAP HANDLE  
RM-HDL18

QUANTITY - 2

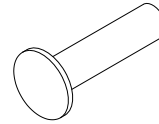

M4 x 20mm BOOK SCREW  
RM-SCR28


QUANTITY - 2



M4 x 6mm SLOTTED SCREW  
RM-SCR27


1

**Step 1**  
Remove the drawers from unit.

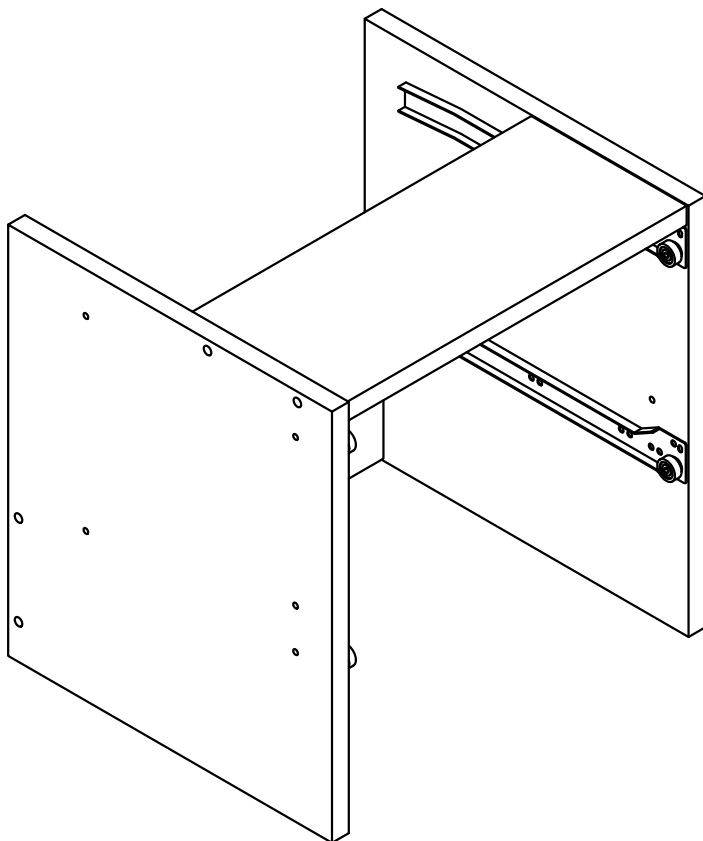

2

**Step 2**  
Insert cartridge into desired location and fix in place using wood screw into pre drilled holes both sides.

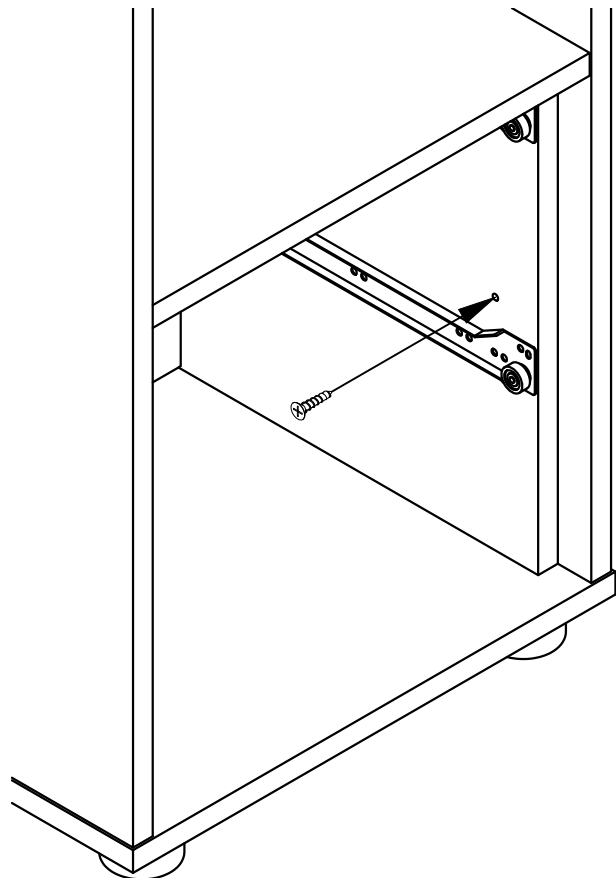

SCR12




Qty 2

3

**Step 3**  
**Attach leather handle to drawers using binding screws provided.**

**Slotted part of screw to the inside of drawer.**

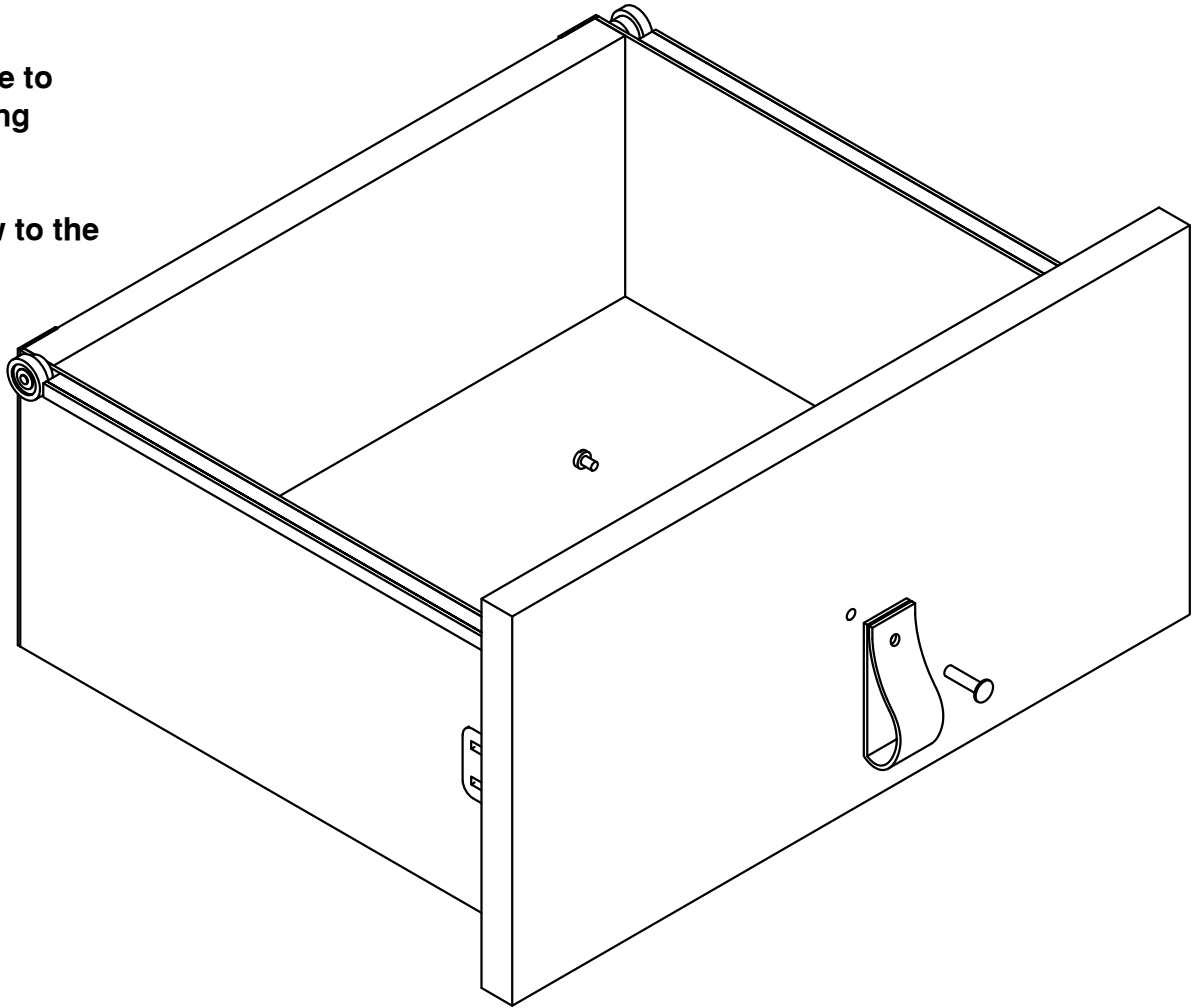

RM-HDL18



Qty 2

RM-SCR27



Qty 2


RM-SCR28



Qty 2

4

**Step 4**  
**Insert both drawer boxes back into the cartridge unit.**

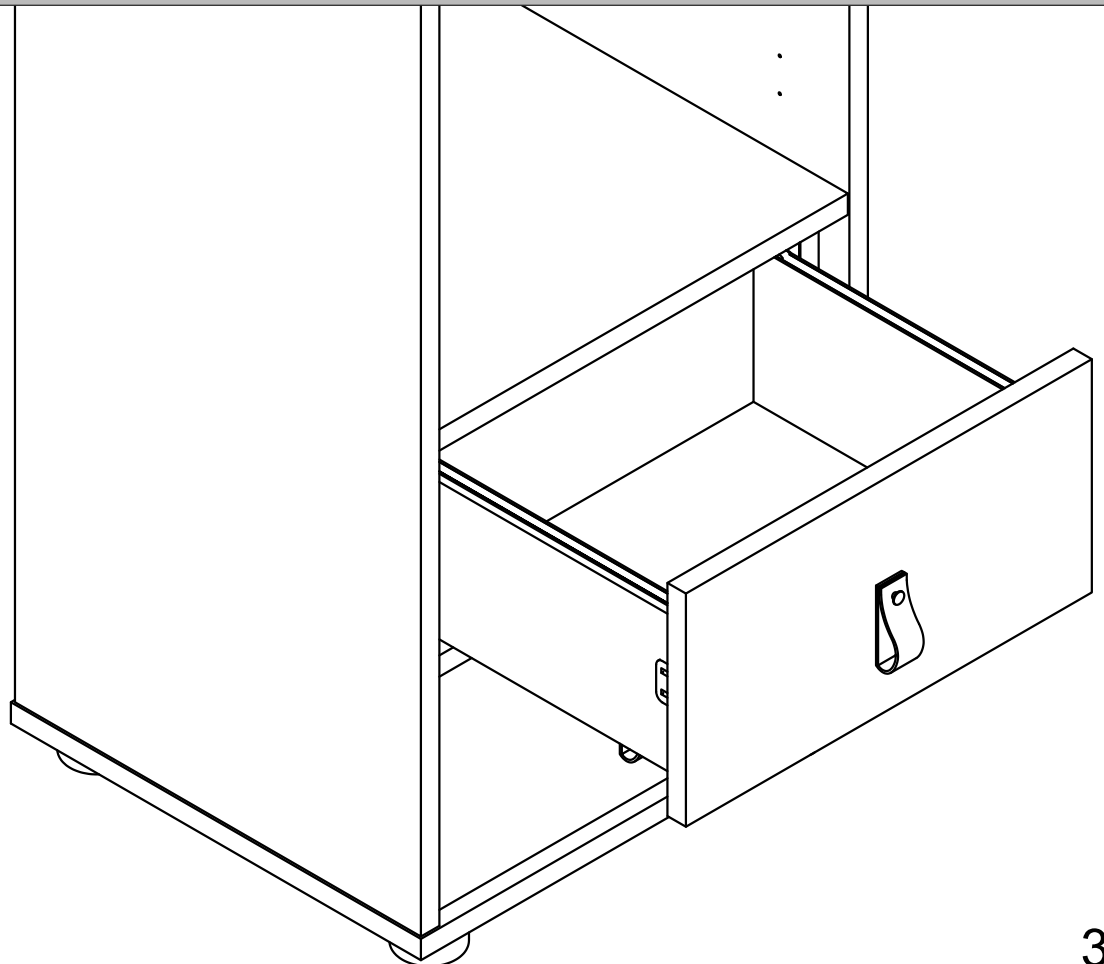



5

**Step 5**  
**Cartridge in position.**

