



Sweeper Mop Assembly Instructions

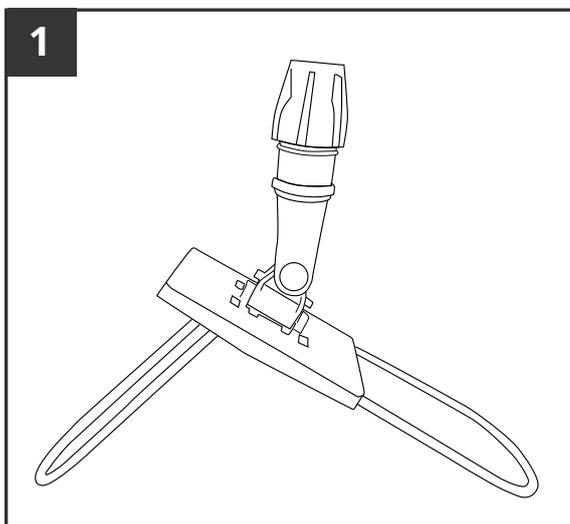


Step 1: Break frame by squeezing one side of the frame to release.



Step 2: Insert unbroken side of frame into a mop pocket.

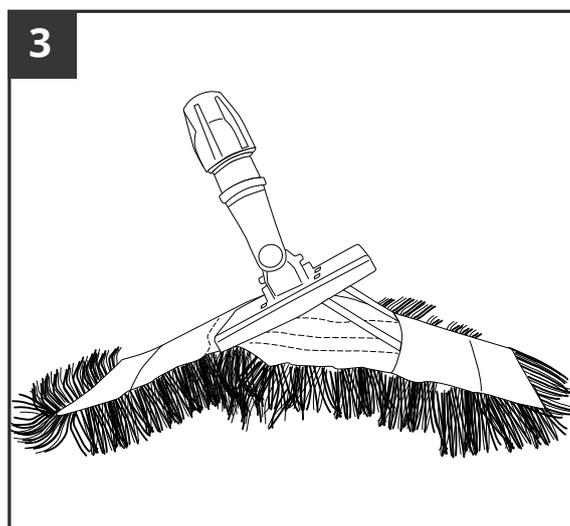

Step 3: Insert broken side of frame into opposite pocket.

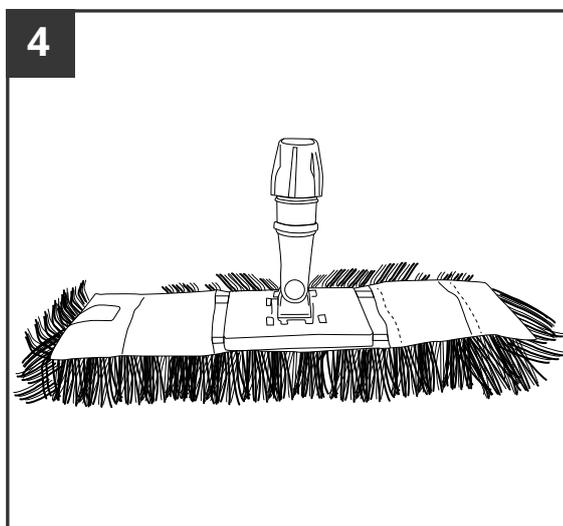

Step 4: Place frame flat on a hard surface and press down from the socket until it clicks into secured position.