






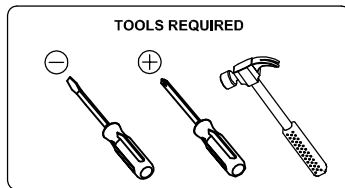


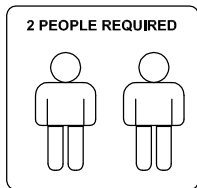

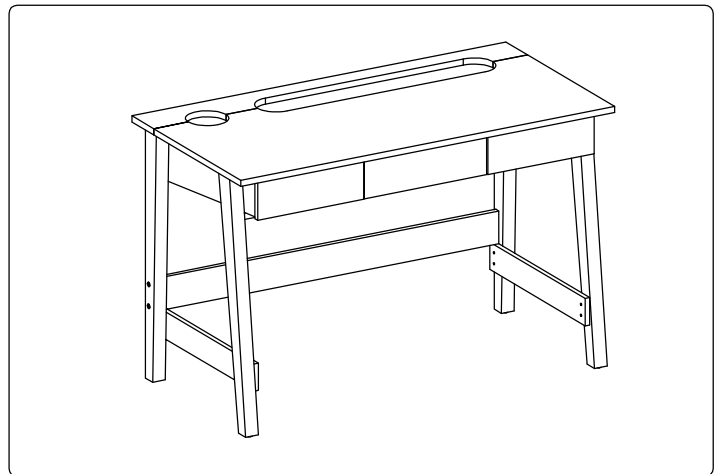

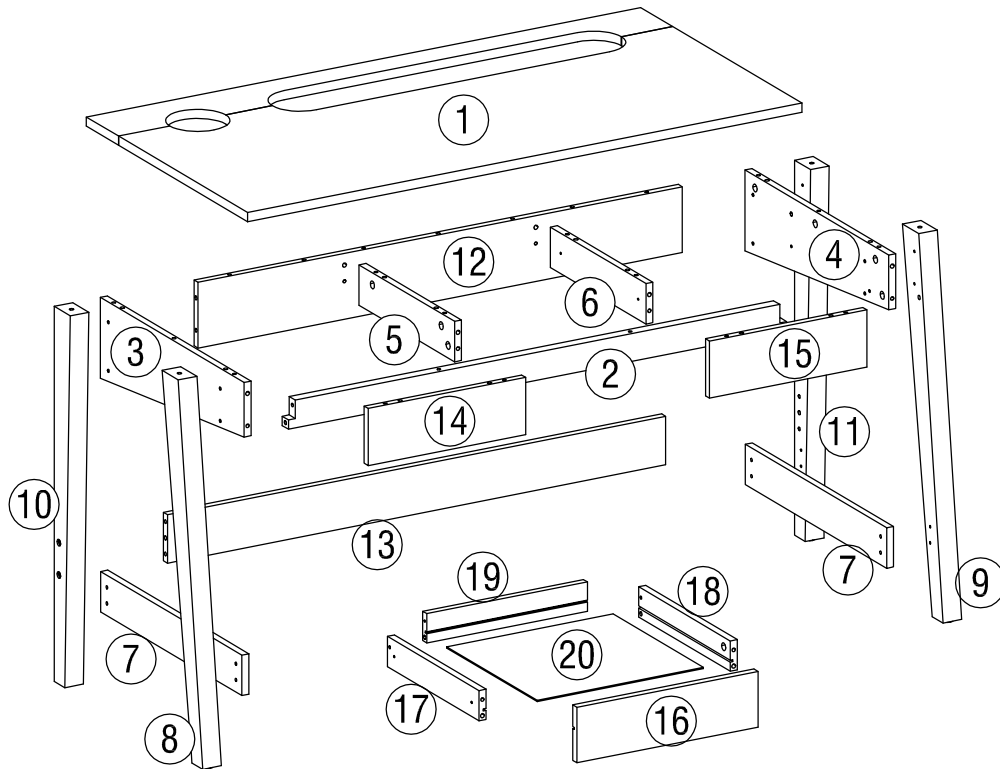


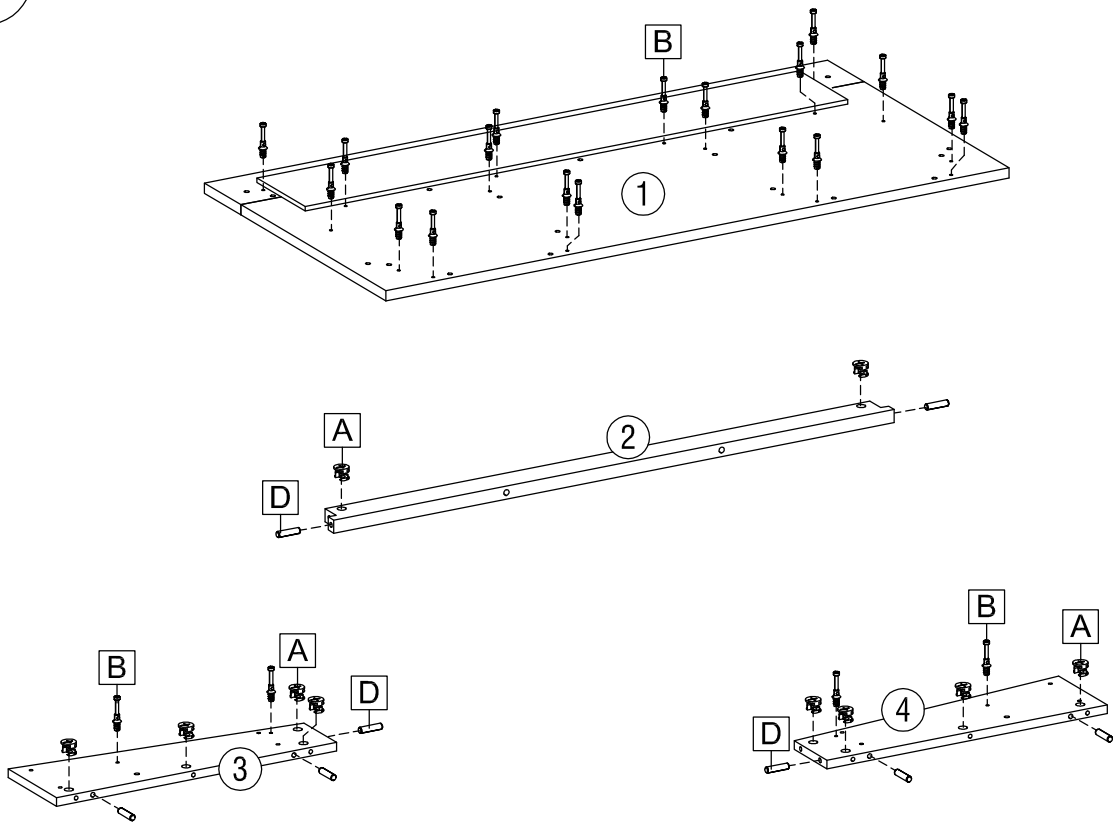
## ITHACA DESK RIVIERA OAK EFFECT




### SPARE PART

A  28X	B  28X	C  32X	D  35X	E  2X	F  20X	G  4X
H  4X	I  1X	J  1set	K  8X			





1







2

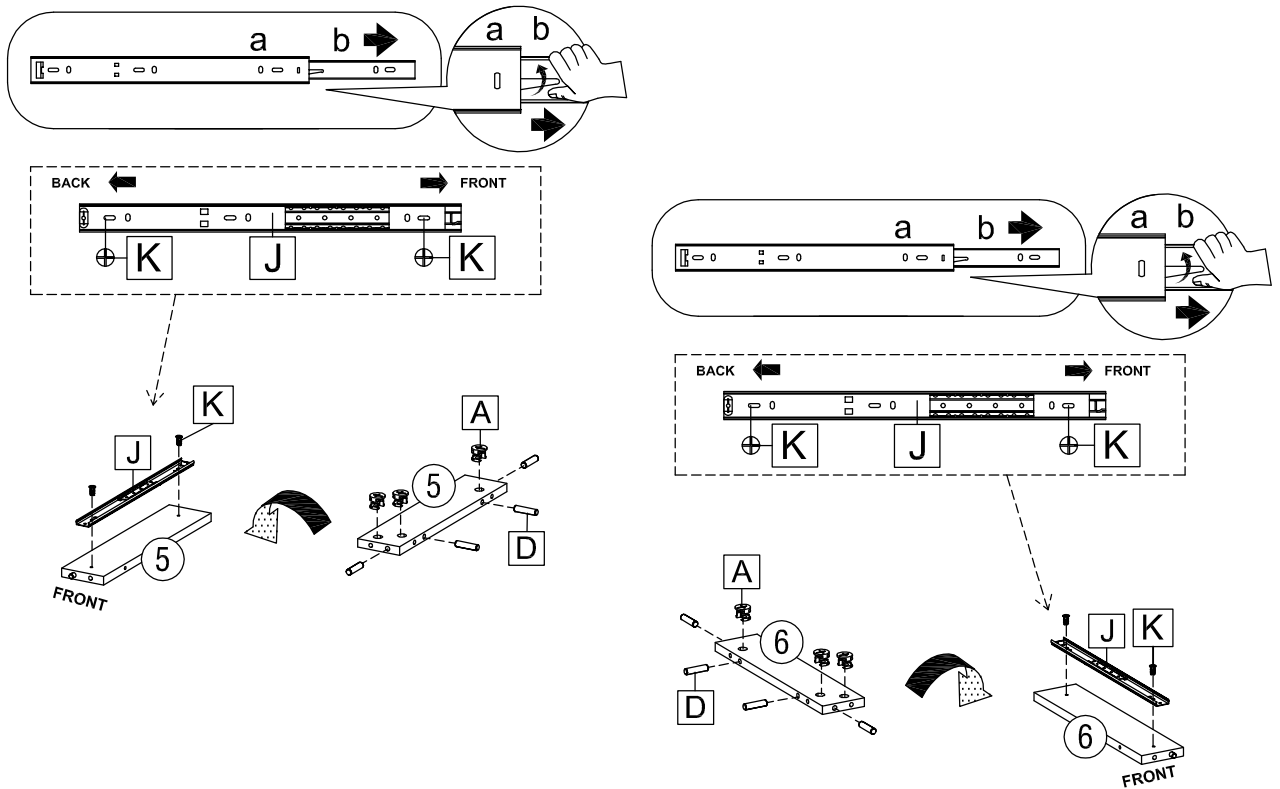



3

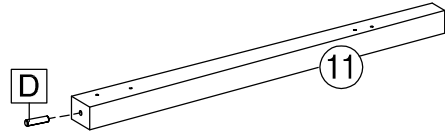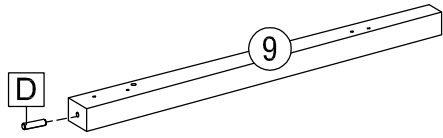


4

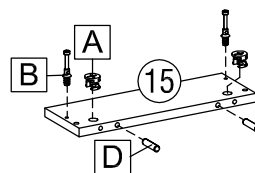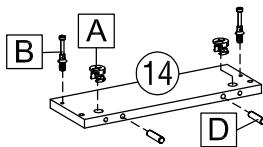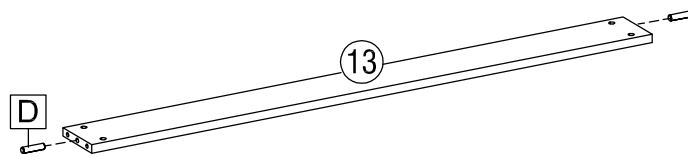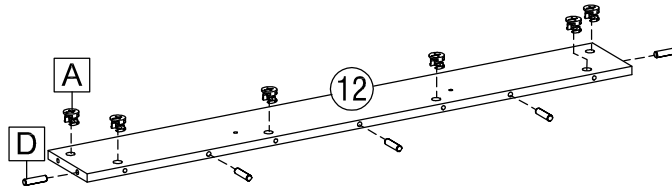


5

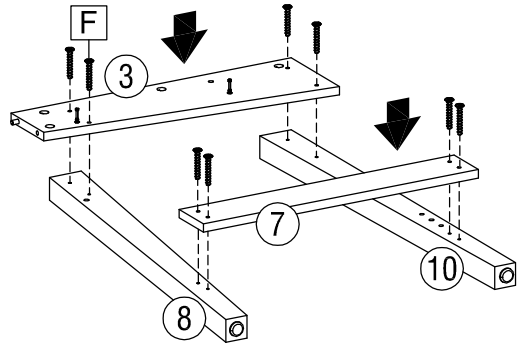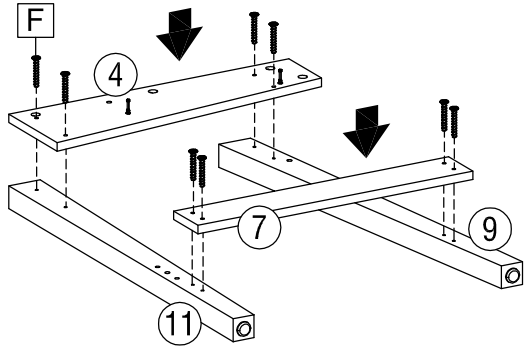


6

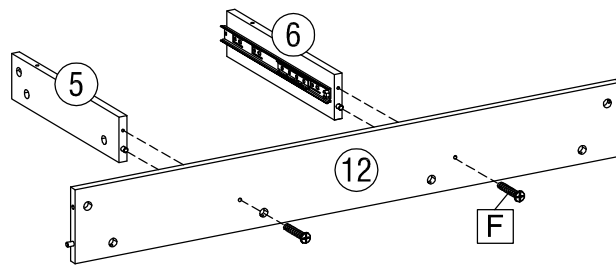


7

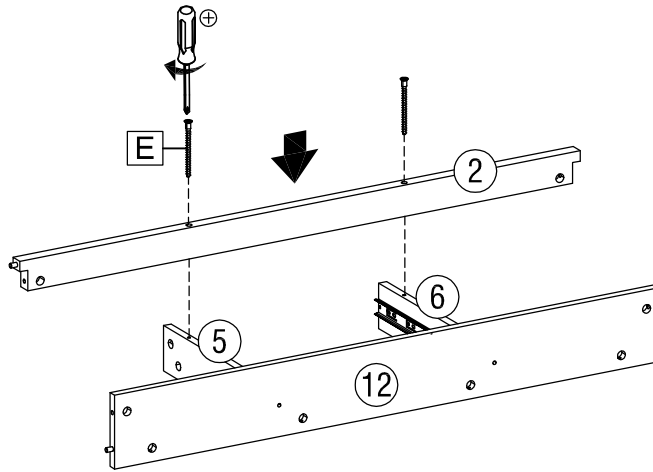


8

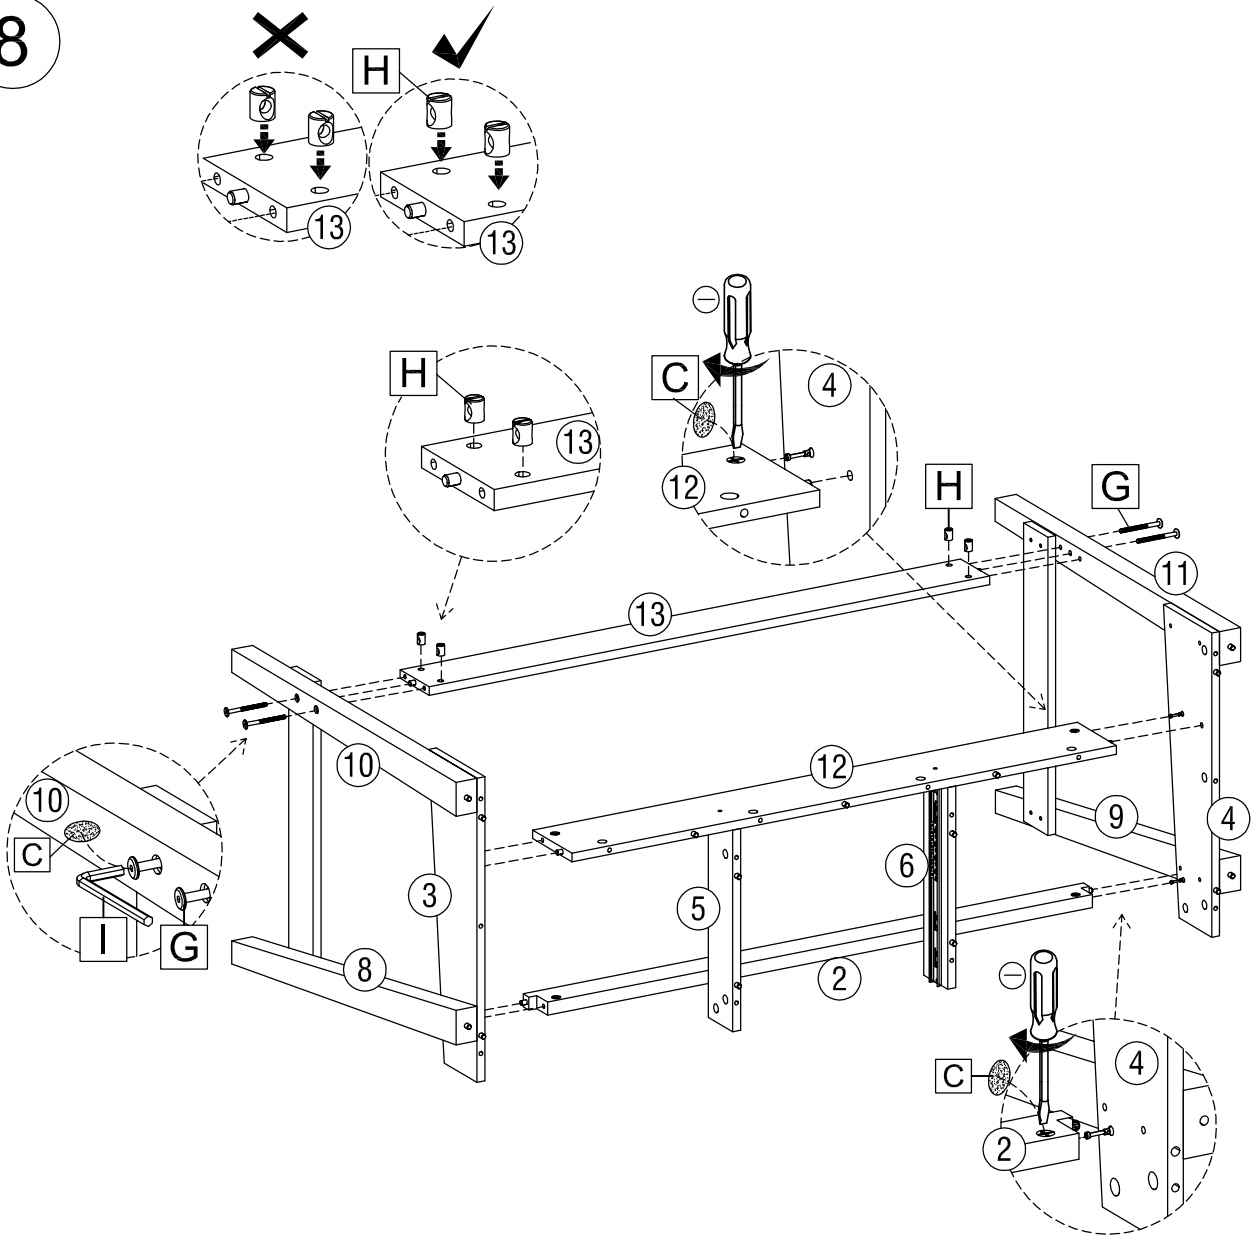


9

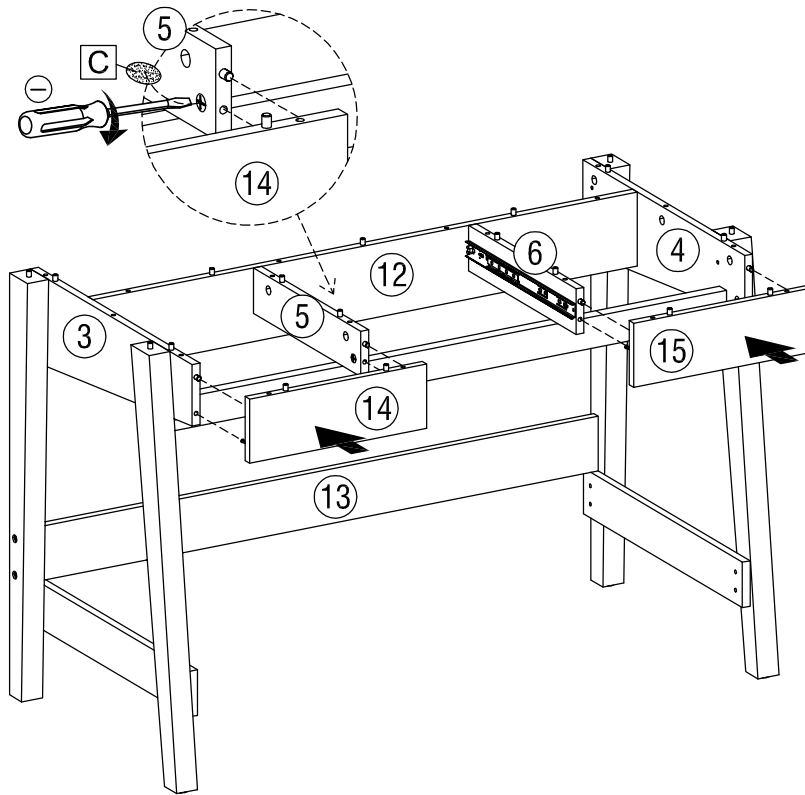


10

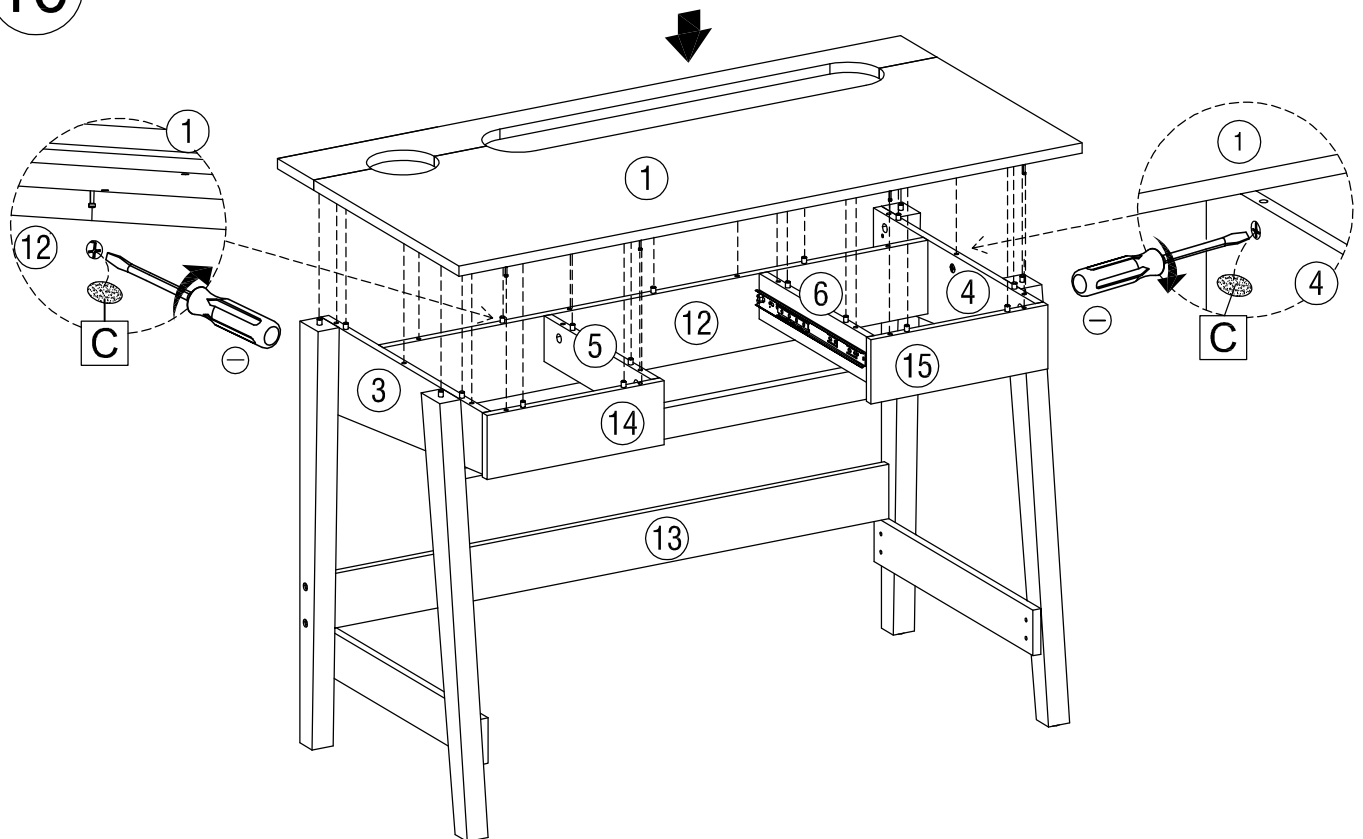


11

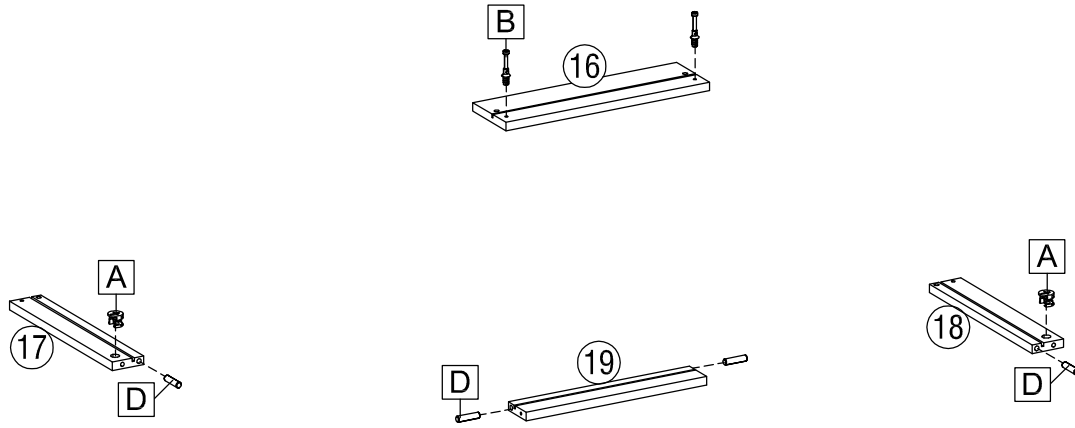


12

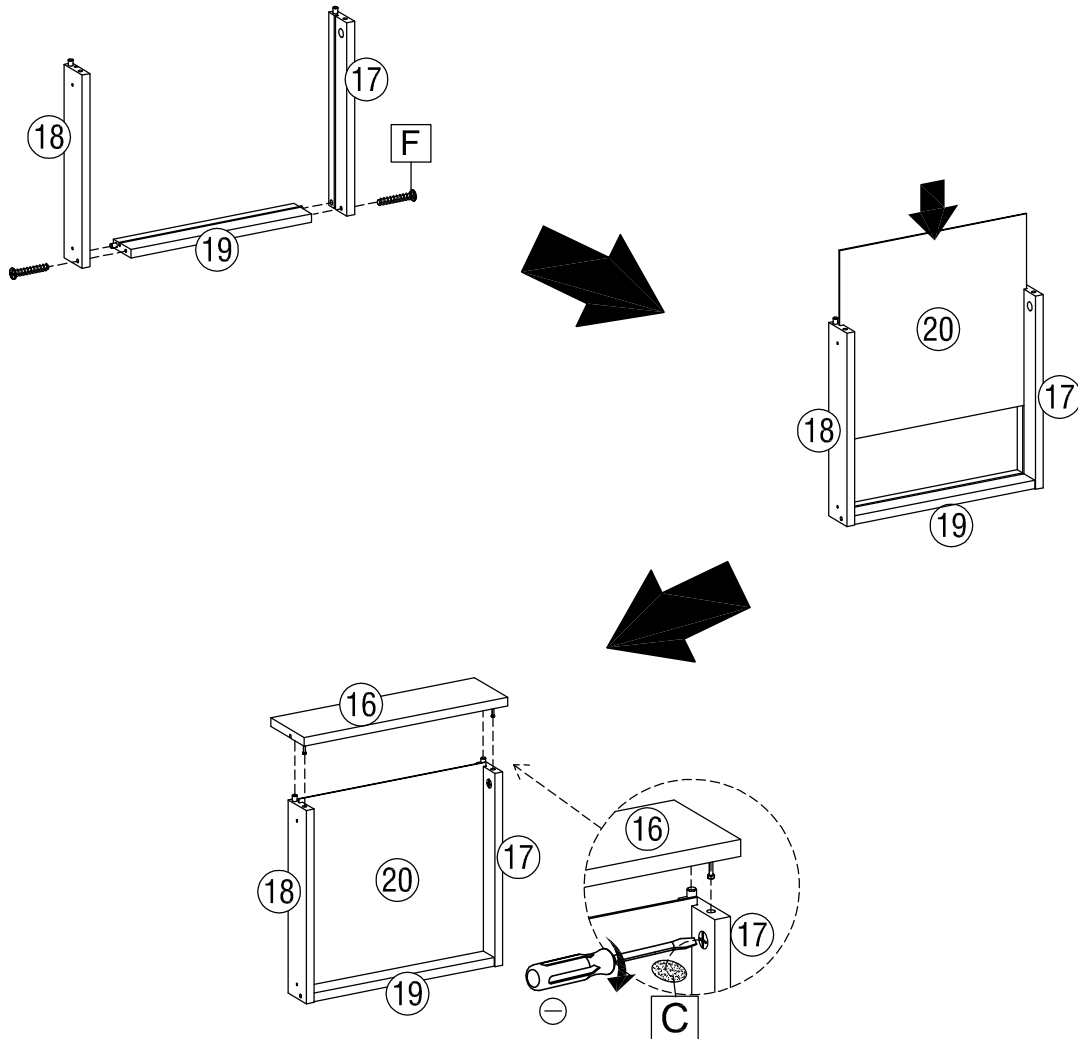

13

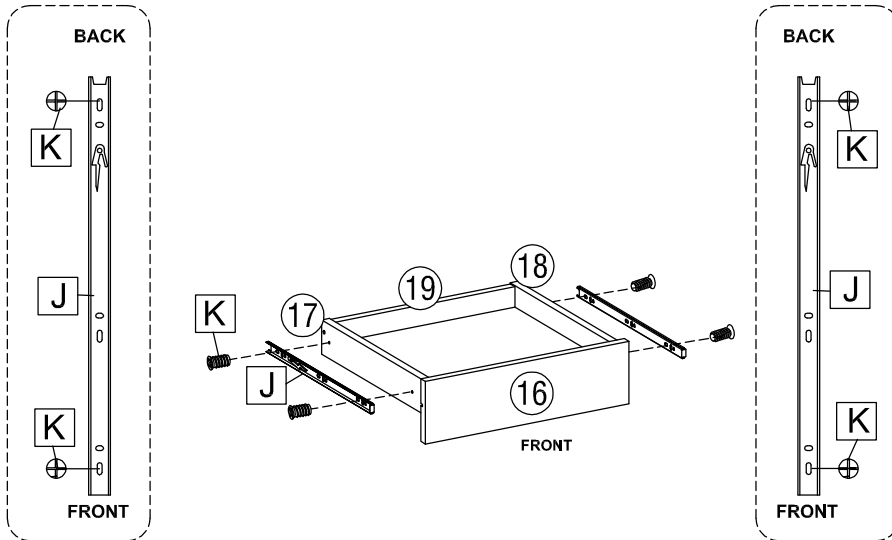

14

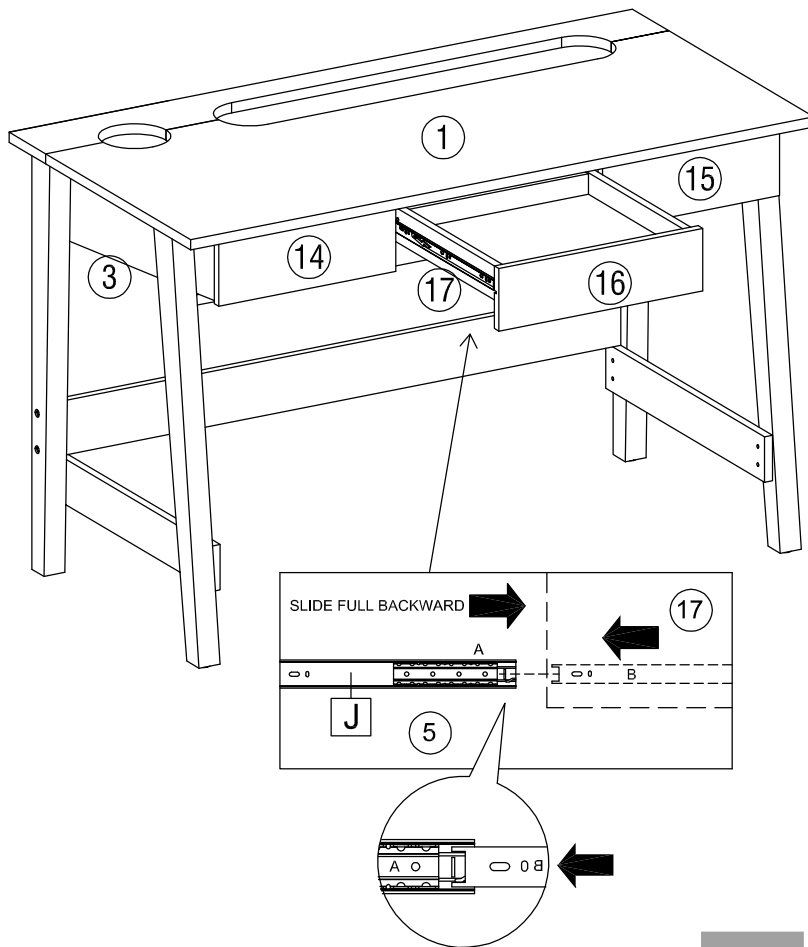

Teknik